

GEHL®

Model 153

Compact Excavator

Beginning Serial Number: AB00440

Form No.
918035
Revision E
May 2009

Parts Manual



INTRODUCTION

When ordering service parts, specify the correct part number, full description, quantity required, the unit model number and serial number. For your safety and continued proper operation, use only genuine GEHL service parts.

The model and serial number for this unit are on a tag located on a panel on the front of the cab.

"Right" and "left" are determined from a position sitting on the operator's seat and facing forward.

GEHL Company reserves the right to make changes or improvements in the design or construction of any part of the unit without incurring the obligation to install such changes on any previously delivered units.

Refer to the abbreviations table located on this page for special parts descriptions. Standard attaching hardware torque values are also provided near the back of this manual. Metric torque values shown in the illustrations are in Newton-meters and are converted to foot-pounds by multiplying by 0.738.

Specific reference numbers, indicating a complete assembly, are circled in some illustrations. A small bag, pictured in some illustrations, indicates a seal kit (seals, o-rings, etc.). In the exploded view parts list, additional information may follow the Reference Number.

Serial number breaks are indicated as follows:

- (SN 999 and before) - indicates serial numbers up to and including 999.
- (SN 1000 - 2000) - indicates serial numbers between 1000 and 2000.
- (SN 999 and up) - indicates serial numbers including 999 and after.

Serial number exceptions and inclusion are indicated as follows:

- (SN 999 and before except 997) - indicates serial numbers up to and including 999, EXCEPT 997.
- (SN 1000 - 2000 except 1996 including 997) - indicates serial numbers between 1000 and 2000, INCLUDING 997 EXCEPT 1996.

- (SN 2001 and up including 1996) - indicates serial numbers including 2001 and after, INCLUDING 1996.

Unless otherwise specified, all cap screws nuts, and bolts are Grade 8.8, cadmium or zinc plated.

NOTE: *The following abbreviations may be used herein:*

ASSD	Assembled
ASY	Assembly
ASSY	Assembly
AR	As Required
CB	Carriage Bolt
CP	Cotter Pin
CS	Cap Screw (Hexagon Head)
CYL	Cylinder
DIA	Diameter
FHCS	Flat Head Cap Screw
GR	Grade
HB	Hex Bolt
HLN	Hex Lock Nut
HN	Hex Nut
HP	High Pressure
HYD	Hydraulic
INS	Insert
LH	Left Hand
LN	Lock Nut
LT	Left
LW	Lock Washer
M	Meter or Meters
MM/mm	Millimeter
NPT	National Pipe Thread
NSS	Not Sold Separately
RH	Right Hand
RT	Right
SHCS	Socket Head Cap Screw
SLTD	Slotted
SN	Serial Number or Slotted Nut
SQ	Square
W/	With

TABLE OF CONTENTS

Introduction.....	Inside Front Cover
Decal Locations	5
Filters, Gaskets and Seals	9
Diesel Engine	
(SN AE00001 and up)	10
(SN AC00304-AD041941)	11
(SN AC00303 and before)	12
Seal Kit	
(SN AC00304-AD04191).....	13
(SN AC00303 and before)	14
Engine Mounts	
(SN AE00001 and up)	15
(SN AC00304-AD04191)	16
(SN AC00303 and before)	17
Cylinder Head, Valve Cover	
(SN AE00001 and up)	18
(SN AC00304-AD04191)	19
(SN AC00303 and before)	20
Intake Manifold	
(SN AC00304-AD04191).....	21
(SN AC00303 and before)	22
Exhaust Manifold	
(SN AC00304-AD04191).....	23
(SN AC00303 and before)	24
Cylinder Block	
(SN AE00001 and up)	25
(SN AC00304-AD04191)	26
(SN AC00303 and before)	27
Seal, Crankshaft	
(SN AE00001 and up)	28
(SN AC00304-AD04191)	29
(SN AC00303 and before)	30
Oil Pan	
(SN AE00001 and up)	31
(SN AC00304-AD04191)	32
(SN AC00303 and before)	33
Camshaft	
(SN AE00001 and up)	34
(SN AC00304-AD04191)	35
(SN AC00303 and before)	36
Crankshaft, Piston	
(SN AE00001 and up)	37
(SN AC00304-AD04191)	38
(SN AC00303 and before)	39
Lubrication	
(SN AE00001 and up)	40
(SN AC00304-AD04191)	41
(SN AC00303 and before)	42
Cooling System	
(SN AE00001 and up)	43
(SN AC00304-AD04191)	44
(SN AC00303 and before)	45
Fuel Injection System	
(SN AE00001 and up)	46
(SN AC00304-AD04191)	47
(SN AC00303 and before)	48
Fuel Injection Pump	
(SN AD04191 and before).....	49
Air Intake System	
(SN AE00001 and up)	50
(SN AC00454-AD04191).....	51
(SN AC00304-AD00453).....	52
(SN AC00303 and before)	53
Exhaust System	
(SN AE00001 and up)	54
(SN AC00304-AD04191)	55
(SN AC00303 and before)	56
Diesel Tank	
(SN AE00001 and up)	57
(SN AD01243-AD04191).....	58
(SN AC01611-AD01242).....	59
(SN AC01610 and before)	60
Fuel System	
(SN AE00001 and up)	61
(SN AD04191 and before)	62
Throttle Lever	
(SN AE00001 and up)	63
(SN AD04191 and before)	64
Hydraulic Pump Drive	
(SN AF03764 and up).....	65
(SN AE00001-AF03763).....	66
(SN AC00304-AD04191)	67
(SN AC00303 and before)	68
Radiator	
(SN AE00001 and up)	69
(SN AC00615-AD04191)	70
(SN AC00304-AC00614)	71
(SN AC00303 and before)	72
Oil Cooler	
(SN AC01884 and up)	73
(SN AC01883 and before)	74

TABLE OF CONTENTS

Oil Cooler Installation	
(SN AC01884 and up)	75
(SN AC01883 and before)	76
Turntable Drive Unit Installation	
(SN AD00454 and up)	77
(SN AD00453 and before)	78
Turntable Drive Unit.....	79
Travel Gear Installation	
(SN AD00454 and up)	80
(SN AD00453 and before)	81
Drive Motor	
(SN AE00001 and up)	82
(SN AD04191 and before)	83
Hydraulic Tank	
(SN AF01067 and up).....	84
(SN AD00454-AF01066)	85
(SN AD00453 and before)	86
Hydraulic Pump	
(SN AD00454 and up)	87
(SN AD00453 and before)	88
Control Valve 1	
(SN AD00454 and up)	89
(SN AD00453 and before)	90
Control Valve 2.....	91
Swivel Joint	92
Joystick	
(SN AF00798 and up).....	93
(SN AE00001-AF00797).....	94
(SN AD00454-AD04191).....	95
(SN AD00453 and before)	96
Pilot Valve, Travel	
(SN AD00454 and up)	97
(SN AC01499-AD00453).....	98
(SN AC01498 and before)	99
Reversing Valve.....	100
ISO/SAE Valve	
(SN AD00454 and up)	101
(SN AD00453 and before)	102
Hydraulic Pump Installation	
(SN AD00454 and up)	103
(SN AD00453 and before)	104
Joystick Hydraulics Installation, Left	
(SN AD004564 and up)	105
Joystick Hydraulics Installation, Right	
(SN AD00454 and up)	106
Joystick Hydraulic Installation	
(SN AD00453 and before)	107
Travel Valve Installation	
(SN AD00454 and up)	108
(SN AD00453 and before)	109
Dozer Blade Valve (double)	
Dozer Blade Valve (double)	
Disassembled	111
Hydraulic Block	
(SN AD00453 and before)	112
Boom Cylinder Installation	
(SN AD00454 and up)	113
Boom Cylinder.....	114
Dipper Arm Cylinder Installation	
(SN AD00454 and up)	115
Boom Hyd. Installation-Short Dipper Arm	
(SN AD00453 and before)	116
Dipper Arm Cylinder	117
Boom Hyd. Installation-Long Dipper Arm	
(option) (SN AD00453 and before)	118
Bucket Cylinder Installation	
(SN AD00454 and up)	119
Bucket Cylinder	120
Boom Offset Cylinder Installation	
(SN AD00454 and up)	121
(SN AC01881-AD00453).....	122
(SN AC01799 and before)	123
Boom Offset Cylinder	
(SN AD00454 and up)	124
(SN AC01800-AD00453).....	125
(SN AC01799 and before)	126
Dozer Blade Cylinder Installation	127
Blade Cylinder	128
Telescopic Cylinder Installation	129
Telescopic Cylinder	130
Auxiliary Hydraulics	
(SN AD00454 and up)	131
(SN AD00453 and before)	132
Auxiliary Function Installation	
(SN AD00454 and up)	133
Battery	
(SN AE00001 and up).....	134
(SN AD00454-AD04191).....	135
(SN AD00453 and before)	136
Dashboard	
(SN AE00001 and up).....	137
(SN AC01876-AD04191).....	138
(SN AC01875 and before)	139
Radio (option)	140

TABLE OF CONTENTS

Relay Box	
(SN AE00001 and up)	141
(SN AD04191 and before)	142
Horn	143
Work Light.....	144
Cab Work Light (option)	145
Chassis Wire Harness	
(SN AC01876 and up)	146
(SN AC01875 and before)	147
Engine Wire Harness	
(SN AE00001 and up)	148
(SN AC01876-AD04191).....	149
(SN AC01875 and before)	150
Armrest Wire Harness	
(SN AE00001 and up)	151
(SN AC01876 and up)	152
(AC01875 and before)	153
Rubber Track	
(SN AE00001 and up)	154
Undercarriage, Rubber Track	
(SN AE00001 and up)	155
Undercarriage and Rubber Track	
(SN AD00454-AD04191).....	156
(SN AD00453 and before).....	157
Track Tension, Rubber Track	158
Dozer Blade	
(SN AD00454 and up)	159
(SN AD00453 and before)	160
Dozer Blade Extensions.....	161
Chassis	
(SN AE00001 and up)	162
(SN AD00454-AD04191).....	163
(SN AD00453 and before)	164
Lubrication	
(SN AD00454 and up)	165
(SN AD00453 and before)	166
Counterweight	
(SN AF00243 and up).....	167
(SN AE00001-AF00242).....	168
(SN AD00454-AD04191).....	169
(SN AD00453 and before)	170
Hood	
(SN AD00454 and up)	171
(SN AD00453 and before)	172
Side Panels	
(SN AF00152 and up).....	174
(SN AD00454-AF00151)	175
Side Panels/Seat Console/Console Covers	
(SN AC01477-AD00453).....	176
(SN AC01476 and before)	178
Seat Console	
(SN AD00454 and up)	180
Isolation Mats	
(SN AF00152 and up).....	181
(SN AC01477-AF00151).....	182
(SN AC01476 and before)	183
Chassis Cover	
(SN AE00001 and up)	184
(SN AD04191 and before)	185
Seat Console Cover	
(SN AD00454 and up)	186
Lifting Boom	187
Dipper Arm Short	
(SN AD00454 and up)	188
(SN AD00453 and before).....	189
Dipper Arm Long (option)	
(SN AD00454 and up)	190
(SN AD00453 and before).....	191
Connecting Link	192
Cabin Frame	
(SN AD00454 and up)	193
(SN AD00453 and before; cab SN 42289 and up)	194
(SN AD00453 and before; cab SN 42288 and before)	195
Canopy Frame	
(SN AD00454 and up)	196
(SN AD00453 and before).....	197
Covers	
(SN AD00454 and up)	198
(SN AD00453 and before; cab SN 42289 and up)	199
(SN AD00453 and before; cab SN 42288 and before)	200
Cabin Harnesses.....	201
Front Window	
(SN AE00001 and up)	202
(SN AD04191 and before).....	203
Cabin Windows	204
Cabin Doors	
(SN AD00454 and up)	205
(SN AD00453 and before; cab SN 42289 and up)	206
(SN AD00453 and before; cab SN 42288 and before)	207

TABLE OF CONTENTS

Rotating Beacon (option).....	208
Mirror (option).....	209
Operator's Seat	
(SN AE00001 and up)	210
(SN AD04010-AD04191).....	212
(SN AD00454-AD04009).....	214
(SN AC01876-AD00453).....	216
(SN AC01875 and before)	217
Heater	
(SN AE00001 and up)	218
(SN AD00454-AD04191).....	219
(SN AC00304-AD00453).....	220
(SN AC00303 and before)	221
Tool Kit.....	222
Index	223
Numerical Index	225

DECAL LOCATIONS

GENERAL INFORMATION

Decal location information is provided to assist in the proper selection and application of new decals, in the event the original decals become damaged or the machine is repainted. The listing includes decal illustration reference number, part number, description and quantity information. Refer to the illustrations for appropriate replacement locations.

To ensure proper selection of the correct replacement decals, compare all of the various closeup location drawings to the machine before starting to refinish the unit. Then circle each decal shown (applicable to the machine) while checking off its part number in the listing. After verifying all the decals needed for replacement, place any extra unnecessary decals aside for disposal.

NOTE: Refer to the *SAFETY chapter of the Operator's Manual for the specific information provided on all of the various safety decals furnished in the decal kit(s).*

NEW DECAL APPLICATION

If there is a decal on a part that is to be replaced, be sure that the decal is applied to the replacement part. Surfaces MUST be free from dirt, dust, grease and other foreign material before applying the new decal. To apply, remove the smaller portion of the decal backing paper and apply this part of the exposed adhesive backing to the clean surface while maintaining proper position and alignment. Peel the other portion of the backing paper off slowly while applying hand pressure to smooth out the decal surface.



CAUTION

ALWAYS follow safety precautions on decals. Replace the decals if they are damaged, or if the unit is repainted. If repainting, BE SURE all applicable decals are affixed to the machine.

PAINT NOTICE







Use this list to order paint for refinishing:

167788	4 qts. Construction Yellow (GEHL)
167780	4 qts. Light Gray (GEHL)
167774	4 qts. Dark Gray (GEHL)
167789	6 (12.8 oz. Spray Cans) Yellow (GEHL)
167775	6 (12.8 oz. Spray Cans) Dark Gray (GEHL)
167781	6 (12.8 oz. Spray Cans) Light Gray (GEHL)



The decal kit for the model 153 Compact Excavator is listed below:

Ref. No.	Part No.	Description & Quantity
	165991	Kit/Decal GE153
1	161965	Decal/Diesel Fuel
2	161966	Decal/Hydraulic Oil
3	161967	Decal/Lubrication
4	161969	Decal/Warning Hyd Reservoir
5	161970	Decal/Arrow (2 places)
6	161981	Decal/Lift Point (4 places)
7	161982	Decal/Tiedown Point (4 places)
8	161985	Decal/Warning Keep Away (2 places)
9	161986	Decal/Warning Read Manual
10	161987	Decal/Warning Rotating Fan
11	162449	Decal/Dozer Blade Up-Down
12	162450	Decal/Travel Left
13	162451	Decal/Travel Right
14	162452	Decal/Joystick Control Right
15	162453	Decal/Joystick Control Left
16	203793	Decal/Lifting Capacity
17	163973	Decal/Warning Mandatory Shutdown
18	163974	Decal/Throttle Speed
19	163975	Decal/Warning Avoid Injury (2 places)
20	163976	Decal/Warning Avoid Injury
21	163977	Decal/Warning Entanglement Hazard
22	163978	Decal/Warning Hot Surface
24	164854	Decal/Warning Avoid Injury
25	9705282G	Decal/Track Spread
26	9705366G	Decal/Heater (SN AD00453 and Before)
27	9705488G	Decal/Swing Lock
28	9705489G	Decal/Return Flow Control
29	9705501G	Decal/ISO-SAE Valve
30	9705502G	Decal/ROPS-FOPS
31	9705523G	Decal/Cabin Support
32	183935	Decal/Gehl 5.50 x 23.34
33	183963	Decal/Gehl 3.75 x 15.92
34	170176	Decal/153 (2 places)
35	104833	Decal/ Gehl 2.00 x 8.49 (white)
36	206032	Decal/Reflector (2 places)
37	164853	Decal/Engine Compartment Latch (SN AD00453 and Before)

DECAL LOCATIONS

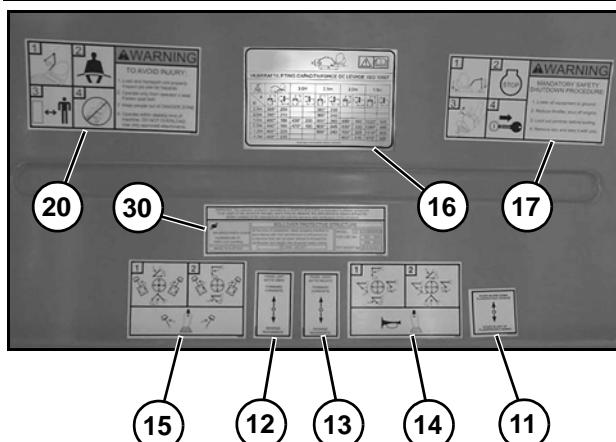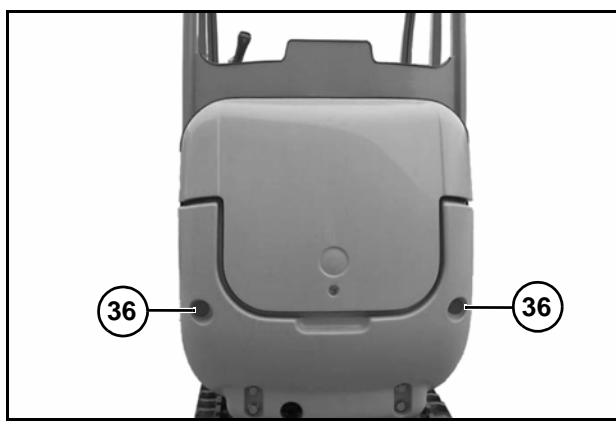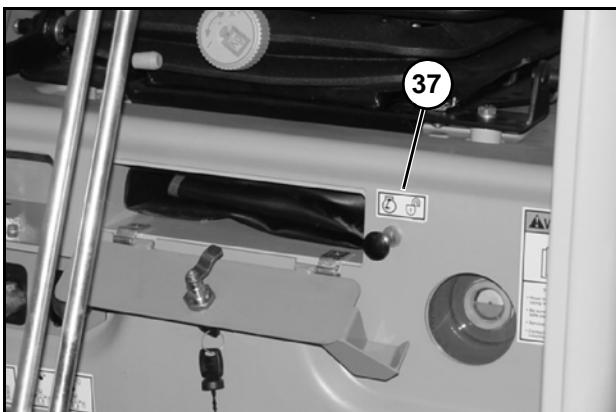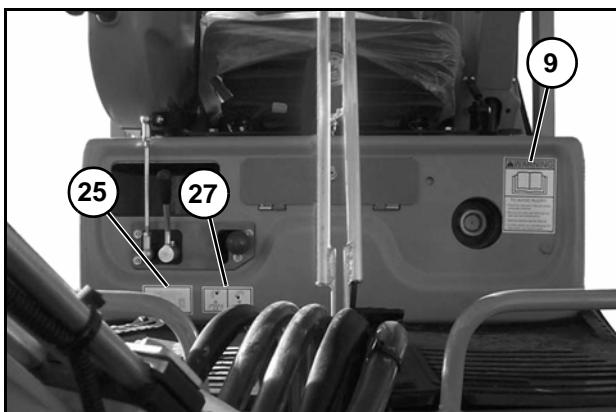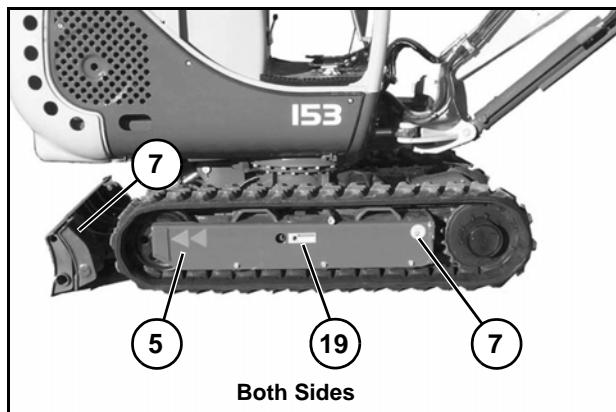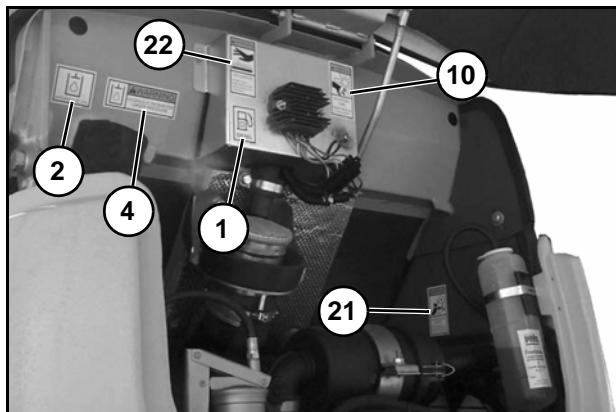

DECAL LOCATIONS

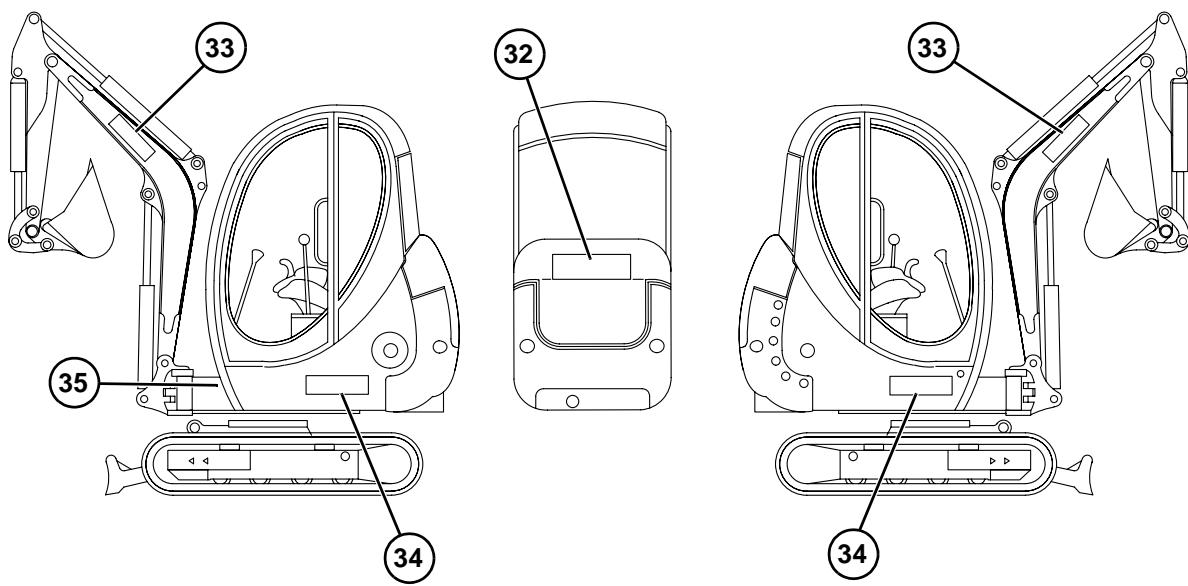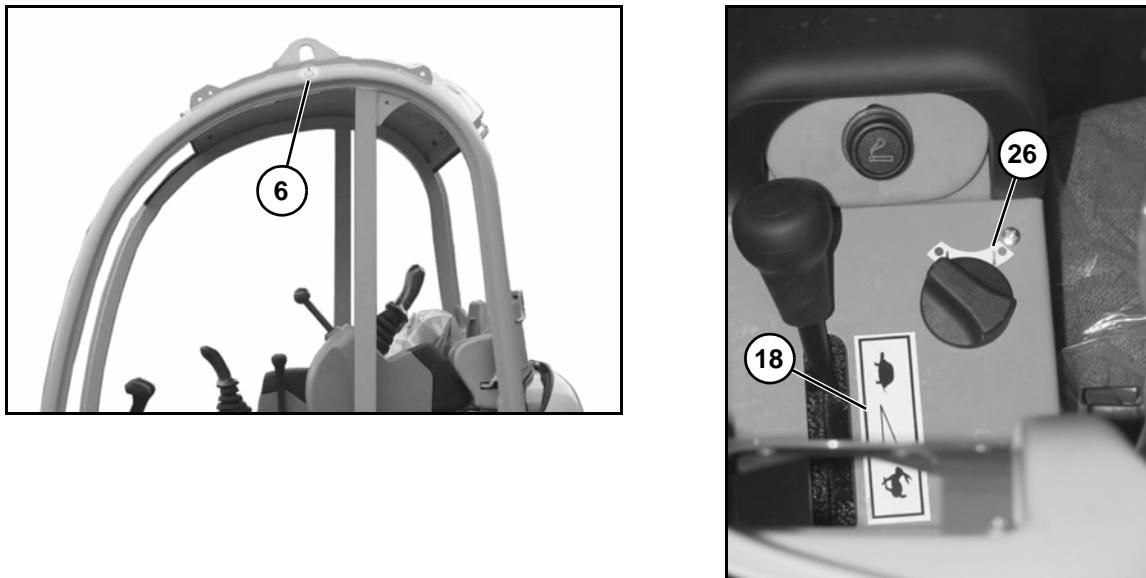

NOTES

Thanks for your reading.
Please click here to download complete manual
instantly.
And can also choose other manuals.

Feel free --->write to me with any questions.
Our service email:
manuals007@hotmail.com