

Form No.
907146
Replaces
906672

2340/2360

Disc Mower Conditioner



PARTS MANUAL

GEHL® AGRICULTURE

Introduction

When ordering service parts, specify the correct part number, full description, quantity required, the unit model number and serial number.

The Disc Conditioner model and serial number is on a plate located on the left side of the Main Frame near the Drawbar anchor point. “Right” and “Left” are determined from a position standing behind the Disc Conditioner. From this position the Drawbar is on the left.

GEHL® Company reserves the right to make changes or improvements in the design or construction of any part of the unit without incurring the obligation to install such changes on any previously delivered units.

NOTE: *On original tire replacement, company policy prohibits the sale of replacement tires for all GEHL machinery. Replacement Wheel Sets are available and tire size information is called out with the Wheel Sets to facilitate replacement tire selection. ALL REPLACEMENT TIRES MUST BE PURCHASED LOCALLY.*

Refer to the abbreviations table located on this page for the various fastener descriptions. Standard attaching hardware torque values are also provided on the inside back cover.

In the exploded view parts list, Reference Numbers may have additional information following the Reference Number.

A Tear Drop symbol will indicate an application of a “wet” product such as oil, and the number inside the Tear Drop will correspond to the description in the Parts List.

Also, a number inside a hexagon will be the torque value required, in foot pounds, on the associated Reference Number. Items shown in the parts list that do not have Reference Numbers are shown for reference purposes only and are NOT available for purchase.

Unless otherwise specified, all Cap Screws or Bolts are Grade 5, cadmium or zinc plated; Hexagon Nuts for Grade 5 Screws or Bolts are Grade B; Hexagon Nuts for other Screws or Bolts are Grade A.

NOTE: *The following abbreviations may be used herein:*

AR	– As Required
ASSD	– Assembled
ASSY	– Assembly
CB	– Carriage Bolt
CCW	– Counterclockwise
CP	– Cotter Pin
CS	– Cap Screw (Hexagon Head)
CTR	– Center
CW	– Clockwise
DEG	– Degree
DIA	– Diameter
FCS	– Flanged Cap Screw
FHMS	– Flat Head Machine Screw
FL	– Flanged
FLN	– Flanged Lock Nut (Hexagon)
FLS	– Flanged Lock Screw (Hexagon)
FW	– Flat Washer
GA	– Gauge
GR	– Grade
HD	– Hard or Head
HN	– Hex Nut
INCL	– Includes
JT	– Joint
LG	– Large
LH	– Left Hand
LN	– Lock Nut
LW	– Lock Washer
M	– Metric
MM/mm	– Millimeter
NF	– National Fine
PB	– Plow Bolt
PTO	– Power Take Off
RH	– Right Hand
RHMS	– Round Head Machine Screw
RPM	– Revolutions Per Minute
RT	– Right
SERR	– Serrated
SHCS	– Socket Head Cap Screw
SHSS	– Socket Head Set Screw
SN	– Serial Number or Slotted Nut
SQ	– Square
T	– Tooth or Teeth
TFS	– Thread Forming Screw
THMS	– Truss Head Machine Screw
THRD	– Thread
WLDMT	– Weldment
#	– Number
	– Torque Required in foot pounds
	– Indicates a Fluid Application

TABLE OF CONTENTS

Introduction	Inside Front Cover
Table of Contents	1
Decal Locations	2-5
Drawbar & Tower Shields	6
Tower, Hitch & Hitchjack	7
Gearbox & Cutterbar Drive	8-9
DC2340 - Cutterbar & Discs	10-11
DC2360 - Cutterbar & Discs	12-13
Rollers & Lower Bearings	14-15
Left Top Roller Arm Assembly	16
Right Top Roller Arm Assembly	17
Left Conditioner Assembly	18-19
Right Conditioner Assembly	20
Roll Tension System	21
DC2340 - Cutterbar & Skid Shoes	22
DC2360 - Cutterbar & Skid Shoes	23
Right Trailer Assembly	24-25
Left Trailer Assembly & Lift Hydraulics	26-27
Drawbar Positioner Hydraulics	28
Header to Trailer Assembly	29
DC2340 - Forming Chamber	30
DC2360 - Forming Chamber	31
Deflector Assembly	32
Transmission Cover & Plug	33
Lift Spring Cover	34
Transmission Shield	35
Left Door Assembly	36
Right Door Assemblies	37
DC2340 - Debris Skirts	38
DC2360 - Debris Skirts	39
DC2340 - Center Cover	40
DC2360 - Center Cover	41
Driveline, Tractor to Tower (540 RPM)	42-43
Driveline, Tower to Gearbox (540 RPM)	44-45
Driveline, Tractor to Tower (1000 RPM)	46-47
Driveline, Tower to Gearbox (1000 RPM)	48-49
Overrunning Clutch (540 RPM)	50
Overrunning Clutch (1000 RPM)	51
DC2340 - Cutterbar	52-53
DC2360 - Cutterbar	54-55
Gearbox	56-57
Axles & Wheels	58
Hitchjack & Transport Lights	59
Hitch Extension Kit	60
Safety Chain	61
Alphabetical Index	62
Numerical Index	63-68
Standard Hardware Torque specifications	Inside Back Cover

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com