

Form No.
908048

Replaces
908005

2345/2365

Disc Mower Conditioner



PARTS MANUAL

GEHL® AGRICULTURE

Introduction

When ordering service parts, specify the correct part number, full description, quantity required, the unit model number and serial number.

The Disc Mower Conditioner model and serial number is on a plate located on the left side of the main frame near the Drawbar anchor point. “Right” and “left” are determined from a position standing behind the Disc Mower Conditioner. From this position the drawbar is on the left.

GEHL® Company reserves the right to make changes or improvements in the design or construction of any part of the unit without incurring the obligation to install such changes on any previously delivered units.

NOTE: *On original tire replacement, company policy prohibits the sale of replacement tires for all GEHL machinery. Replacement wheel sets are available and tire size information is called out with the wheel sets to facilitate replacement tire selection. ALL REPLACEMENT TIRES MUST BE PURCHASED LOCALLY.*

Refer to the abbreviations table located on this page for the various fastener descriptions. Standard attaching hardware torque values are also provided on the inside back cover.

In the exploded view parts list, Reference Numbers may have additional information following the Reference Number.

A tear drop symbol will indicate an application of a “wet” product such as oil, and the number inside the tear drop will correspond to the description in the Parts List.

Also, a number inside a hexagon will be the torque value required, in foot pounds, on the associated Reference Number. Items shown in the parts list that do not have Reference Numbers are shown for reference purposes only and are NOT available for purchase.

Unless otherwise specified, all cap screws or bolts are Grade 5, cadmium or zinc plated; hexagon nuts for Grade 5 cap screws or bolts are Grade B; hexagon nuts for other cap screws or bolts are Grade A.

NOTE: *The following abbreviations may be used herein:*

AR	– As Required
ASSD	– Assembled
ASSY	– Assembly
CB	– Carriage Bolt
CCW	– Counterclockwise
CP	– Cotter Pin
CS	– Cap Screw (Hexagon Head)
CTR	– Center
CW	– Clockwise
DEG	– Degree
DIA	– Diameter
FCS	– Flanged Cap Screw
FHMS	– Flat Head Machine Screw
FL	– Flanged
FLN	– Flanged Lock Nut (Hexagon)
FLS	– Flanged Lock Screw (Hexagon)
FW	– Flat Washer
GA	– Gauge
GR	– Grade
HD	– Hard or Head
HN	– Hex Nut
INCL	– Includes
JT	– Joint
LG	– Large
LH	– Left Hand
LN	– Lock Nut
LW	– Lock Washer
M	– Metric
MM/mm	– Millimeter
NF	– National Fine
PB	– Plow Bolt
PTO	– Power Take Off
RH	– Right Hand
RHMS	– Round Head Machine Screw
RPM	– Revolutions Per Minute
RT	– Right
SERR	– Serrated
SHCS	– Socket Head Cap Screw
SHSS	– Socket Head Set Screw
SN	– Serial Number or Slotted Nut
SQ	– Square
T	– Tooth or Teeth
TFS	– Thread Forming Screw
THMS	– Truss Head Machine Screw
THRD	– Thread
WLDMT	– Weldment
#	– Number
	– Torque Required in Foot-Pounds
	– Indicates a Fluid Application

TABLE OF CONTENTS

Introduction	Inside Front Cover
Table of Contents	1
Decal Locations	2-7
Drawbar & Tower Shields (After SN8300-2345 & SN10400-2365)	8
Drawbar & Tower Shields (Before SN8301-2345 & SN10401-2365)	9
Tower, Hitch & Hitchjack	10-11
Gearbox Mounting	12-13
Cutterbar - DC2345	14
Cutterbar - DC2365	15
Cutterbar & Discs - DC2345 (After SN8300)	16
Cutterbar & Discs - DC2365 (After SN10400)	17
Cutterbar & Discs - DC2345 (Before SN8301)	18
Cutterbar & Discs - DC2365 (Before SN10401)	19
Cutterbar & Skid Shoes - DC2345	20
Cutterbar & Skid Shoes - DC2365	21
Rollers & Roller Drive (Left Side)	22-23
Rollers & Roller Drive (Right Side)	24-25
Roll Tension System	26
Forming Chamber	27
Trailer Assembly (Left Side)	28-29
Trailer Assembly (Right Side)	30-31
Hydraulics - Lift	32
Hydraulics - Drawbar Positioner	33
Header to Trailer Assembly	34-35
Shields & Covers	36-39
Curtains	40
Axles & Wheels	41
Driveline, Tractor to Tower (540 RPM)	42
Driveline, Tractor to Tower (1000 RPM)	43
Driveline, Tower to Gearbox (540 & 1000 RPM) (After SN8300-2345 & SN10400-2365)	44
Driveline, Tower to Gearbox (540 RPM) (Before SN8301-2345 & SN10401-2365)	45
Driveline, Tower to Gearbox (1000 RPM) (Before SN8301-2345 & SN10401-2365)	46
Driveline, Gearbox To Cutterbar	47
Gearbox	48
Overrunning Clutch (540 & 1000 RPM) (After SN8300-2345 & SN10400-2365)	49
Overrunning Clutch (540 RPM) (Before SN8301-2345 & SN10401-2365)	50
Overrunning Clutch (1000 RPM) (Before SN8301-2345 & SN10401-2365)	51
Hitchjacks	52
Hitch Extension	53
Options & Accessories	54-57
Transport Lights	54
Tall Skid Shoes	55
Tilt Cylinder Kit	56
Safety Chain, Crop Lifter Kit, V-Type Blades	57
Service Kits - Electrical Connectors	58
Alphabetical Index	59
Numerical Index	60-65
Standard Hardware Torque specifications	Inside Back Cover

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com