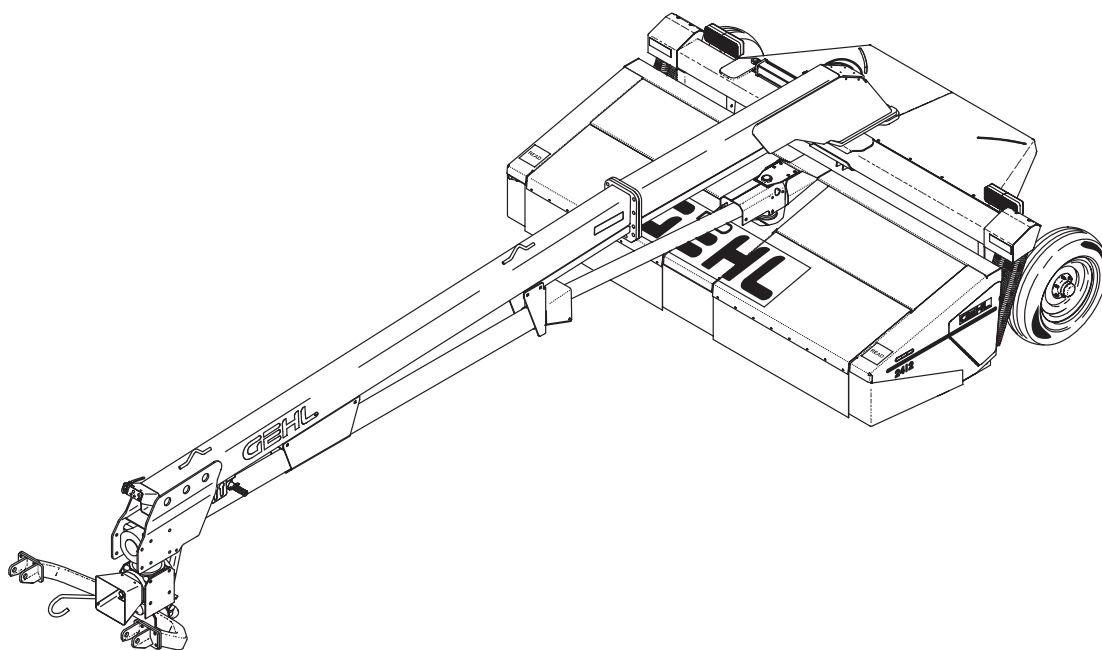 


Form No.
908152
Replaces
908140

2412

Disc Mower Conditioner



PARTS MANUAL

GEHL® AGRICULTURE

Introduction

When ordering service parts, specify the correct part number, full description, quantity required, the unit model number and serial number.

The Disc Mower Conditioner model and serial number is on a plate located on the left side of the Main Frame near the Drawbar anchor point. “Right” and “Left” are determined from a position standing behind the Disc Mower Conditioner. From this position the Drawbar is on the left.

GEHL® Company reserves the right to make changes or improvements in the design or construction of any part of the unit without incurring the obligation to install such changes on any previously delivered units.

NOTE: *On original tire replacement, company policy prohibits the sale of replacement tires for all GEHL machinery. Replacement Wheel Sets are available and tire size information is called out with the Wheel Sets to facilitate replacement tire selection. ALL REPLACEMENT TIRES MUST BE PURCHASED LOCALLY.*

Refer to the abbreviations table located on this page for the various fastener descriptions. Standard attaching hardware torque values are also provided on the inside back cover.

In the exploded view parts list, Reference Numbers may have additional information following the Reference Number.

A Tear Drop symbol will indicate an application of a “wet” product such as oil, and the number inside the Tear Drop will correspond to the description in the Parts List.

Also, a number inside a hexagon will be the torque value required, in foot pounds, on the associated Reference Number. Items shown in the parts list that do not have Reference Numbers are shown for reference purposes only and are NOT available for purchase.

Unless otherwise specified, all Cap Screws or Bolts are Grade 5, zinc plated; Hexagon Nuts for Grade 5 Screws or Bolts are Grade B; Hexagon Nuts for other Screws or Bolts are Grade A.

NOTE: *The following abbreviations may be used herein:*

 

AR	– As Required
ASSD	– Assembled
ASSY	– Assembly
CB	– Carriage Bolt
CCW	– Counterclockwise
CP	– Cotter Pin
CS	– Cap Screw (Hexagon Head)
CTR	– Center
CW	– Clockwise
DEG	– Degree
DIA	– Diameter
FCS	– Flanged Cap Screw
FHCS	– Flat Head Cap Screw
FHMS	– Flat Head Machine Screw
FLN	– Flanged Lock Nut (Hexagon)
FLS	– Flanged Lock Screw (Hexagon)
FW	– Flat Washer
GA	– Gauge
GR	– Grade
HD	– Hard or Head
HN	– Hex Nut
INCL	– Includes
JT	– Joint
LG	– Large
LN	– Lock Nut
LT	– Left
LW	– Lock Washer
M	– Metric
MM/mm	– Millimeter
NF	– National Fine
PB	– Plow Bolt
PTO	– Power Take Off
RHMS	– Round Head Machine Screw
RPM	– Revolutions Per Minute
RT	– Right
SERR	– Serrated
SHCS	– Socket Head Cap Screw
SHSS	– Socket Head Set Screw
SN	– Serial Number or Slotted Nut
SQ	– Square
T	– Tooth or Teeth
TFS	– Thread Forming Screw
THMS	– Truss Head Machine Screw
THRD	– Thread
#	– Number
	– Torque Required in foot pounds
	– Indicates a Fluid Application

TABLE OF CONTENTS

Introduction	Inside Front Cover
Table of Contents	1
Decal Locations	2-9
Rear Tongue Assembly	10-11
Tongue Assembly (2-Point Hitch)	12-13
Tongue Assembly (Drawbar Hitch)	14-15
Drawbar & Tower Shields	16-17
Tower, Hitch & Hitchjack	18-19
Cutterbar	20
Cutterbar & Discs	21
Cutterbar & Skid Shoes	22
Gearbox Mounting	23
Roll Tension System	24-25
Roller Drive (After SN11500)	26
Roller Drive (Before SN11501)	27
Rollers & Roller Bearings (Left)	28-29
Rollers & Roller Bearings (Right)	30-31
Trailer Assembly (After SN10500)	32-33
Trailer Assembly (Before SN10501)	34-35
Header to Trailer Assembly	36
Forming Chamber	37
Shields & Covers	38-39
Deflector	40
Curtains	41
Hydraulics	42-47
Electrical	48-51
Axles & Wheels	52
Component Breakdowns	53-68
Universal Drives	53-61
Gearboxes	62-66
Hydraulic Components	67
Hitchjack	68-69
Hitch Extension	70
Options & Accessories	71-74
Safety Chain	71
Tall Skid Shoes	71
Wide Tire Bumper Kit	72
Crop Lifter Kit, V-Type Blades, Sway Chain Kit	73
Truck Hitch Kit	74
Service Kits - Electrical Connectors	75
Alphabetical Index	76
Numerical Index	77-82
Standard Hardware Torque Specifications	Inside Back Cover

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com