

GEHL®

Form No.
918038
Revision E
Oct. 2008

Model 303

Compact Excavator

Serial Number Range

Engine Tier I Models: **AD00001 to AD01819**

Engine Tier II Models: **AD01820 to AE02400**

Parts Manual



INTRODUCTION

When ordering service parts, specify the correct part number, full description, quantity required, the unit model number and serial number. For your safety and continued proper operation, use only genuine GEHL service parts.

The model and serial number for this unit are on a tag located on a panel on the front of the cab.

“Right” and “left” are determined from a position sitting on the operator’s seat and facing forward.

GEHL Company reserves the right to make changes or improvements in the design or construction of any part of the unit without incurring the obligation to install such changes on any previously delivered units.

Refer to the abbreviations table located on this page for special parts descriptions. Standard attaching hardware torque values are also provided near the back of this manual. Metric torque values shown in the illustrations are in Newton-meters and are converted to foot-pounds by multiplying by 0.738.

Specific reference numbers, indicating a complete assembly, are circled in some illustrations. A small bag, pictured in some illustrations, indicates a seal kit (seals, o-rings, etc.). In the exploded view parts list, additional information may follow the Reference Number.

Serial number breaks are indicated as follows:

- (SN 999 and before) - indicates serial numbers up to and including 999.
- (SN 1000 - 2000) - indicates serial numbers between 1000 and 2000.
- (SN 999 and up) - indicates serial numbers including 999 and after.

Serial number exceptions and inclusion are indicated as follows:

- (SN 999 and before except 997) - indicates serial numbers up to and including 999, EXCEPT 997.
- (SN 1000 - 2000 except 1996 including 997) - indicates serial numbers between 1000 and 2000, INCLUDING 997 EXCEPT 1996.
- (SN 2001 and up including 1996) - indicates serial numbers including 2001 and after, INCLUDING 1996.

Unless otherwise specified, all cap screws and bolts are Grade 8.8, cadmium or zinc plated.

NOTE: *The following abbreviations may be used herein:*

ASSD	Assembled
ASSY	Assembly
AR	As Required
CB	Carriage Bolt
CP	Cotter Pin
CS	Cap Screw (Hexagon Head)
CYL	Cylinder
DIA	Diameter
DIN	Deutsches Institut für Normung (German Institute for Standardization)
FHCS	Flat Head Cap Screw
GR	Grade
HB	Hexagon Bolt
HLN	Hexagon Lock Nut
HN	Hexagon Nut
HP	High Pressure
HYD	Hydraulic
INS	Insert
LH	Left Hand
LN	Lock Nut
LT	Left
LW	Lock Washer
M	Meter or Meters
MM/mm	Millimeter
MTG	Mounting
NPT	National Pipe Threaded
NSS	Not Sold Separately
RH	Right Hand
RT	Right
SHCS	Socket Head Cap Screw
SLTD	Slotted
SN	Serial Number or Slotted Nut
SQ	Square
W/	With
W/O	Without
ZO	Zinc Oxide
ZY	Zinc Yellow
.....	Measurement Required

TABLE OF CONTENTS

Introduction.....	i	Reversing Valve (Dozer Blade)	67
Table of Contents.....	1	ISO/SAE Valve.....	68
Decal Locations	3	Lock Valve.....	69
Filters, Gaskets and Seals	9	Manifold Block	70
Diesel Engine (Tier II).....	10	Boom Cylinder.....	71
Diesel Engine (Tier I)	11	Dipper Arm Cylinder.....	72
Engine Mounts	12	Bucket Cylinder	73
Cylinder Head & Valve Cover (Tier II)....	13	Boom Hydraulic Installation.....	74
Cylinder Block (Tier II).....	14	Swivel Cylinder	75
Crankshaft Seal (Tier II)	15	Swivel Cylinder Installation	76
Oil Pan (Tier II)	16	Dozer Blade Cylinder	77
Camshaft (Tier II)	17	Dozer Blade Cylinder Installation	78
Crankshaft, Piston (Tier II).....	18	Dozer Blade Lever Installation	79
Oil Lubrication System (Tier II).....	19	Auxiliary Hydraulics Pedal Installation.....	80
Cooling System (Tier II).....	20	Swivel Bucket Cylinder	81
Fuel Injection System (Tier II)	21	Battery.....	82
Air Intake System (Tier II)	22	Radio (Option)	83
Air Intake System (Tier I).....	24	Boom Work Light.....	84
Intake Manifold (Tier II).....	25	Cab/Canopy Work Lights (Option)	85
Exhaust Manifold (Tier II).....	26	Rotating Beacon (Option)	86
Exhaust System.....	27	Wire Harness, Engine	87
Fuel Tank	28	Wire Harness, Chassis	89
Fuel System.....	32	Wire Harness, Cab	90
Throttle Lever	35	Wire Harness, Joystick Console (RT)	91
Hydraulic Pump Drive	37	Dozer Blade	93
Radiator.....	38	Undercarriage, Rubber Track	94
Oil Cooler & Installation	40	Track Tensioner, Rubber Track	95
Turntable Drive Unit.....	41	Undercarriage, Steel Track (Option)	96
Turntable Drive Unit Installation.....	42	Track Tensioner, Steel Track (Option)	97
Drive Unit	43	Chassis	98
Drive Unit Installation	44	Lubrication.....	100
Hydraulic Oil Tank	46	Counterweight.....	101
Hydraulic Pump	47	Rear Wall and Engine Hood	102
Hydraulic Pump Installation	48	Control Valve Cover	103
Control Valve/Style 1	50	Dipper Arm, Short (Standard)	104
Control Valve/Style 2	52	Dipper Arm, Long (Option).....	106
Control Valve/Style 3	53	Boom.....	108
Control Valve/Styles 2 & 3.....	54	Connecting Link	109
Control Valve Tubes	55	Cab	110
Swivel Joint.....	56	Canopy	115
Pilot Oil Supply Unit	57	Cab Front Window (Windshield)	116
Joysticks.....	58	Cab Sliding Window.....	117
Joystick Installation	61	Cab Windows.....	118
Travel Pilot Valve	63	Cab Door.....	119
Travel Pilot Valve Installation	64	Mirrors (Option)	120
Selection Valve	66	Sun Visor (Option).....	121

TABLE OF CONTENTS

Operator's Seat, Cab	122	Cab Heater	127
Operator's Seat, Canopy	124	Tools	130
Cab Floor Trim	126		

DECAL LOCATIONS

GENERAL INFORMATION

Decal location information is provided to assist in the proper selection and application of new decals, in the event the original decals become damaged or the machine is repainted. The listing includes decal illustration reference number, part number, description and quantity information. Refer to the illustrations for appropriate replacement locations.

To ensure proper selection of the correct replacement decals, compare all of the various closeup location drawings to the machine before starting to

refinish the unit. Then circle each decal shown (applicable to the machine) while checking off its part number in the listing. After verifying all the decals needed for replacement, place any extra unnecessary decals aside for disposal.

NOTE: *Refer to the SAFETY chapter of the Operator's Manual for the specific information provided on the various safety decals furnished in the decal kit(s).*

DECAL LOCATIONS

NEW DECAL APPLICATION

Surfaces MUST be free from dirt, dust, grease and other foreign material before applying the new decal. To apply, remove the smaller portion of the decal backing paper and apply this part of the exposed adhesive backing to the clean surface while maintaining proper position and alignment. Peel the other portion of the backing paper off slowly while applying hand pressure to smooth out the decal surface.



CAUTION

ALWAYS follow safety precautions on decals. Replace the decals if they are damaged, or if the unit is repainted. If repainting, BE SURE all applicable decals are affixed to the unit.

PAINT NOTICE











Use this list to order paint for refinishing:

- | | |
|--------|---|
| 167788 | 4 qts. Construction Yellow (GEHL) |
| 167780 | 4 qts. Light Gray (GEHL) |
| 167774 | 4 qts. Dark Gray (GEHL) |
| 167789 | 6 (12.8 oz. Spray Cans) Yellow (GEHL) |
| 167775 | 6 (12.8 oz. Spray Cans) Dark Gray (GEHL) |
| 167781 | 6 (12.8 oz. Spray Cans) Light Gray (GEHL) |

The Compact Excavator decal kit is as follows:

Ref. No.	Part No.	Description	Qty.
	163985	Decal Kit - 303	1
1	161965	Diesel Fuel	1
2	161966	Hydraulic Oil	1
3	161969	WARNING - Hydraulic Reservoir	1
4	164854	WARNING - Avoid Injury	1
5	161967	Lubrication	1
6	161986	WARNING - Read Manual	1
7	165909	WARNING - Rollover Protection	1
8	165906	Glow Plug	1
9	163974	Throttle Speed	1
10	163993	Graphic RT	1
11	165907	Graphic LT	1
12	161968	Heater Valve (cab models only)	1
13	179730	Bypass Ball Valve	1
14	163978	WARNING - Hot Surface	1
15	163977	WARNING - Entanglement Hazard	1
16	161987	WARNING - Rotating Fan	1
17	161985	WARNING - Keep Away	2
18	164853	Engine Compartment Latch	1
19	162832	Hydraulics Compartment Latch	1
20	163979	ISO/SAE Valve Position	1
21	203796	303 Lifting Capacity	1
22	161981	Lift Point	4
23	161982	Tiedown Point	4
24	161970	Arrow	2
25	163975	WARNING - Avoid Injury	2
26	179704	WARNING - Counterweight	2
27	163973	WARNING - Mandatory Shutdown	1
28	163976	WARNING - Avoid Injury	1
29	162452	Joystick Control RT	1
30	162450	Travel LT	1
31	162451	Travel RT	1
32	162453	Joystick Control LT	1
33	179687	Dozer Blade Control	1
34	184306	GEHL (4.75" x 20.16")	1
35	183963	GEHL (3.75" x 16")	2
36	164988	303	2
37	184043	GEHL (white / 3.75" x 16" / cab models)	1
	104833	GEHL (white / 2" x 8.5" / canopy models)	1

DECAL LOCATIONS

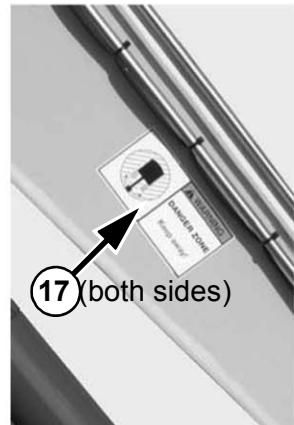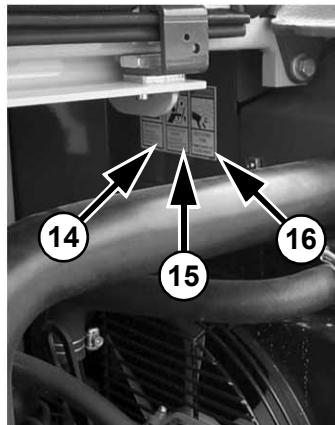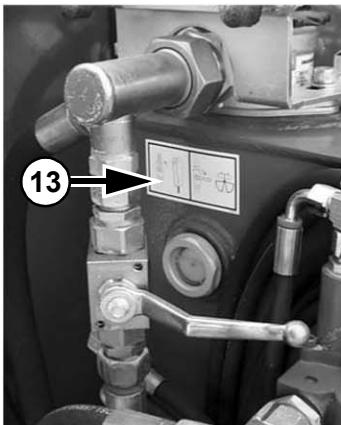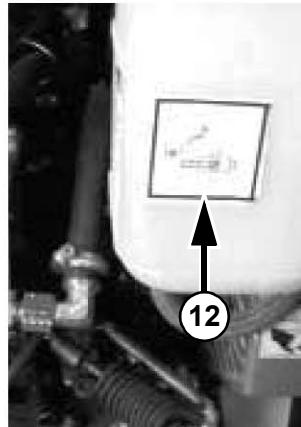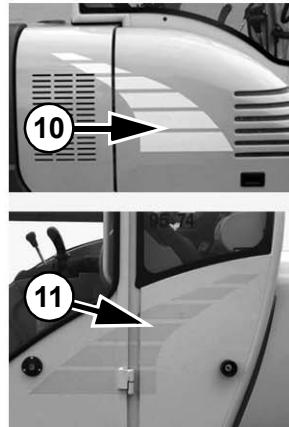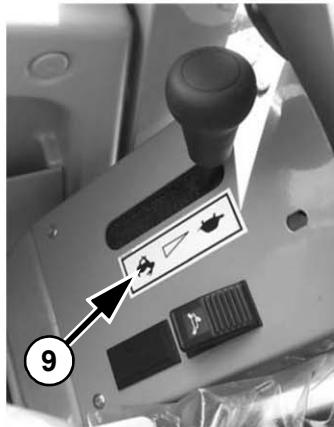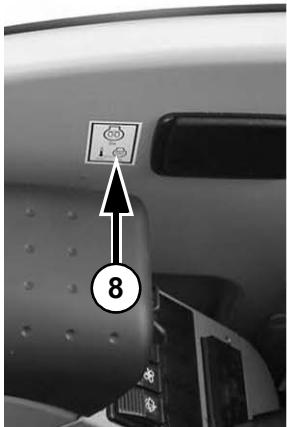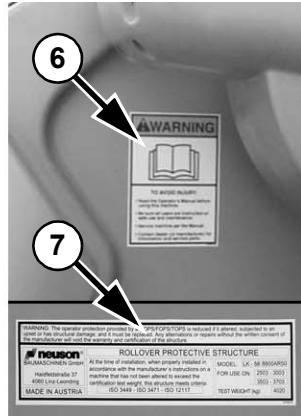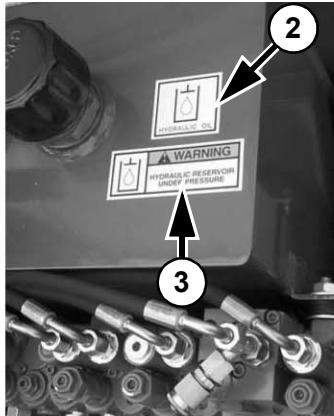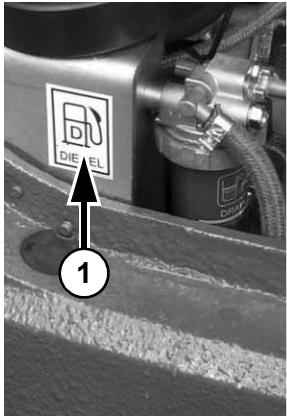

DECAL LOCATIONS







NOTE: The following is a duplicate listing from page 4 for conveniently selecting decals from the appropriate illustrations.

The Compact Excavator decal kit is as follows:

Ref. No.	Part No.	Description	Qty.
	163985	Decal Kit - 303	1
1	161965	Diesel Fuel	1
2	161966	Hydraulic Oil	1
3	161969	WARNING - Hydraulic Reservoir	1
4	164854	WARNING - Avoid Injury	1
5	161967	Lubrication	1
6	161986	WARNING - Read Manual	1
7	165909	WARNING - Rollover Protection	1
8	165906	Glow Plug	1
9	163974	Throttle Speed	1
10	163993	Graphic RT	1
11	165907	Graphic LT	1
12	161968	Heater Valve (cab models only)	1
13	179730	Bypass Ball Valve	1
14	163978	WARNING - Hot Surface	1
15	163977	WARNING - Entanglement Hazard	1
16	161987	WARNING - Rotating Fan	1


Ref. No.	Part No.	Description	Qty.
17	161985	WARNING - Keep Away	2
18	164853	Engine Compartment Latch	1
19	162832	Hydraulics Compartment Latch	1
20	163979	ISO/SAE Valve Position	1
21	203796	303 Lifting Capacity	1
22	161981	Lift Point	4
23	161982	Tiedown Point	4
24	161970	Arrow	2
25	163975	WARNING - Avoid Injury	2
26	179704	WARNING - Counterweight	2
27	163973	WARNING - Mandatory Shutdown	1
28	163976	WARNING - Avoid Injury	1
29	162452	Joystick Control RT	1
30	162450	Travel LT	1
31	162451	Travel RT	1
32	162453	Joystick Control LT	1
33	179687	Dozer Blade Control	1
34	184306	GEHL (4.75" x 20.16")	1
35	183963	GEHL (3.75" x 16")	2
36	164988	303	2
37	184043	GEHL (white / 3.75" x 16" / cab models)	1
	104833	GEHL (white / 2" x 8.5" / canopy models)	1

DECAL LOCATIONS

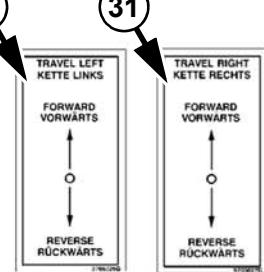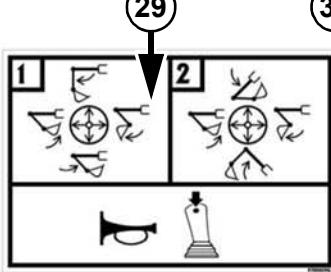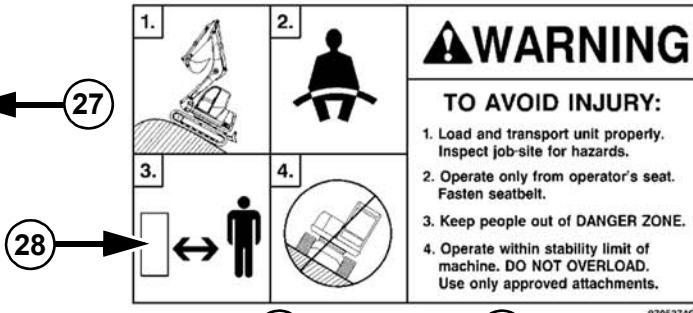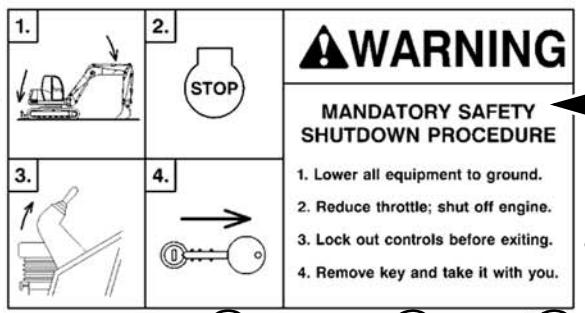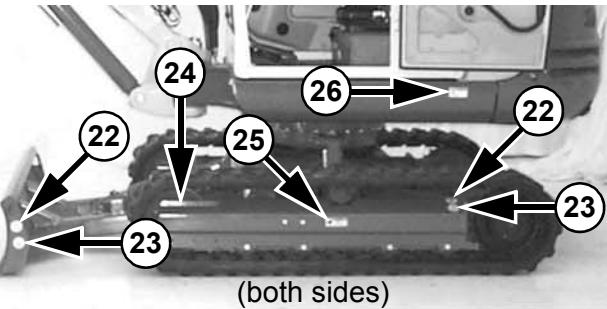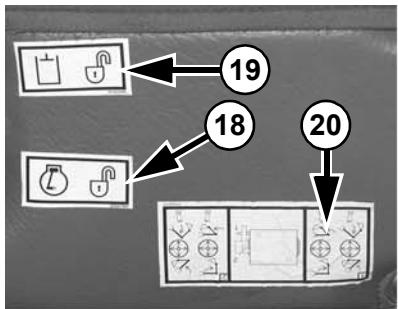


1. TRAVEL LEFT KETTE LINKS
FORWARD VORWÄRTS
REVERSE RÜCKWÄRTS

2. TRAVEL RIGHT KETTE RECHTS
FORWARD VORWÄRTS
REVERSE RÜCKWÄRTS

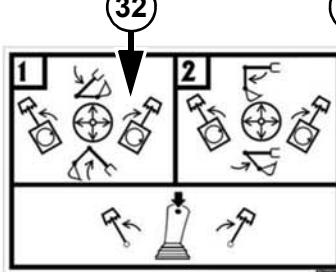

1. FORWARD VORWÄRTS
REVERSE RÜCKWÄRTS

2. FORWARD VORWÄRTS
REVERSE RÜCKWÄRTS

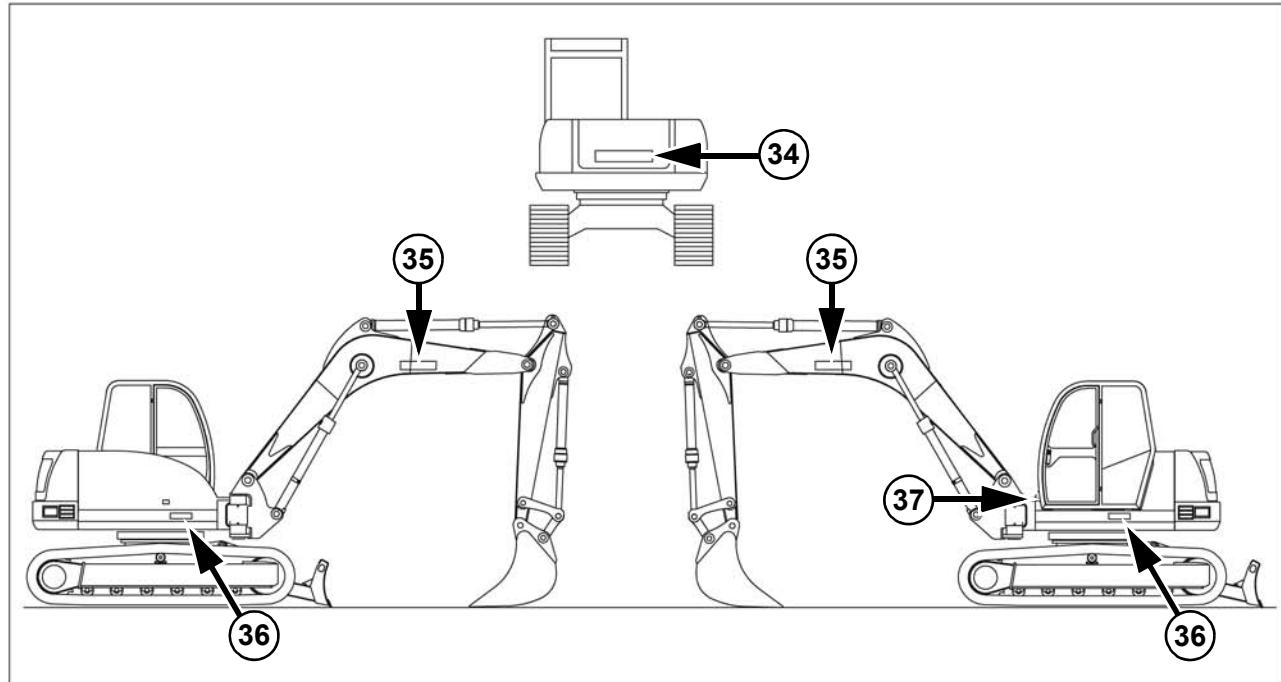

NOTES

Thanks for your reading.
Please click here to download complete manual
instantly.
And can also choose other manuals.

Feel free --->write to me with any questions.
Our service email:
manuals007@hotmail.com