 


802

Compact Excavator

Beginning Serial Number: AB00473

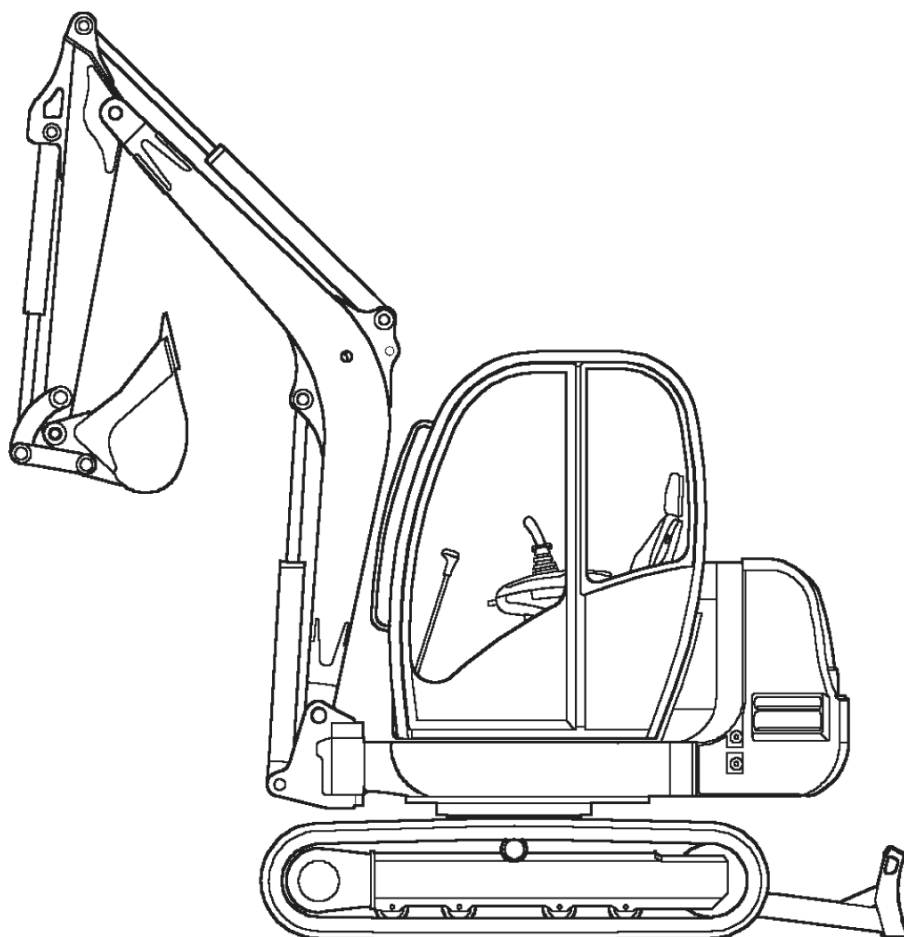

PARTS MANUAL

Introduction

When ordering service parts, specify the correct part number, full description, quantity required, the unit model number and serial number. For your safety and continued proper operation, use only genuine GEHL service parts.

The model and serial number for this unit are on a tag located on a panel on the front of the cabin.

“Right” and “left” are determined from a position sitting on the seat and facing forward. From this position, the cab is on the “left” and the hydraulic valve compartment is on the “right”.

GEHL® Company reserves the right to make changes or improvements in the design or construction of any part of the unit without incurring the obligation to install such changes on any previously delivered units.

Refer to the abbreviations table located on this page for the various fastener descriptions. Standard attaching hardware torque values are also provided on the inside back cover. Metric torque values shown in the illustrations are in Newton-meters and can be converted to Foot-pounds by multiplying by 0.738.

In the exploded view parts list, additional information may follow the Reference Number.

Serial Number breaks are indicated as follows:

(SN → XXXXX) - indicates Serial Numbers up to and including XXXXX.

(SN YYYYYY →) - indicates Serial Numbers YYYYYY and after.

Unless otherwise specified, all Cap Screws or Bolts are Grade 5, cadmium or zinc plated; Hexagon Nuts for Grade 5 Screws or Bolts are Grade B; Hexagon Nuts for other Screws or Bolts are Grade A.

NOTE: *The following abbreviations may be used herein:*

ASSD	- Assembled
ASSY	- Assembly
CB	- Carriage Bolt
CP	- Cotter Pin
CS	- Cap Screw (Hexagon Head)
FHCS	- Flat Head Cap Screw
GR	- Grade
HB	- Hex Bolt
HLN	- Hex Lock Nut
HN	- Hex Nut
HP	- High Pressure
INS	- Insert
LN	- Lock Nut
LT	- Left Hand
LW	- Lock Washer
M	- Metric
MM/mm	- Millimeter
RT	- Right
SHCS	- Socket Head Cap Screw
SLTD	- Slotted
SN	- Serial Number or Slotted Nut

TABLE OF CONTENTS

Introduction	Inside Front Cover	Throttle Lever	61
Decal Locations	4-9	Engine Suspension	62
Undercarriage, Rubber Track	10	Radiator	63
Undercarriage, Steel Track (Option)	11	Air Intake System	64
Steel Track - Disassemble	12	Air Intake System (Option)	65
Roller, Rubber Track	13	Exhaust System	66-67
Roller	14	Additional Parts (Air Conditioning Option)	68
Track - Top Roller	15	Piping (Air Conditioning Option)	69
Spring Set	16	Hydraulic Pump Drive	70
Spring Set (Steel Track Option)	17	Hydraulic Oil Tank	71
Tension Wheel	18	Travel Motor	72
Tension Wheel (Steel Track Option)	19	Swivel Joint	73-74
Dozer Blade	20	Control Valve	75
Chassis	21	Control Valve (Option)	76-78
Chassis Covers	22	Valve Block 1	79
Lubrication	23	Valve Block 2	80
Rear Wall	24	Hydraulic Pump	81
Rear Hood	25	Oil Cooler	82
Counterweights	26	Turntable Drive Unit	83-84
Counterweights (Option)	27	Pilot Oil Supply Unit	85
Engine Hood	28	Reversing Valve	86
Tool Box, Hose Cover	29	Valve	87
Valve Bracket	30	Distribution Block , Large	88
Valve Cover	31	Distribution Block, Small	89
Lifting Boom	32	Distribution Block (Option)	90
Dipper Arm	33	Control Levers	91
Connecting Links	34	Control Levers (Option)	92-93
Cabin Frame 1	35	Dozer Blade Valve	94-95
Cabin Mounting	36	Pilot Valve, Travel	96
Cabin Frame 1A	37	Pilot Op. Check Valves Aux. Hydraulic	97
Cabin Frame 2	38	Solenoid Valve (Option)	98
Cabin Frame 3	39-40	4/3 Valve (Option)	99
Cabin Frame 4	41	ISO/SAE Valve (Option)	100
Main Harnesses	42	Boom Cylinder	101-102
Windshield	43	Boom Cylinder (Option)	103-104
Cabin Windows	44-46	Dipper Arm Cylinder	105-106
Side Window	47	Boom Offset Cylinder	107
Cabin Door	48	Dozer Blade Cylinder	108
Cabin Door 1A	49	Installation Oil Cooler	109-110
Covering	50-51	Installation Hydraulic Pump	111
Rotating Beacon (Option)	52	Installation Orientation Gear	112
Heater	53	Dozer Blade Cylinder Installation	113
Operator's Seat	54-55	Travel Motor Installation	114
Mounting Kit	56	Installation Turntable Drive Unit	115-116
Air Conditioning (Option)	57	Installation Control Levers	117
Diesel Engine	58	Installation Control Levers (Option)	118
Diesel Tank	59	Installation Pilot Op. Check Valves	119
Fuel Supply	60	Installation Pilot Op. Check Valves (Option) ...	120
		Installation Pressure Holding Valves	121

Installation Auxiliary Function (Option)	122
Boom Installation	123
Boom Cylinder Installation	124-125
Dipper Arm Installation	126
3. Hydraulic Circuit (Option)	127
Pilot Control (Option)	128-129
Engine Wire Harness	130
Armrest - Harness Wiring Right	131-132
Armrest - Harness Wiring Left	133-134
Armrest - Harness Wiring Left (Option)	135
Chassis Wire Harness	136
Armrest - Harness Wiring Right (Option)	137-138
Relay Box	139

Relay Box Installation	140
Chassis Headlight	141
Headlights	142
Battery Installation	143
Horn	144
Armrest - Harness Wiring Right	145
Tool Kit	146
Index	147-148
Numerical Index	149-162
Notes	163
Hydraulic Fitting Data	164
Torque Chart	Inside Rear Cover

INTENTIONALLY BLANK

DECAL LOCATIONS

GENERAL INFORMATION

Decal location information is provided to assist in the proper selection and application of new decals, in the event the original decals become damaged or the machine is repainted. Refer to the listing for the illustration reference number, part number, description and quantity of each decal provided in the kit. Refer to the appropriate illustrations for replacement locations.

To ensure proper selection of the correct replacement decals, compare all of the various closeup location drawings to your machine before starting to refinish the unit. Then circle each shown decal (applicable to your machine) while checking off its part number in the listing. After you have verified all the decals needed for replacement, place any extra unnecessary decals aside for disposal.

NOTE: Refer to the *SAFETY* chapter of the *Operator's Manual* for the specific information provided on all of the various safety decals furnished in the decal kit(s).

NEW DECAL APPLICATION

Surfaces **MUST** be free from dirt, dust, grease and other foreign material before applying the new decal. To apply, remove the smaller portion of the decal backing paper and apply this part of the exposed adhesive backing to the clean surface while maintaining proper position and alignment. Peel the other portion of the backing paper off slowly while applying hand pressure to smooth out the decal surface.



CAUTION

ALWAYS follow safety precautions on decals. Replace the decals if they are damaged, or if the unit is repainted. If repainting, **BE SURE** all applicable decals are affixed to your unit.

PAINT NOTICE








Use this list to order paint for refinishing:

906213	One Gal. Construction Yellow
906323	One Qt. Charcoal Grey
906317	One Gal. Charcoal Grey
906214	6 (12 oz. Spray Cans) Yellow
906318	6 (12 oz. Spray Cans) Grey

Most of the decals are common to all 802 units. Any differences are called out using asterisks. The decal kit for the model 802 Compact Excavator is listed below:

Ref. No.	Part No.	Description & Quantity
	178562	Decal Kit - 802
1	161965	Diesel Fuel
2	161966	Hydraulic Oil
3	161967	Lubrication
4	161969	WARNING - Hydraulic Reservoir
5	161970	Arrow (2 places)
6	161981	Lift Point (6 places)
7	161982	Tiedown Point (6 places)
8	161985	WARNING - Keep Away (2 places)
9	161986	WARNING - Read Manual
10	161987	WARNING - Rotating Fan (2 places)
11	162449	Dozer Blade - Up and Down
12	162450	Travel - Left
13	162451	Travel - Right
14	162452	Right Joystick Control
15	162453	Left Joystick Control
16	162832	Hydraulics Compartment Latch
17	163973	WARNING - Mandatory Shutdown
18	163975	WARNING - Avoid Injury (2 places)
19	163976	WARNING - Avoid Injury
20	163977	WARNING - Entanglement Hazard
21	163978	WARNING - Hot Surface (2 places)
22	179675	Decal/Control Pattern
23	164862	Left Graphic (SN → AB00988)
	179700	Left Graphic (SN AB00989 →)
24	162825	Right Graphic
25	164853	Engine Compartment Latch
26	164854	WARNING - Avoid Injury
27	163974	Manual Throttle
28	184307	GEHL
29	184069	GEHL (2 places)
30	135908	802 (2 places)
31	179682	Lifting Capacity
32	179706	Protective Structure
33	179717	Heater
34	179718*	Heater/Air Conditioner
35	183963	GEHL

       * Used on models with optional air conditioning.

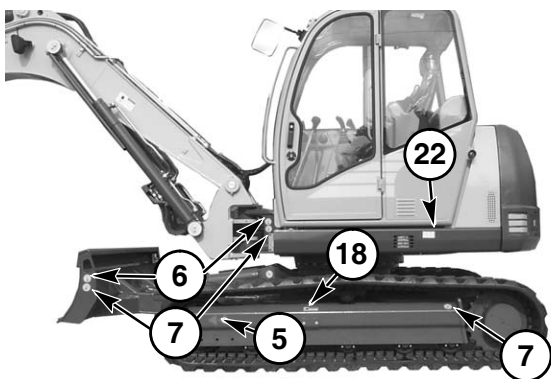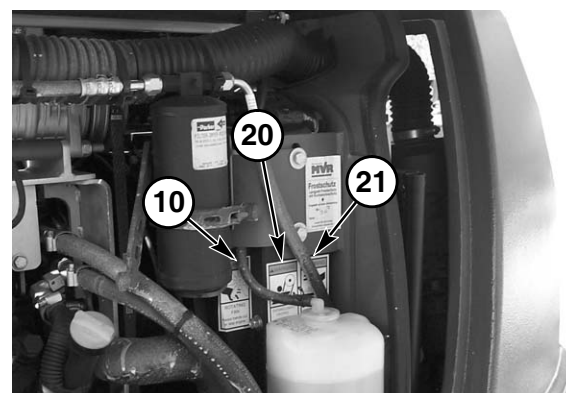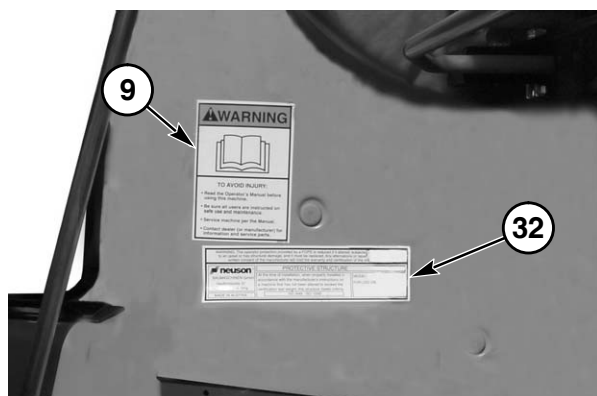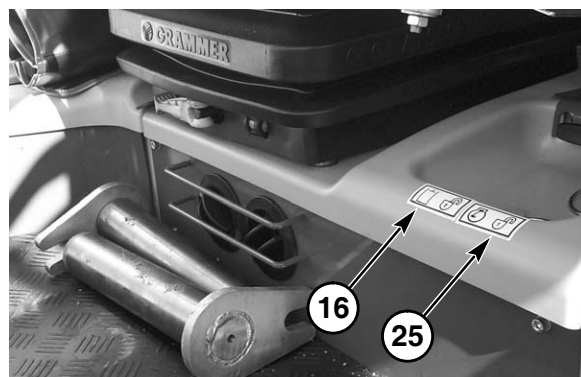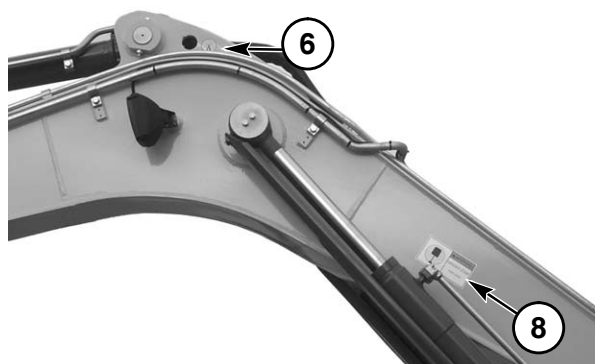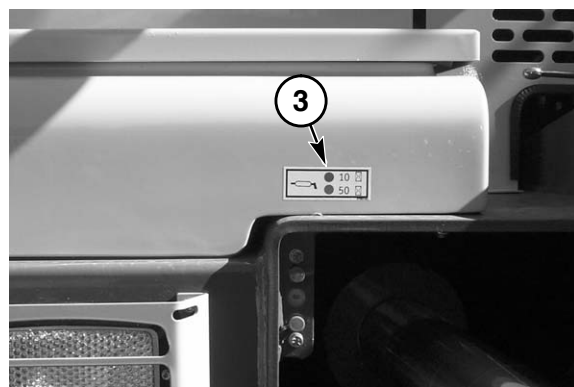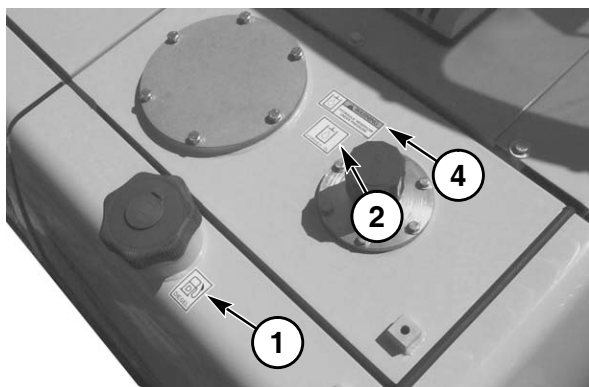

Both Sides (except 22)

The decal listing has been repeated for your convenience.

Ref. No.	Part No.	Description & Quantity
----------	----------	------------------------

	178562	Decal Kit - 802
1	161965	Diesel Fuel
2	161966	Hydraulic Oil
3	161967	Lubrication
4	161969	WARNING - Hydraulic Reservoir
5	161970	Arrow (2 places)
6	161981	Lift Point (6 places)
7	161982	Tiedown Point (6 places)
8	161985	WARNING - Keep Away (2 places)
9	161986	WARNING - Read Manual
10	161987	WARNING - Rotating Fan (2 places)
11	162449	Dozer Blade - Up and Down
12	162450	Travel - Left
13	162451	Travel - Right
14	162452	Right Joystick Control
15	162453	Left Joystick Control
16	162832	Hydraulics Compartment Latch
17	163973	WARNING - Mandatory Shutdown

18	163975	WARNING - Avoid Injury (2 places)
19	163976	WARNING - Avoid Injury
20	163977	WARNING - Entanglement Hazard
21	163978	WARNING - Hot Surface (2 places)
22	179675	Decal/Control Pattern
23	164862	Left Graphic (SN → AB00988)
	179700	Left Graphic (SN AB00989 →)
24	162825	Right Graphic
25	164853	Engine Compartment Latch
26	164854	WARNING - Avoid Injury
27	163974	Manual Throttle
28	184307	GEHL
29	184069	GEHL (2 places)
30	135908	802 (2 places)
31	179682	Lifting Capacity
32	179706	Protective Structure
33	179717	Heater
34	179718*	Heater/Air Conditioner
35	183963	GEHL

* Used on models with optional air conditioning.

Thanks for your reading.

Please click [here](#) to download complete manual instantly.

And can also choose other manuals.

Feel free ---> write to me with any questions.

Our service email:

manuals007@hotmail.com