

Form No.  
**907144**  
Replaces  
904394

# 970

## Forage Box



## PARTS MANUAL

**GEHL®** AGRICULTURE

## Introduction

When ordering service parts, specify the correct part number, full description, quantity required, the unit model number and serial number.

The model number and serial number for this unit are on a decal located on the right side of the Unloading Unit above the Transmission. “Right” and “Left” are determined from a position standing at the rear of the unit and looking toward the direction of travel. From this position, the Cross Conveyor is on the front and discharges from the “left” side.

GEHL® Company reserves the right to make changes or improvements in the design or construction of any part of the unit without incurring the obligation to install such changes on any previously delivered units.

**NOTE:** *On original tire replacement, company policy prohibits the sale of replacement tires for all GEHL machinery. Replacement Wheel Sets are available and tire size information is called out with the Wheel Sets to facilitate replacement tire selection. ALL REPLACEMENT TIRES MUST BE PURCHASED LOCALLY.*

Refer to the abbreviations table located on this page for the various fastener descriptions. Standard attaching hardware torque values are also provided on the inside back cover.

In the exploded view parts list, Reference Numbers may have additional information following the Reference Number.

A Tear Drop symbol will indicate an application of a “wet” product such as oil, and the number inside the Tear Drop will correspond to the description in the Parts List.

Also, a number inside a hexagon will be the torque value required, in foot pounds, on the associated Reference Number. Items shown in the parts list that do not have Reference Numbers are shown for reference purposes only and are NOT available for purchase.

Unless otherwise specified, all Cap Screws or Bolts are Grade 5, cadmium or zinc plated; Hexagon Nuts for Grade 5 Screws or Bolts are Grade B; Hexagon Nuts for other Screws or Bolts are Grade A.

**NOTE:** *The following abbreviations may be used herein:*

AR	– As Required
ASSD	– Assembled
ASSY	– Assembly
CB	– Carriage Bolt
CCW	– Counterclockwise
CP	– Cotter Pin
CS	– Cap Screw (Hexagon Head)
CTR	– Center
CW	– Clockwise
DEG	– Degree
DIA	– Diameter
FCS	– Flanged Cap Screw
FHMS	– Flat Head Machine Screw
FL	– Flanged
FLN	– Flanged Lock Nut (Hexagon)
FLS	– Flanged Lock Screw (Hexagon)
FW	– Flat Washer
GA	– Gauge
GR	– Grade
HD	– Hard or Head
HN	– Hex Nut
INCL	– Includes
JT	– Joint
LG	– Large
LH	– Left Hand
LN	– Lock Nut
LW	– Lock Washer
M	– Metric
MM/mm	– Millimeter
NF	– National Fine
PB	– Plow Bolt
PTO	– Power Take Off
RH	– Right Hand
RHMS	– Round Head Machine Screw
RPM	– Revolutions Per Minute
RT	– Right
SERR	– Serrated
SHCS	– Socket Head Cap Screw
SHSS	– Socket Head Set Screw
SN	– Serial Number or Slotted Nut
SQ	– Square
T	– Tooth or Teeth
TFS	– Thread Forming Screw
THMS	– Truss Head Machine Screw
THRD	– Thread
WLDMT	– Weldment
#	– Number
	– Torque Required in foot pounds
	– Indicates a Fluid Application

# TABLE OF CONTENTS

Introduction	Inside Front Cover
Table of Contents	1
Decal Locations	2-3
Unloading Unit & 1st Beater (After SN35900)	4-5
Unloading Unit & 1st Beater (Before SN35901)	6-7
Implement Drive, Safety Clutch & Cable	8-11
Powered Clutch Control & Linkage (After SN39700)	12-13
Powered Clutch Control & Linkage (Before SN39701)	14-15
Apron & Beater Drive (After SN39700)	16-17
Apron & Beater Drive (Before SN39701)	18-19
Cross Conveyor	20-21
Platform Feeder	22
Apron Components	23
2nd Beater	24-25
Big 3rd Beater	26
Small 3rd Beater	27
Telescoping PTO Drive (After 43900)	28
Telescoping PTO Drive (Before 43901)	29
Beater Drive Transmission	30
Apron Drive Worm Transmission	31
Box Components	32-41
Side Ties	32
Platforms	33
Side Panels & "Z" Reinforcement (After SN40500)	34-35
Side Panels & "Z" Reinforcement (Before SN39701)	36-37
Ends	38-39
Roofs	40-41
Accessories	42-43
Conveyor Extension	42-43
22T Speed-up Sprocket (Before SN37901)	43
Hydraulic Drive Kit	44
Alphabetical Index	45
Numerical Index	46-49
Standard Hardware Torque Specifications	Inside Back Cover

**Thanks for your reading.**

**Please click here to download complete manual instantly.**

**And can also choose other manuals.**

**Feel free --->write to me with any questions.**

**Our service email:**

**manuals007@hotmail.com**