

GE353 & 373

Compact Excavators

PARTS MANUAL



Introduction

When ordering service parts, specify the correct part number, full description, quantity required, the unit model number and serial number. For your safety and continued proper operation, use only genuine GEHL service parts.

The model and serial number for this unit are on a tag located on a panel on the front of the cabin.

“Right” and “left” are determined from a position sitting on the seat and facing forward. From this position, the cab is on the “left” and the hydraulic valve compartment is on the “right”.

GEHL® Company reserves the right to make changes or improvements in the design or construction of any part of the unit without incurring the obligation to install such changes on any previously delivered units.

Refer to the abbreviations table located on this page for the various fastener descriptions. Standard attaching hardware torque values are also provided on the inside back cover. Metric torque values shown in the illustra-

tions are in Newton-meters and can be converted to Foot-pounds by multiplying by 0.738.

In the exploded view parts list, Reference Numbers may have additional information following the Reference Number.

Unless otherwise specified, all Cap Screws or Bolts are Grade 5, cadmium or zinc plated; Hexagon Nuts for Grade 5 Screws or Bolts are Grade B; Hexagon Nuts for other Screws or Bolts are Grade A.

NOTE: *The following abbreviations may be used herein:*

CP	– Cotter Pin
CS	– Cap Screw (Hexagon Head)
FHCS	– Flat Head Cap Screw
HN	– Hex Nut
LN	– Lock Nut
LT	– Left Hand
M	– Metric
MM/mm	– Millimeter
RT	– Right

TABLE OF CONTENTS

Introduction	Inside Front Cover	Oil Cooler	57
Decal Locations	2–7	Hydraulic Pump	58
Undercarriage, 353	8	Travel Motors	59
Undercarriage, 373	9	Swivel Joint, 353	60
Track Tensioner	10	Swivel Joint Disassembled, 353	61
Lower Track Roller	11	Swivel Joint, 373	62
Upper Track Roller	12	Swivel Joint Disassembled, 373	63
Dozer Blade	13	Swivel Motor	64
Upper Carriage	14	Control Valve 1	65
Lubrication Block	15	Control Valve 2	66
Rear Wall	16	Pilot Oil Supply	67
Counterweight	17	Pilot Oil Supply Breakdown	68
Valve Cover	18	Pilot Operation Check Valve	69
Lifting Arm	19	Dozer Blade Reversing Valve	70
Short Dipper Arm	20	Cabin Tilt Reversing Valve, 373	71
Long Dipper Arm	21	Lock Valve	72
Connecting Link	22	Manifold Block	73
Cabin Windows	23	Joysticks	74
Windshield	24	Travel Valve	75
Cabin Door	25	Auxiliary Hydraulics	76
Cabin Frame 1	26	Lifting Arm Cylinder	77
Cabin Frame 2	27	Dipper Arm Cylinder	78
Cabin Frame 3	28	Dipper Cylinder	79
Open Canopy	29	Boom Slew Cylinder	80
Sliding Side Window	30	Dozer Blade Cylinder	81
Cabin Wire Harness	31	Cabin Tilt Cylinder	82
Operator's Seat	32	Hoses, Hydraulic Oil Cooler	83
Cabin Floor	33	Hoses, Hydraulic Pump	84
Cabin Heater	34	Hoses, Traveling Gears, 353	85
Engine Mounts	35	Hoses, Traveling Gears, 373	86
Radiator	36	Hoses, Swivel Gear	87
Air Cleaner	37	Hoses, Boom Slew Cylinder	88
Exhaust	38	Hoses, Dozer Blade Cylinder, 353	89
Fuel Tank	39	Hoses, Dozer Blade Cylinder, 373	90
Fuel System	40	Hoses, Cabin Tilt Cylinder, 373	91
Throttle	41	Hoses, Joysticks	92
Oil Pump, Pan & Oil Filter	42	Hoses, Travel Valve	93
Cylinder Head	43	Tubes, Control Valve, 353	94
Stop Solenoid	44	Tubes, Control Valve, 373	95
Fuel Injection Pump	45	Hoses, Liftarm (Short)	96
Fuel Injection	46	Hoses, Liftarm (Long)	97
Fuel Filter	47	Battery	98
Fuel Pump	48	Engine Harness	99
Alternator	49	Harness, Right Armrest	100
Starter	50	Harness, Cabin	101
Thermostat	51	Headlight	102
Water Pump & Fan	52	Tool Kit	103
Exhaust Manifold	53	Toolbox, Grease Gun Bracket	104
Intake Manifold	54	Alphabetical Index	105
Pump Drive	55	Numerical Index	106–114
Oil Tank	56	Torque Chart	Inside Rear Cover

DECAL LOCATIONS

GENERAL INFORMATION

Decal location information is provided to assist in the proper selection and application of new decals, in the event the original decals become damaged or the machine is repainted. Refer to the listing for the illustration reference number, part number, description and quantity of each decal provided in the kit. Refer to the appropriate illustrations for replacement locations.

To ensure proper selection of the correct replacement decals, compare all of the various closeup location drawings to your machine before starting to refinish the unit. Then circle each shown decal (applicable to your machine) while checking off its part number in the listing. After you have verified all the decals needed for replacement, place any extra unnecessary decals aside for disposal.

NOTE: Refer to the *SAFETY* chapter of the *Operator's Manual* for the specific information provided on all of the various safety decals furnished in the decal kit(s).

NEW DECAL APPLICATION

Surfaces **MUST** be free from dirt, dust, grease and other foreign material before applying the new decal. To apply, remove the smaller portion of the decal backing paper and apply this part of the exposed adhesive backing to the clean surface while maintaining proper position and alignment. Peel the other portion of the backing paper off slowly while applying hand pressure to smooth out the decal surface.



CAUTION

ALWAYS follow safety precautions on decals. Replace the decals if they are damaged, or if the unit is repainted. If repainting, **BE SURE** all applicable decals are affixed to your unit.

PAINT NOTICE

Use this list to order paint for refinishing:






906213	One Gal. Construction Yellow
906323	One Qt. Charcoal Grey
906317	One Gal. Charcoal Grey
906214	6 (12 oz. Spray Cans) Yellow
906318	6 (12 oz. Spray Cans) Grey

Most of the decals are common to both units. Any differences are called out using asterisks. The decal kits for the model 353 and 373 Compact Excavators are listed below:


Ref. No.	Part No.	Description & Quantity
	163986	Decal Kit - 353
	163987	Decal Kit - 373
1	161965	Diesel Fuel
2	161966	Hydraulic Oil
3	161967	Lubrication
4	161968	Heater Valve (cab models only)
5	161969	WARNING – Hydraulic Reservoir
6	161970	Arrow (2 places)
7	161981	Lift Point (4 places)
8	161982	Tiedown Point (4 places)
9	161985	WARNING – Keep Away (2 places)
10	161986	WARNING – Read Manual
11	161987	WARNING – Engine Fan
12	162450	Travel – Left
13	162451	Travel – Right
14	162452	Right Joystick Control
15	162453	Left Joystick Control
16	162832	Hydraulics Compartment Latch
17	163973	WARNING – Mandatory Shutdown
18	163975	WARNING – Avoid Injury (2 places)
19	163976	WARNING – Avoid Injury
20	163977	WARNING – Entanglement Hazard
21	163978	WARNING – Hot Surface
22	163979	Valve Position
23	163992	Left Graphic
24	163993	Right Graphic
25	163994	WARNING – Counterweight (2 places)
26	163995	Dozer Blade Control
27	163996	Bypass Ball Valve
28	164853	Engine Compartment Latch
29	164854	WARNING – Avoid Injury
30	165898	Manual Throttle
31	165900 **	Cabin Tilt Control
32	165906	Glow plug
33	122735	GEHL
34	L82282	GEHL (4 places, 3places on canopy models)
35	164989 *	353 (2 places)
	164990 **	373 (2 places)

* Decals used on 353 only



** Decals used on 373 only

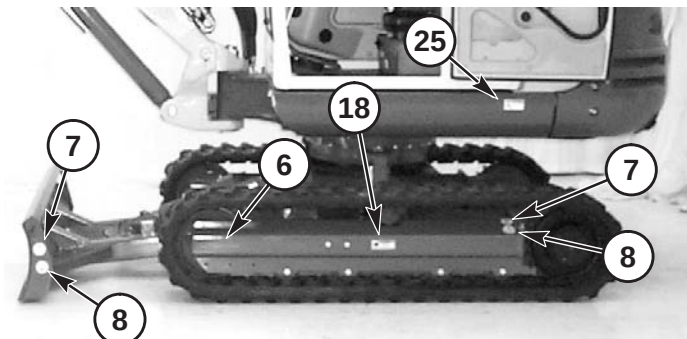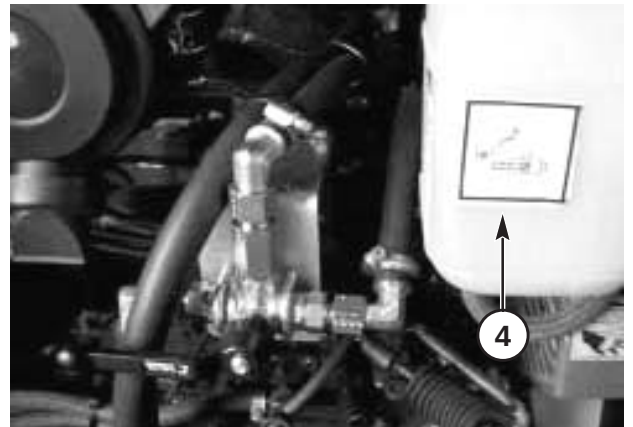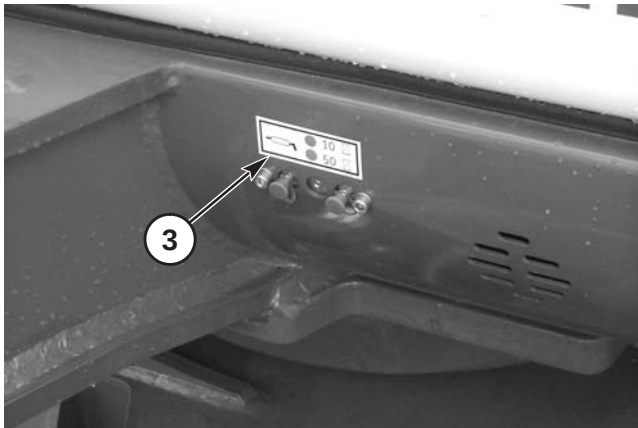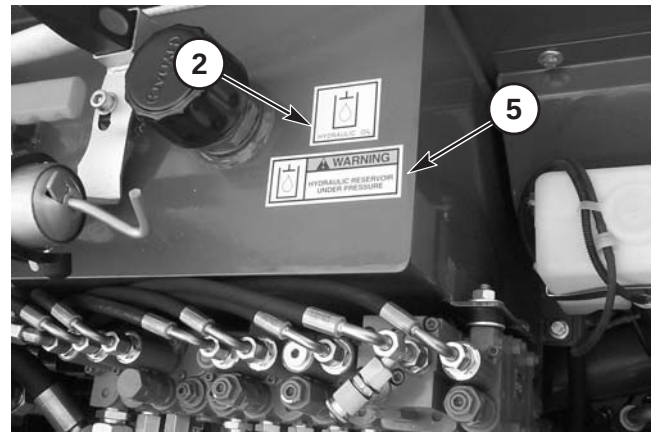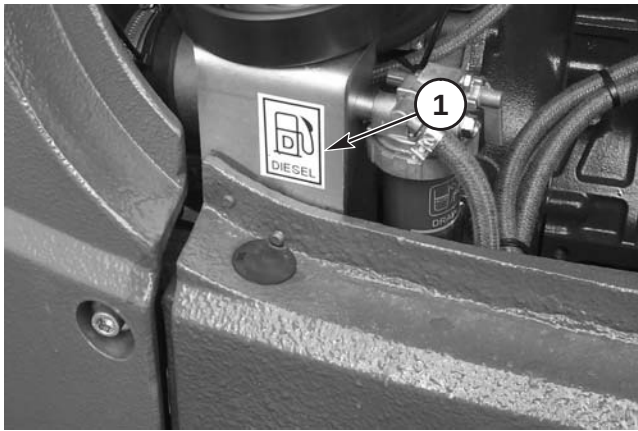

Both Sides

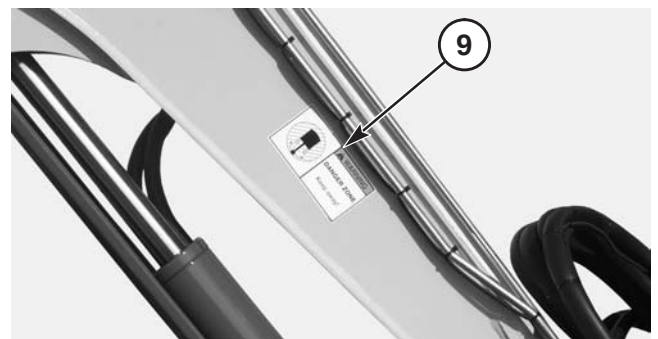

Both Sides

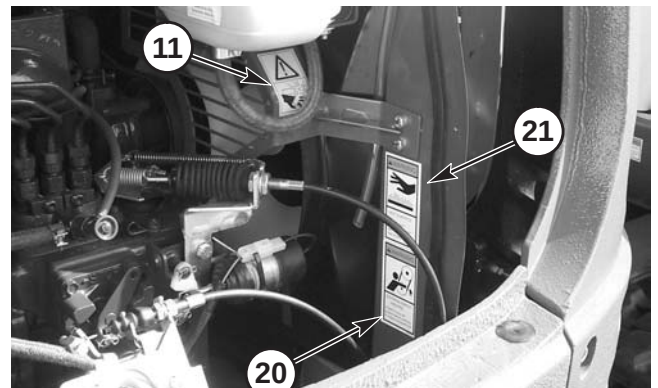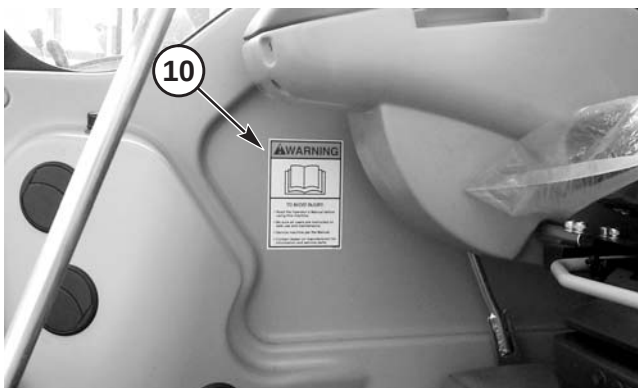

The decal listing has been repeated for your convenience.





Ref. No.	Part No.	Description & Quantity
----------	----------	------------------------

	163986	Decal Kit - 353
	163987	Decal Kit - 373
1	161965	Diesel Fuel
2	161966	Hydraulic Oil
3	161967	Lubrication
4	161968	Heater Valve (cab models only)
5	161969	WARNING – Hydraulic Reservoir
6	161970	Arrow (2 places)
7	161981	Lift Point (4 places)
8	161982	Tiedown Point (4 places)
9	161985	WARNING – Keep Away (2 places)
10	161986	WARNING – Read Manual
11	161987	WARNING – Engine Fan
12	162450	Travel – Left
13	162451	Travel – Right
14	162452	Right Joystick Control
15	162453	Left Joystick Control
16	162832	Hydraulics Compartment Latch

17	163973	WARNING – Mandatory Shutdown
18	163975	WARNING – Avoid Injury (2 places)
19	163976	WARNING – Avoid Injury
20	163977	WARNING – Entanglement Hazard
21	163978	WARNING – Hot Surface
22	163979	Valve Position
23	163992	Left Graphic
24	163993	Right Graphic
25	163994	WARNING – Counterweight (2 places)
26	163995	Dozer Blade Control
27	163996	Bypass Ball Valve
28	164853	Engine Compartment Latch
29	164854	WARNING – Avoid Injury
30	165898	Manual Throttle
31	165900 **	Cabin Tilt Control
32	165906	Glow plug
33	122735	GEHL
34	L82282	GEHL (4 places, 3places on canopy models)
35	164989 *	353 (2 places)
	164990 **	373 (2 places)

* Decals used on 353 only

** Decals used on 373 only

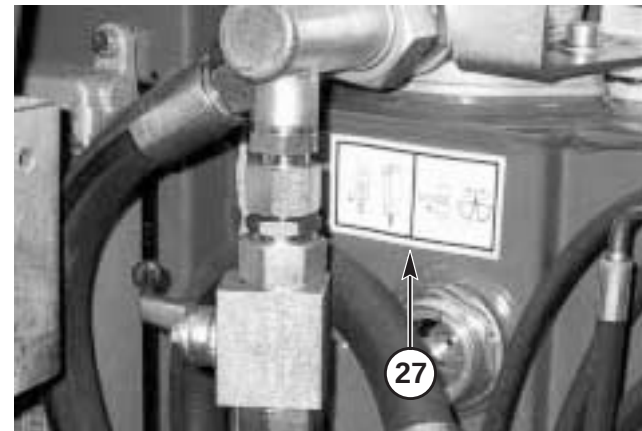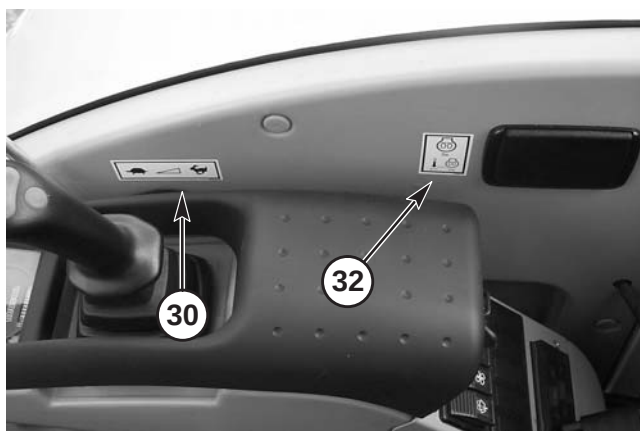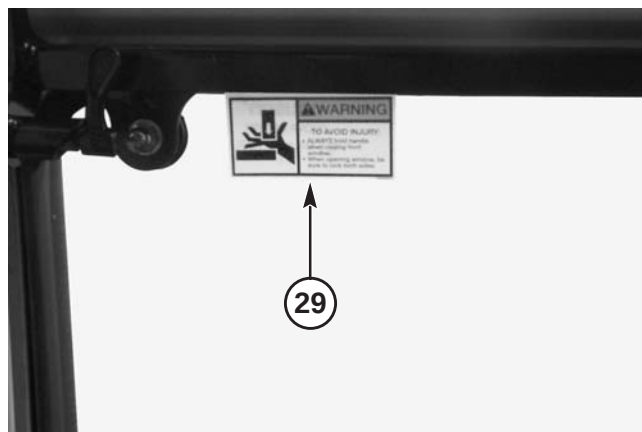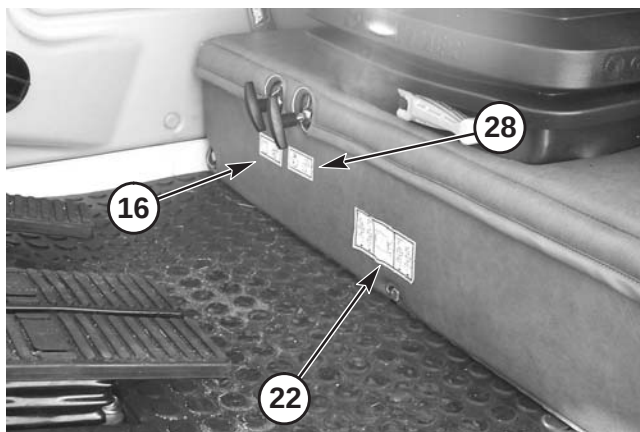

Overhead Panel Decals – positioning may vary by model and cabin style

1.	2.	! WARNING MANDATORY SAFETY SHUTDOWN PROCEDURE 1. Lower all equipment to ground. 2. Reduce throttle; shut off engine. 3. Lock out controls before exiting. 4. Remove key and take it with you.
3.	4.	

9705272G

1.	2.	! WARNING TO AVOID INJURY: 1. Load and transport unit properly. Inspect job-site for hazards. 2. Operate only from operator's seat. Fasten seatbelt. 3. Keep people out of DANGER ZONE. 4. Operate within stability limit of machine. DO NOT OVERLOAD. Use only approved attachments.
3.	4.	

9705274G

15.	12.	13.	14.	26.	31.
-----	-----	-----	-----	-----	-----

The decal listing has been repeated for your convenience.



Ref. No.	Part No.	Description & Quantity
----------	----------	------------------------

	163986	Decal Kit - 353
	163987	Decal Kit - 373
1	161965	Diesel Fuel
2	161966	Hydraulic Oil
3	161967	Lubrication
4	161968	Heater Valve (cab models only)
5	161969	WARNING – Hydraulic Reservoir
6	161970	Arrow (2 places)
7	161981	Lift Point (4 places)
8	161982	Tiedown Point (4 places)
9	161985	WARNING – Keep Away (2 places)
10	161986	WARNING – Read Manual
11	161987	WARNING – Engine Fan
12	162450	Travel – Left
13	162451	Travel – Right
14	162452	Right Joystick Control
15	162453	Left Joystick Control
16	162832	Hydraulics Compartment Latch

17	163973	WARNING – Mandatory Shutdown
18	163975	WARNING – Avoid Injury (2 places)
19	163976	WARNING – Avoid Injury
20	163977	WARNING – Entanglement Hazard
21	163978	WARNING – Hot Surface
22	163979	Valve Position
23	163992	Left Graphic
24	163993	Right Graphic
25	163994	WARNING – Counterweight (2 places)
26	163995	Dozer Blade Control
27	163996	Bypass Ball Valve
28	164853	Engine Compartment Latch
29	164854	WARNING – Avoid Injury
30	165898	Manual Throttle
31	165900 **	Cabin Tilt Control
32	165906	Glow plug
33	122735	GEHL
34	L82282	GEHL (4 places, 3places on canopy models)
35	164989 *	353 (2 places)
	164990 **	373 (2 places)


* Decals used on 353 only

** Decals used on 373 only

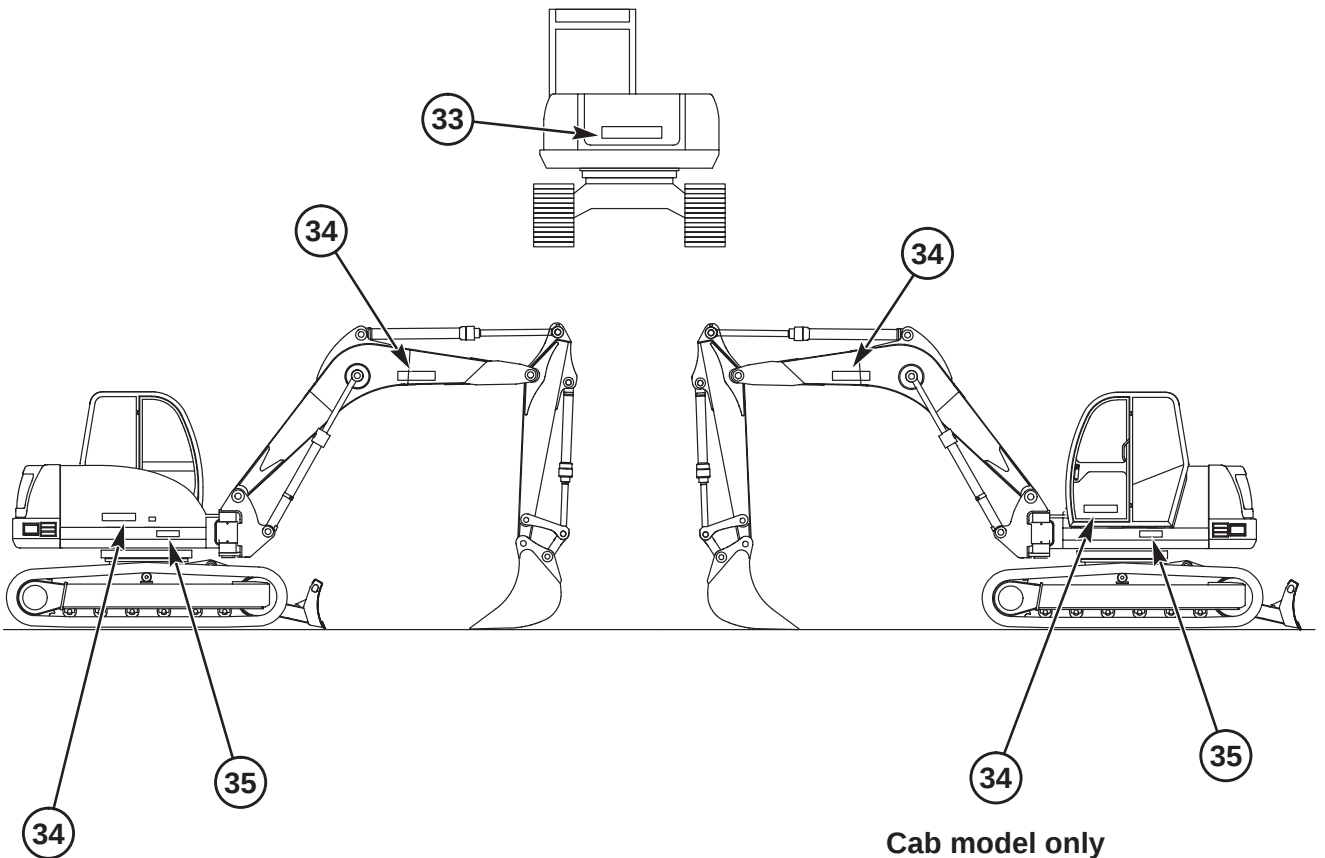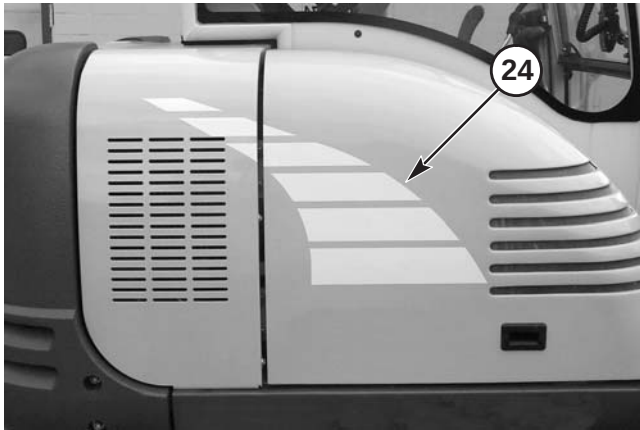

Cab model only

353 – UNDERCARRIAGE

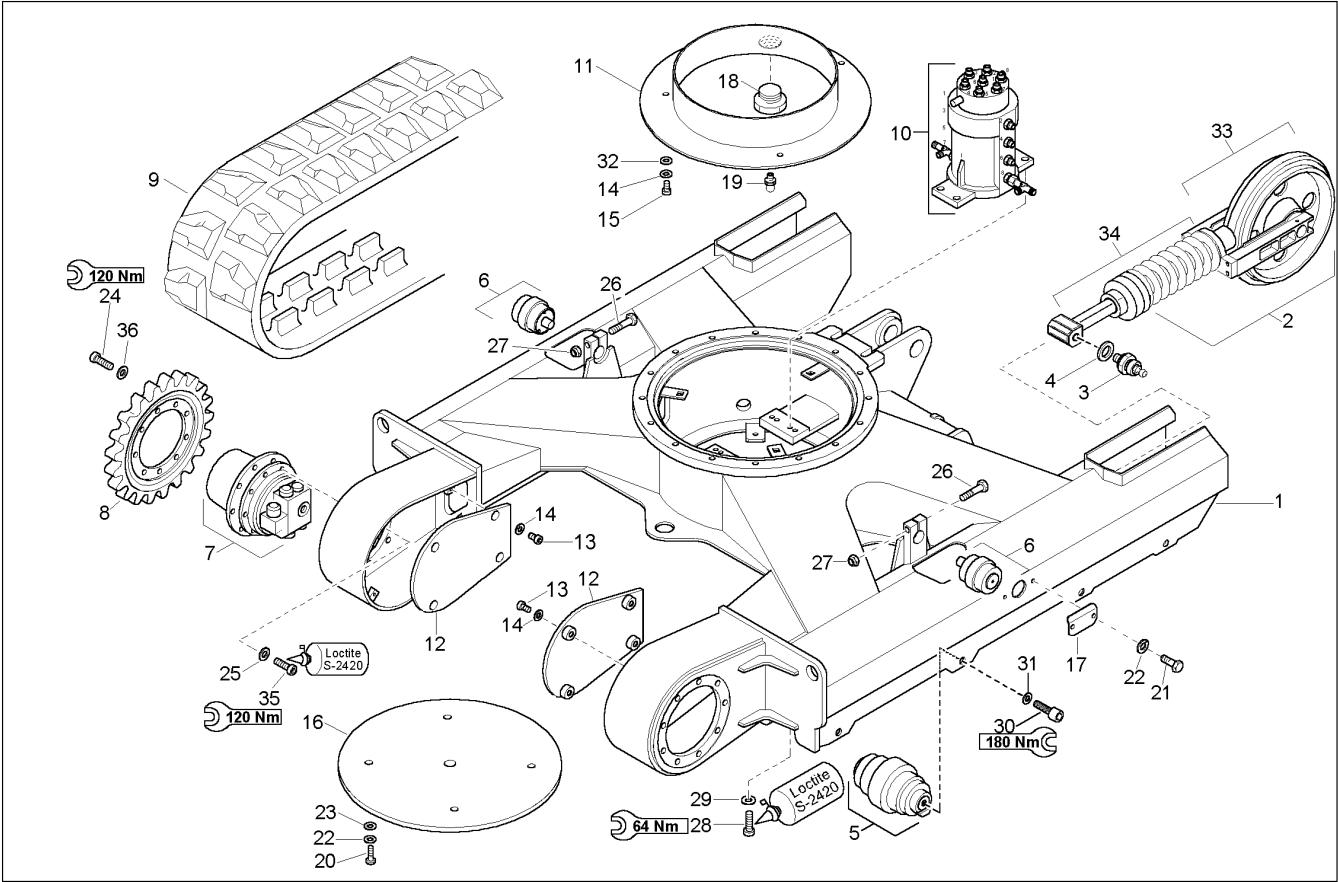

Ref. No.	Part No.	Description	Qty. Req.	Ref. No.	Part No.	Description	Qty. Req.
01	165717	UNDERCARRIAGE	1	19	161412	LUBRICATION NIPPLE	1
02	165605	TRACK TENSIONING COMPLETE	2	20	651391	CS M10–1.5 X 20	4
03	160638	NON RETURN VALVE	2	21	656090	CS M10–1.5 X 16	4
04	160865	SCREW SEAL	2	22	161669	RING/SNAP	8
05	165122	ROLLER COMPLETE	8	23	161640	WASHER/GR A 10.5	8
06	165124	ROLLER COMPLETE	2	24	651483	SHCS HS M12–1.7 X 35 10.9	18
07	160723	TRAVEL GEAR	2	25	161624	LW SPRING	18
08	165604	SPROCKET	2	26	651489	SHCS HS M12–1.7 X 65 10.9	2
09	165720	RUBBER CHAIN	2	27	651449	HLN INS M12–1.7	2
10	162526	SWIVEL JOINT	1	28	162022	SCREW	4
11	165602	BRACKET	1	29	161635	WASHER/NORD–LOCK NL 10 STUCK ..	4
12	165600	COVER	2	30	165945	SCREW	16
13	651515	SHCS HS M8–1.2 X 20 8.8	8	31	164920	WASHER	16
14	161676	RING/SNAP S8	11	32	161662	WASHER/GR A 8.4	3
15	656001	CS M8–1.2 X 20 C 8.8	3	33	165126	TENSION WHEEL + SLIDE PART	2
16	165598	COVER	1	34	165606	SPRING SET	2
17	162331	COVER	2	35	163628	SCREW	18
18	165119	PLUG	1				

Thanks for your reading.

Please click [here](#) to download complete manual instantly.

And can also choose other manuals.

Feel free ---> write to me with any questions.

Our service email:

manuals007@hotmail.com