

Manitowoc 18000

Service/Maintenance Manual



Grove

Manitowoc

National Crane

Potain





SERVICE/MAINTENANCE MANUAL

This manual has been prepared for and is considered part of -

18000

Crane Model Number

18001Ref

Crane Serial Number

This manual is divided into the following sections:


SECTION 1	INTRODUCTION
SECTION 2	HYDRAULIC SYSTEM
SECTION 3	ELECTRIC SYSTEM
SECTION 4	BOOM
SECTION 5	HOISTS
SECTION 6	SWING
SECTION 7	POWER TRAIN
SECTION 8	UNDER CARRIAGE
SECTION 9	LUBRICATION
SECTION 10	TROUBLESHOOTING

NOTICE

The serial number of the crane and applicable attachments (i.e. luffing jib, MAX-ER®) is the only method your Manitowoc dealer or the Manitowoc Crane Care Lattice Team has of providing you with correct parts and service information.

The serial number is located on a crane identification plate attached to the operator's cab and each attachment. Refer to the Nameplate and Decal Assembly Drawing in Section 2 of this manual for the exact location of the crane identification plate.

Always furnish serial number of crane and its attachments when ordering parts or discussing service problems with your Manitowoc dealer or the Manitowoc Crane Care Lattice Team.

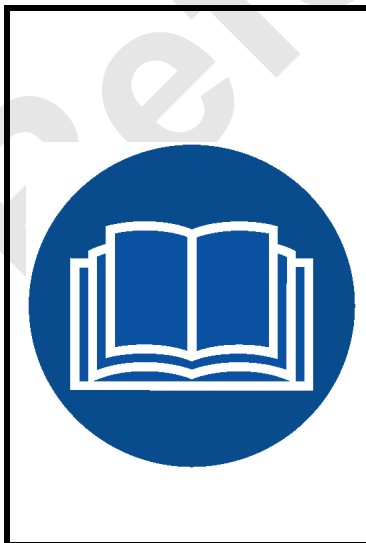

⚠ WARNING

To prevent death or serious injury:

- Avoid unsafe operation and maintenance.
Crane and attachments must be operated and maintained by trained and experienced personnel. Manitowoc is not responsible for qualifying these personnel.
- Do not operate or work on crane or attachments without first reading and understanding instructions contained in Operator Information Manual and Service Manual supplied with crane and applicable attachments.
- Store Operator Information Manual and Service Manual in operator's cab.
If Operator Information Manual or Service Manual is missing from cab, contact your Manitowoc dealer for a new one.

THE ORIGINAL LANGUAGE OF THIS PUBLICATION IS ENGLISH

See end of this manual for Alphabetical Index

SECTION 1	Introduction
Continuous Innovation	1-1
Safety Messages	1-1
General	1-1
Safety Alert Symbol	1-1
Signal Words	1-1
Safe Maintenance Practices	1-2
Maintenance Instructions	1-2
Safe Maintenance Practices	1-2
Environmental Protection	1-3
Identification and Location of Components	1-4
Basic Crane	1-4
Front	1-5
Top	1-6
Left Side	1-7
Left Side – S/N18001082 & Newer	1-8
Right Side	1-9
Rear	1-10
Carbody/Crawler	1-11
Operator Cab/Controls	1-12
Cummins Engine Tier 3	1-13
Cummins Engine Tier 4	1-14
Boom Butt and Insert	1-16
Mast Butt	1-17
Description of Operation	1-18
General Abbreviations	1-18
Solenoid Valve Identification	1-18
General Operation	1-19
Hydraulic Components	1-20
Main Pressure Monitoring	1-22
Accessory Systems	1-22
Basic Operation	1-23
Engine Controls	1-24
Drum Identification	1-25
Epic® Control System	1-26
CAN-Bus	1-26
Digital Display	1-26
Rated Capacity Indicator/Limiter (RCL)	1-26
Crane Modes	1-27
Electrical Power to Operator’s Cab	1-27
Pressure Senders and Speed Sensors	1-27
System Faults	1-28
Engine Faults (Tier 4)	1-28
Operating Faults and Limit Switches	1-28
Brake and Drum Pawl Operation	1-28
Swing System Operation	1-30
Swing System Components	1-30
Swing Brake and Swing Lock	1-30
Swing Right or Left	1-30
Swing Holding Brake Switch	1-31
Travel System Operation	1-34
Travel System Components	1-34
Travel Brakes	1-34
Travel Forward and Reverse	1-34
Two-Speed Travel Operation	1-37
Travel Cruise	1-37

Boom Hoist System Operation	1-38
Boom Hoist System Components	1-38
Boom Hoist Brake and Pawl	1-38
Boom Hoist Raise	1-38
Boom Hoist Lower	1-41
Main Hoist 1 System	1-42
Main Hoist 1 System Components	1-42
Main Hoist 1 Drum Brake	1-42
Main Hoist 1 Raising	1-42
Main Hoist 1 Lowering	1-45
Whip Line Hoist (Drum 3) System	1-46
Whip Line Hoist System Components	1-46
Whip Line Drum Brake	1-46
Whip Line Hoist Raising	1-46
Whip Line Hoist Lowering	1-49
Main Hoist 2 System	1-50
Main Hoist 2 System Components	1-50
Main Hoist 2 Drum Brake	1-50
Main Hoist 2 Raising	1-50
Main Hoist 2 Lowering	1-53
Mast Hoist Drum 5 System	1-54
Mast Hoist System Components	1-54
Mast Hoist Brake and Pawl	1-54
Mast Raising Cylinders	1-54
Mast Hoist Raising from Transport Position	1-54
Mast Hoist Raising to Transport Position	1-58
Luffing Jib Drum 6 (Optional) System	1-60
Luffing Jib System Components	1-60
Luffing Jib Brake and Pawl	1-60
Luffing Jib Raise	1-60
Luffing Jib Lower	1-62
Accessory System Components	1-63
Accessory Systems	1-63
Jacking Cylinders	1-64
Boom Hinge Pins	1-68
Adapter Frame Pins	1-70
Mast Pins	1-72
Rigging Winch (Drum 7)	1-74
Cab Tilt	1-76
Crawler Pin Cylinders	1-78
Crawler Pin Cylinders	1-78

SECTION 2. Hydraulic System

Hydraulic Schematics	2-1
Hydraulic System – General	2-1
Checking and Replacing Hydraulic Hoses	2-1
Hydraulic System Maintenance	2-2
Safety	2-2
Storing and Handling Oil	2-2
Storing and Handling Parts	2-2
Inspecting System	2-2
Hydraulic Tank Heater	2-3
Replacing Filters	2-6
Charge Filters	2-7
Return Filters	2-8
Replacing Desiccant Breather	2-9

Changing Oil	2-9
Servicing Pumps	2-10
Tightening Hydraulic Connections	2-12
Pipe Thread Connection	2-12
SAE Straight Thread Connection	2-12
ORS Connection	2-13
Split Flange Connection	2-14
SAE Flare Connection	2-15
Pressure Sender Replacement	2-17
Disc Brake Operational Test	2-18
Shop Procedures	2-20
Initial Oil Fill	2-20
Initial Engine Start-Up	2-20
Accessory System Checks	2-21
Travel Handle and Speed Check	2-23
Swing and Drum Speed Checks	2-23
Hydraulic System Specifications - 18000	2-24
Pumps	2-25
Motors	2-27
Hydraulic System Calibration Procedures	2-28
Calibration Description	2-28
Pressure Sender Calibration	2-28
Control Calibration	2-30
Pump Pressure Test	2-31
Charge Pressure Check	2-32
Hydraulic System Adjustment Procedures	2-36
High Pressure Adjustment	2-36
Charge Pressure Adjustment	2-37
Pump Neutral Adjustment	2-37
Motor Leakage Test	2-38
Loop Flushing Valve Adjustment	2-38
Manual Override Tests	2-38
Counterbalance Valves Adjustment	2-40
Hydraulic Tank Level Sensor Calibration	2-43
Empty Calibration	2-43
Full Cold Calibration	2-43

SECTION 3 Electric System

Electrical Schematics	3-1
Checking and Replacing Electrical Components	3-1
Circuit Breaker Identification	3-2
Test Voltages	3-3
CAN Bus Nodes	3-3
Pumps and Motors	3-4
Alphabetical Index of Components	3-5
Node Heading Descriptions	3-5
Abbreviations	3-29
Checking Electrical Inputs/Outputs	3-30
Control Handle Voltages	3-30
Dielectric Grease	3-33
Digital Display	3-34
Crane Operating Conditions	3-34
Operating Limits	3-34
System Faults	3-35
Function Speed/Torque Adjustment	3-40
Adjustment	3-40

Crane Diagnostics	3-40
General	3-40
Drum 1	3-40
Drum 2	3-41
Drum 3	3-41
Drum 4	3-41
Drum 5	3-42
Drum 6	3-42
Swing (Crane)	3-42
Trk (Travel)	3-43
FCN (Front Console Node)	3-43
CAN (Can Bus)	3-44
Hydraulic System Calibration	3-45
Speed/Torque	3-45
Accessory System	3-45
Wireless	3-46
Block Level Sensor	3-46
Crane Mode	3-46
Hydraulic Fan (Tier 4 only)	3-46
Digital Input and Output Item Tables	3-47

SECTION 4. Boom

Automatic Boom Stop Adjustment	4-1
Maximum Operating Angles	4-1
Operation	4-1
Maintenance	4-1
Bypass Limit Test	4-2
Adjustment	4-5
Actuator Rod Replacement	4-5
Physical Boom Stop	4-6
Boom and Luffing Jib Angle Indicator Calibration	4-7
Mast Angle Indicator Adjustment	4-7
Mast Angle Indicator	4-7
Strap Inspection and Maintenance	4-9
Inspection	4-9
Identifying Straps	4-9
Replacement Specifications	4-10
Storing Straps	4-12
Removing Straps from Service	4-12
Inspection Checklist	4-12
Lattice Section Inspection and Lacing Replacement	4-15

SECTION 5. Hoists

Hoist Drawings	5-1
Boom Hoist Pawl Adjustment	5-1
General	5-1
Actuator Removal	5-1
Actuator Installation and Adjustment	5-1
Mast Hoist Pawl Maintenance	5-3
General	5-3
Maintenance	5-3
Speed Sensor Adjustment	5-4
Hydraulic Motors with Speed Sensors	5-4
Speed Sensor Replacement	5-4
Speed Sensor Adjustment	5-4
Bail Limit Adjustment	5-6

Weekly Maintenance	5-6
Adjustment.	5-6
Electrical Wiring	5-6
Block-Up Limit Adjustment	5-8
General	5-8
Operation.	5-8
Installation	5-8
Load Block Level Transmitter	5-8
Disconnecting Block-Up Limit Control	5-12
Removing Upper Boom Point or Jib Point	5-13
Storing Electric Cable	5-13
Maintenance	5-13
Adjustment.	5-14
Wire Rope Inspection and Replacement	5-15
Wire Rope Lubrication	5-15
Maintain a Wire Rope Condition Report	5-15
Periodic Comprehensive Inspection	5-17
Replacement Criteria	5-17
Distributing Wire Rope Wear	5-19
Sheave, Roller, and Drum Inspection.	5-19
Load Block and Hook-and-Weight Ball Inspection	5-22
Daily Inspection	5-22
Yearly Inspection	5-24
SECTION 6	Swing
Manual Release of Swing Brake and Lock.	6-1
Manual Release Procedure	6-1
SECTION 7	Power Train
Battery Maintenance.	7-1
Safety Information	7-1
Causes Of Battery Failure	7-1
Multiple Battery System	7-1
Maintenance	7-2
Open-Circuit Voltage Test	7-2
High Resistance Test.	7-3
Quarterly	7-3
Charging	7-3
Storage	7-3
Battery Disconnect Switch	7-3
Engine Diagnostics.	7-4
General	7-4
On-Board Engine Diagnostics	7-4
Engine Air Cleaner Maintenance	7-6
Tier 3 and Past Production	7-6
Inspection	7-6
Service.	7-6
Tier 4 Current Production	7-8
Inspection	7-8
Service.	7-8
Engine Clutch Adjustment	7-10
Operation.	7-10
Adjustment.	7-10
Engine Throttle Adjustment	7-12
Foot Throttle Controller.	7-12
Assembly	7-12

Calibration	7-12
Engine Speed Calibration	7-12
Engine Cooling System	7-13
General	7-13
Operation	7-13
Maintenance	7-14
Engine Belt Routing	7-16
Tier 3 Engine	7-16
Tier 4 Engine	7-16
Diesel Particulate Filter — Tier 4	7-17
General	7-17
Regeneration	7-17
Maintenance	7-18

SECTION 8. Under Carriage

Turntable Bearing Bolt Torque	8-1
Torque Requirements	8-1
Crawler Adjustment	8-3
Maintenance	8-3
Tread Slack Adjustment	8-3
Hydraulic Hand Pump	8-5
Assembly	8-5
Maintenance	8-5
Air Removal	8-5
Operation	8-5

SECTION 9. Lubrication

Lubrication	9-1
-------------------	-----

SECTION 10. Troubleshooting

General Troubleshooting	10-1
Safety Summary	10-1
General Troubleshooting	10-1
Troubleshooting Charts	10-2
Troubleshooting Charts	10-3

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com