

# Manitowoc 2250

## Service/Maintenance Manual



Grove

Manitowoc

National Crane

Potain







# SERVICE/MAINTENANCE MANUAL

This manual has been prepared for and is considered part of -

**2250**

Model Number

**XXXXXREF**

Serial Number

This manual is divided into the following Sections:


<b>SECTION 1</b>	<b>INTRODUCTION</b>
<b>SECTION 2</b>	<b>HYDRAULIC AND AIR SYSTEMS</b>
<b>SECTION 3</b>	<b>ELECTRICAL SYSTEM</b>
<b>SECTION 4</b>	<b>BOOM</b>
<b>SECTION 5</b>	<b>HOISTS</b>
<b>SECTION 6</b>	<b>SWING</b>
<b>SECTION 7</b>	<b>POWER TRAIN</b>
<b>SECTION 8</b>	<b>UNDERCARRIAGE</b>
<b>SECTION 9</b>	<b>LUBRICATION</b>
<b>SECTION 10</b>	<b>TROUBLESHOOTING</b>

## NOTICE

The serial number of the crane and applicable attachments (Luffing Jib, MAX-ER<sup>®</sup>) is the only method your Manitowoc dealer or the Manitowoc Crane Care Lattice Team has of providing you with correct parts and service information.

The serial number is located on a crane identification plate attached to the operator's cab and each attachment. Refer to the Nameplate and Decal Assembly Drawing in Section 2 of this manual for the exact location of the crane identification plate.

**Always furnish serial number of crane and its attachments** when ordering parts or discussing service problems with your Manitowoc dealer or the Manitowoc Crane Care Lattice Team.

	<b>⚠ WARNING</b>
	<p><b>To prevent death or serious injury:</b></p> <ul style="list-style-type: none"><li>• Avoid unsafe operation and maintenance. Crane and attachments must be operated and maintained by trained and experienced personnel. Manitowoc is not responsible for qualifying these personnel.</li><li>• Do not operate or work on crane or attachments without first reading and understanding instructions contained in Operator Information Manual and Service Manual supplied with crane and applicable attachments.</li><li>• Store Operator Information Manual and Service Manual in operator's cab. If Operator Information Manual or Service Manual is missing from cab, contact your Manitowoc dealer for a new one.</li></ul>

***THE ORIGINAL LANGUAGE OF THIS PUBLICATION IS ENGLISH***

See end of this manual for Alphabetical Index

<b>SECTION 1</b> .....	<b>Introduction</b>
Continuous Innovation .....	1-1
Safety Messages .....	1-1
General .....	1-1
Safety Alert Symbol .....	1-1
Signal Words .....	1-1
Safe Maintenance Practices .....	1-1
Maintenance Instructions .....	1-2
Safe Maintenance Practices .....	1-2
Environmental Protection .....	1-4
Identification and Location of Components .....	1-5
Tier 4 Final Engine Components .....	1-18
Crane Description of Operation .....	1-21
General Operation .....	1-21
Hydraulic Components .....	1-22
Monitoring the Main Pressure .....	1-24
Basic Operation .....	1-24
Accessory Systems .....	1-27
Pressurized Air Supply .....	1-28
Engine Controls .....	1-29
Drum Identification .....	1-29
EPIC® Programmable Controller (PC) .....	1-30
Swing System Operation .....	1-36
Travel System Operation .....	1-38
Boom Hoist/Luffing Jib System Operation .....	1-41
Load Drum System—Full Power .....	1-44
Load Drum System—Free Fall .....	1-50
Upper Accessory System Components .....	1-53
Lower Accessory System Components .....	1-61
Air System Components .....	1-68
Hydraulic Quick Disconnect .....	1-69
MAX-ER® 2000 Description Of Operation .....	1-71
MAX-ER Components .....	1-71
EPIC® Programmable Controller .....	1-74
Backhitch Pins .....	1-78
Tongue Cylinder .....	1-79
Counterweight Jack Cylinders .....	1-81
Steering Pin Cylinders .....	1-84
Steering Arm Cylinders .....	1-86
Counterweight Strap Cylinders .....	1-88
Mast Stop Raising And Boom Stop .....	1-91
Mast Stop .....	1-92
Luffing Jib Stop Cylinders .....	1-93
Drum 9 Operation .....	1-94
Hydraulic Cooler Fan Drive .....	1-98
Description .....	1-98
Maintenance .....	1-98
<b>SECTION 2</b> .....	<b>Hydraulic and Air Systems</b>
Hydraulic Schematics .....	2-1
Hydraulic System—General .....	2-1
Checking and Replacing Hydraulic Hoses .....	2-1
Hydraulic System Maintenance .....	2-2
Safety .....	2-2
Storing and Handling Oil .....	2-2

Storing and Handling Parts . . . . .	2-2
Inspecting the System . . . . .	2-2
Servicing the Pumps . . . . .	2-3
Cleaning the Fill Cap Assembly . . . . .	2-3
Replacing the Suction Filter Element . . . . .	2-4
Changing the Oil . . . . .	2-5
Tightening the Hydraulic Connections . . . . .	2-7
General . . . . .	2-7
Pipe Thread Connection . . . . .	2-7
SAE Straight Thread Connection . . . . .	2-7
ORS® Connection . . . . .	2-8
Split Flange Connection . . . . .	2-8
SAE Flare Connection . . . . .	2-9
Programmable Controller Calibration Procedures . . . . .	2-10
General . . . . .	2-10
Calibrating the Pressure Sender . . . . .	2-10
Calibrating the Controls . . . . .	2-11
Replacing a Pressure Sender . . . . .	2-12
General . . . . .	2-12
Disc Brake Operational Test . . . . .	2-14
General . . . . .	2-14
Operational Test . . . . .	2-14
Shop Procedure . . . . .	2-16
General . . . . .	2-16
Initial Oil Fill . . . . .	2-17
Initial Startup . . . . .	2-18
Checking the Operating Pressure . . . . .	2-20
Checking the Auxiliary System Pressure . . . . .	2-21
Unloader Pilot Valve Maintenance . . . . .	2-25
General . . . . .	2-25
Adjustment . . . . .	2-25
Maintenance . . . . .	2-25
Moisture Ejector Valve Maintenance . . . . .	2-26
General . . . . .	2-26
Control Handle Positions . . . . .	2-26
Operational Checks . . . . .	2-26
Air System Filter Maintenance . . . . .	2-27
General . . . . .	2-27
Daily Maintenance . . . . .	2-27
Monthly Maintenance . . . . .	2-27
Automatic Drain Valve Operation . . . . .	2-28
Air System De-icer Maintenance . . . . .	2-28
Operation . . . . .	2-28
Adjusting . . . . .	2-29
Maintenance . . . . .	2-29
Filling . . . . .	2-29
Air Dryer Maintenance . . . . .	2-30
Description . . . . .	2-30
Replacing the Desiccant Cartridge . . . . .	2-30
Breather Vent Maintenance . . . . .	2-32
Solenoid Valve Maintenance . . . . .	2-32
Operation . . . . .	2-32
Air Line Connection . . . . .	2-32
Electrical Connection . . . . .	2-32
Maintenance . . . . .	2-33
Quick Release Valve Maintenance . . . . .	2-34
General . . . . .	2-34

Adjustment . . . . . 2-34  
 Maintenance . . . . . 2-34  
 Operation . . . . . 2-34  
 Air Pressure Safety Switches Maintenance . . . . . 2-36  
     General . . . . . 2-36  
     Operation . . . . . 2-36  
     Adjustment Requirements . . . . . 2-36  
     Adjustment . . . . . 2-37  
 Shuttle Valve Maintenance . . . . . 2-38  
     General . . . . . 2-38  
     Operation . . . . . 2-38  
     Maintenance . . . . . 2-38  
 Type A Air Regulator Maintenance . . . . . 2-39  
     Installation . . . . . 2-39  
     Adjustment . . . . . 2-39  
     Maintenance . . . . . 2-39  
 N-1 Pressure-Reducing Valve Maintenance . . . . . 2-40  
     Operation . . . . . 2-40  
     Maintenance . . . . . 2-41  
     Adjustments . . . . . 2-41  
 Type S Relay Valve Maintenance . . . . . 2-42  
     General . . . . . 2-42  
     Operation . . . . . 2-42  
     Maintenance . . . . . 2-43

**SECTION 3 . . . . . Electrical System**

Electrical Drawings and Schematics . . . . . 3-1  
 Inspecting or Replacing Electrical Components . . . . . 3-1  
     Electrical Harnesses and Cables—Monthly or 200 Hour Service Life Inspection . . . . . 3-1  
     Electrical Junction Boxes—Monthly or 200 Hour Service Life Inspection . . . . . 3-1  
     Electrical Harnesses and Cables—Service Life . . . . . 3-1  
 Circuit Breaker and Fuse ID . . . . . 3-2  
     General . . . . . 3-2  
 Test Voltages For Crane Controller . . . . . 3-7  
     General . . . . . 3-7  
     Controller Board Layout . . . . . 3-7  
     Abbreviations . . . . . 3-7  
     Crane Controller Pin, Wire, and Description Identification . . . . . 3-8  
     Master Node Pin Identification . . . . . 3-14  
 Model 2250 MAX-ER 2000® Test Voltages . . . . . 3-16  
     General . . . . . 3-16  
     Controller Board Layout . . . . . 3-16  
     Abbreviations . . . . . 3-16  
     MAX-ER Controller Pin Identification . . . . . 3-17  
 Digital Display Readings . . . . . 3-19  
     General . . . . . 3-19  
     Operating Conditions . . . . . 3-19  
     Operating Limits . . . . . 3-19  
     System Faults . . . . . 3-20  
     Selecting Display Language . . . . . 3-20  
     Drum Identification . . . . . 3-27  
 Diagnostic Display . . . . . 3-28  
     General . . . . . 3-28  
     Drums 1, 2, and 3 (crane load drums) . . . . . 3-28  
     Drum 4 (boom hoist) . . . . . 3-28  
     Drum 5 (luffing or auxiliary hoist) . . . . . 3-28

Drum 9 (MAX-ER 2000 load drum) . . . . .	3-28
Swing (crane) . . . . .	3-29
Track (crane crawlers) . . . . .	3-29
Mast Accumulator . . . . .	3-29
MXR (MAX-ER 2000) . . . . .	3-29
A1 (handles) . . . . .	3-30
A2 (programmer's screen) . . . . .	3-30
D1 and D2 (digital outputs and inputs) . . . . .	3-31
Programmable Controller (PC) I/O Board Fault Troubleshooting . . . . .	3-35
General . . . . .	3-35
Troubleshooting Procedure . . . . .	3-36
CPU EPROM Replacement . . . . .	3-37
Dielectric Grease . . . . .	3-37

**SECTION 4 . . . . . Boom**

Automatic Boom Stop . . . . .	4-1
General . . . . .	4-1
Operation . . . . .	4-2
Maintenance . . . . .	4-2
Adjustments . . . . .	4-2
Setup Boom Stop Angle . . . . .	4-4
Physical Boom Stop . . . . .	4-6
General . . . . .	4-6
Operation . . . . .	4-6
Maintenance . . . . .	4-6
Lowering the Boom Stop to the Shipping Position . . . . .	4-6
Raising the Boom Stop to the Working Position . . . . .	4-8
Adjustments . . . . .	4-8
Angle Indicator Sending Unit Assembly . . . . .	4-8
General . . . . .	4-8
Disconnecting the Luffing Jib Angle Indicator Sending Unit Assembly . . . . .	4-10
Angle Indicator Sending Unit . . . . .	4-11
Adjusting the Angle Indicator Sender . . . . .	4-12
Boom Hoist Ratchet and Pawl Adjustment . . . . .	4-14
General . . . . .	4-14
Adjusting the Pawl Limit Switch . . . . .	4-14
Adjusting the Tension on the Return Spring . . . . .	4-14
Strap Inspection and Maintenance . . . . .	4-16
Inspection . . . . .	4-16
Identifying Straps . . . . .	4-16
Strap Replacement Specifications . . . . .	4-17
Storing Straps . . . . .	4-20
Removing Straps from Service . . . . .	4-20
Strap Inspection Checklist . . . . .	4-20
Lattice Section Inspection and Lacing Replacement . . . . .	4-20

**SECTION 5 . . . . . Hoists**

Adjusting the Minimum Bail Limit . . . . .	5-1
General . . . . .	5-1
Weekly Maintenance . . . . .	5-1
Removing the Wire Rope . . . . .	5-2
Electrical Wiring . . . . .	5-3
Adjusting the Minimum Bail Limit . . . . .	5-3
Adjusting the Block-up Limit Control . . . . .	5-3
General . . . . .	5-3
Block-Up Limit Control Operation . . . . .	5-3



Load Block Level Transmitter . . . . . 5-4  
 Installation . . . . . 5-5  
 Storing the Electrical Cords . . . . . 5-6  
 Disconnecting the Block-Up Limit Control . . . . . 5-6  
 Removing the Jib or Boom Point . . . . . 5-6  
 Maintenance . . . . . 5-7  
 Adjustment . . . . . 5-7  
 Inspecting and Adjusting the Drum Brake . . . . . 5-8  
 Description . . . . . 5-8  
 Inspecting and Adjusting the Brake . . . . . 5-8  
 Checking the Treadle Valve . . . . . 5-12  
 Adjusting the Treadle Valve . . . . . 5-12  
 Overhauling the Brake Actuator . . . . . 5-12  
 Adjusting the Brake Release . . . . . 5-14  
 Inspecting and Adjusting the Drum Clutch—Standard . . . . . 5-16  
 Description . . . . . 5-16  
 Inspection and Adjustment . . . . . 5-16  
 Band Disassembly and Assembly Notes . . . . . 5-19  
 Overhauling the Clutch Cylinder . . . . . 5-19  
 Inspecting and Adjusting the Drum Clutch— Right Rear Drum Clutch (421339) . . . . . 5-21  
 General . . . . . 5-21  
 Inspection and Adjustment . . . . . 5-22  
 Band Disassembly and Assembly Notes . . . . . 5-23  
 Marking the Cylinder Rod . . . . . 5-24  
 Gearbox Cooling Blower . . . . . 5-24  
 Adjusting the Slack Line Sensor . . . . . 5-25  
 General . . . . . 5-25  
 Adjusting the Light Sensor . . . . . 5-25  
 Calibrating the Slack Line Indicator . . . . . 5-25  
 Adjusting the Drum Pawl . . . . . 5-26  
 General . . . . . 5-26  
 Adjusting the Limit Switch . . . . . 5-26  
 Return Spring . . . . . 5-26  
 Wire Rope Lubrication . . . . . 5-27  
 Inspecting and Replacing Wire Rope . . . . . 5-27  
 General . . . . . 5-27  
 Keeping Records . . . . . 5-27  
 Inspecting Wire Rope . . . . . 5-28  
 Inspecting Rope not in Regular Use . . . . . 5-28  
 Replacing Wire Rope . . . . . 5-28  
 Distributing Wire Rope Wear . . . . . 5-30  
 Inspecting Sheaves, Rollers, And Drums . . . . . 5-31  
 Inspecting the Load Block and Hook-And-Weight Ball . . . . . 5-34

**SECTION 6 . . . . . Swing**

Manual Release of Swing Brake . . . . . 6-1  
 Manual Release Procedure . . . . . 6-1

**SECTION 7 . . . . . Power Train**

Battery Maintenance . . . . . 7-1  
 Safety Information . . . . . 7-1  
 Causes of Battery Failure . . . . . 7-1  
 Multiple-Battery System . . . . . 7-2  
 Maintenance . . . . . 7-2  
 Charging . . . . . 7-3  
 Storage . . . . . 7-3

Battery Disconnect Switch	7-3
Engine Diagnostics	7-4
General	7-4
Diagnostic Lights	7-4
Engine Off Diagnostics	7-5
Engine Air Cleaner Maintenance	7-6
Inspection	7-6
Engine Cooling System Fill	7-8
General	7-8
Cooling System Operation	7-8
Maintenance	7-9
Draining the Radiator	7-10
Filling the Radiator	7-10
Engine Throttle Adjustment	7-11
Engine Belt Routing	7-12
Diesel Particulate Filter (DPF) Regeneration	7-12
General	7-12
Regeneration	7-12
Exhaust Aftertreatment system	7-13
Diesel Exhaust Fluid (DEF) Tank	7-13
Coolant Solenoid Valve	7-13
Coolant Manifold	7-13
Diesel Exhaust Fluid (DEF) Supply Pump	7-14
Selective Catalytic Reduction (SCR) Module	7-14
Excessive NO <sub>x</sub> Warning System	7-14
Aftertreatment Protection System (APS)	7-14
Decomposition Reactor Tube (DRT)	7-14
Diesel Exhaust Fluid (DEF) Dosing Module	7-14
Diesel Oxidation Catalyst (DOC)/Diesel Particulate Filter (DPF) Module	7-14
Diesel Exhaust Fluid (DEF) Heating and Cooling System	7-15
Pump Drive Disconnect	7-16
General	7-16
Adjustment	7-16

**SECTION 8 . . . . . UnderCarriage**

Turntable Bearing Bolt Torque	8-1
Installing the Turntable Bearing	8-1
Torque Requirements	8-1
Replacing the Turntable Bearing Bolts	8-2
Crawler Adjustment	8-2
Maintenance	8-2
Adjusting the Tread Slack	8-2
Hydraulic Hand Pump	8-4
Assembly	8-4
Maintenance	8-4
Removing Air from the Cylinder	8-4
Operating the Pump	8-5
Rotating Bed Level Sensor	8-6
Resetting the Level Sensor to Zero	8-6
Recalibrating the Level Sensor	8-6

**SECTION 9 . . . . . Lubrication**

Lubrication Guide	9-1
Lube and Coolant Product Guide	9-1

**SECTION 10 . . . . . Troubleshooting**

Basic Troubleshooting . . . . . 10-1

Safety Summary . . . . . 10-1

General Guidelines . . . . . 10-2

Test Equipment . . . . . 10-2

Troubleshooting Charts . . . . . 10-3

Testing Components . . . . . 10-34

    Test 1—Testing the Battery (12 and 24 volts DC) . . . . . 10-34

    Test 2—Checking Resistance at the Engine Temperature Switch . . . . . 10-35

    Test 3—Checking Resistance at the Engine Oil Pressure Switch . . . . . 10-36

    Test 4—Testing the Pump EDC and Motor PCP . . . . . 10-37

    Test 5—Cleaning and Adjusting the Engine RPM Transducer . . . . . 10-38

    Test 6—Location of Motor Ports . . . . . 10-39

    Test 7—Testing for Pump and Motor Leakage . . . . . 10-40

    Test 8—Location of Pump Ports . . . . . 10-41

    Test 9—Checking Voltage at the Hydraulic Brake Valve . . . . . 10-42

    Test 10—Manually Stroking the Pump . . . . . 10-43

    Test 11—Testing for Voltage at the Fuse Box . . . . . 10-44

    Test 12—Checking Voltage at the Control Handle . . . . . 10-45

    Test 13—Adjusting the Control Handle Potentiometer . . . . . 10-46

    Test 14—Checking System Voltage at the Air Solenoid Panel . . . . . 10-47

    Test 15—Checking System Voltage at the Hydraulic Valve Assemblies . . . . . 10-48

    Test 16—Checking the Pump Charge Pressure and Electrical Test . . . . . 10-50

    Test 17—Setting the Pump Pressure . . . . . 10-51

    Test 18—Adjusting the Pump Charge Pressure Relief . . . . . 10-52

    Test 19—Setting Pump Neutral . . . . . 10-53

    Test 20—Checking Voltage at the Speed Encoders . . . . . 10-54

    Test 21—Adjusting the Counterbalance Valves . . . . . 10-55

    Test 22—Servicing the Motor Loop Flushing (Purge) Valves . . . . . 10-56

    Test 23—Checking the Hydraulic Brake Pressure . . . . . 10-57

    Test 24—Checking and Adjusting the Auxiliary System Working Pressure . . . . . 10-58

    Test 25—Checking Pin Cylinder Seals . . . . . 10-60

    Test 26—Actuating the Solenoid Valve Manual Overrides . . . . . 10-61

*THIS PAGE INTENTIONALLY LEFT BLANK*

**Thanks for your reading.**

**Please click here to download complete manual instantly.**

**And can also choose other manuals.**

**Feel free --->write to me with any questions.**

**Our service email:**

**manuals007@hotmail.com**