

# Grove GRT880

## Service Manual





# SERVICE MANUAL

This Manual has been prepared for and is considered part of -

## GRT880

Crane Model Number

Crane Serial Number


This Manual is Divided into the following Sections:

SECTION 1	INTRODUCTION
SECTION 2	HYDRAULIC SYSTEM
SECTION 3	ELECTRICAL SYSTEM
SECTION 4	BOOM
SECTION 5	HOIST AND COUNTERWEIGHT
SECTION 6	SWING SYSTEM
SECTION 7	POWER TRAIN
SECTION 8	UNDERCARRIAGE
SECTION 9	MAINTENANCE AND LUBRICATION

### NOTICE

The crane serial number is the only method your distributor or the factory has of providing you with correct parts and service information.

The crane serial number is identified on the builder's decal attached to the operator's cab. **Always furnish crane serial number** when ordering parts or communicating service problems with your distributor or the factory.

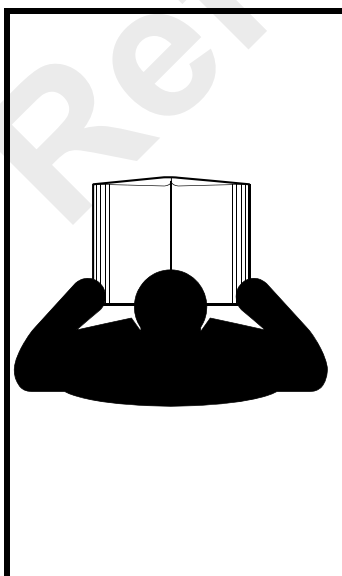

## DANGER

**An untrained operator subjects himself and others to death or serious injury. Do not operate this crane unless:**

- You are trained in the safe operation of this crane. Manitowoc is not responsible for qualifying personnel.
- You read, understand, and follow the safety and operating recommendations contained in the crane manufacturer's manuals and load charts, your employer's work rules, and applicable government regulations.
- You are sure that all safety signs, guards, and other safety features are in place and in proper condition.
- The Operator Manual and Load Chart are in the holder provided on crane.

---

 **CALIFORNIA  
PROPOSITION 65 WARNING**

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

---

---

 **CALIFORNIA  
PROPOSITION 65 WARNING**

Battery posts, terminals, and related accessories contain chemical lead and lead compounds, chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Wash hands after handling.

---

The original language of this publication is English.

TABLE OF CONTENTS

**SECTION 1 . . . . . Introduction**

- General . . . . . 1-1
  - Overview of Manuals . . . . . 1-1
  - Customer Support . . . . . 1-2
  - General Crane Design . . . . . 1-2
  - Specific Crane Description . . . . . 1-2
  - Lifting Capacities (Load Chart) . . . . . 1-2
  - Basic Components . . . . . 1-2
  - Axle Weight Distribution . . . . . 1-2
  - Serial Number Location . . . . . 1-2
  - Transportation and Lifting Data . . . . . 1-2
- List Of Specifications . . . . . 1-3
  - General . . . . . 1-3
  - Dimensions . . . . . 1-3
  - Capacities . . . . . 1-3
  - Torque Converter . . . . . 1-3
  - Transmission . . . . . 1-3
  - Engine . . . . . 1-3
  - Axles . . . . . 1-3
  - Brakes . . . . . 1-3
  - Wheels and Tires . . . . . 1-3
  - Swing Gearbox . . . . . 1-3
  - Boom . . . . . 1-3
  - Swivel Assembly . . . . . 1-3
  - Hydraulic Pumps . . . . . 1-4
  - Hoists . . . . . 1-4
  - Crane Nomenclature . . . . . 1-7
- General Maintenance . . . . . 1-8
  - Cleanliness . . . . . 1-8
  - After Cleaning . . . . . 1-8
  - Removal and Installation . . . . . 1-8
  - Disassembly and Assembly . . . . . 1-8
  - Pressing Parts . . . . . 1-9
  - Locking Devices . . . . . 1-9
  - Wires and Cables . . . . . 1-9
  - Shims . . . . . 1-9
  - Hoses and Tubes . . . . . 1-9
  - Bearings . . . . . 1-10
  - Gaskets . . . . . 1-10
  - Batteries . . . . . 1-10
  - Hydraulic Systems . . . . . 1-11
  - Hydraulic Fittings . . . . . 1-12
  - Electrical System . . . . . 1-14
  - Fatigue of Welded Structures . . . . . 1-14
  - Loctite® . . . . . 1-14
  - Fasteners and Torque Values . . . . . 1-15
  - Weld Studs . . . . . 1-28
- Wire Rope . . . . . 1-29
  - General . . . . . 1-29
  - Environmental Conditions . . . . . 1-29
  - Dynamic Shock Loads . . . . . 1-29
  - Lubrication . . . . . 1-29
  - Precautions and Recommendations During Inspection or Replacement . . . . . 1-29
  - Wire Rope Inspection (Running Ropes and Pendant Cables) . . . . . 1-30
  - Wire Rope Inspection (Boom Extension and Retraction Cables) . . . . . 1-31
  - Wire Rope Inspection/Replacement (All Wire Rope) . . . . . 1-31

TOC

Seizing Wire Rope . . . . . 1-32  
 Installing 35x7 Class Wire Rope . . . . . 1-33  
 Procedures for Cutting and Preparing  
 35x7 Class Wire Rope . . . . . 1-33

**SECTION 2. . . . . Hydraulic System**

Description . . . . . 2-3  
 Hydraulic Symbols . . . . . 2-3  
 Maintenance . . . . . 2-5  
     Preparation . . . . . 2-5  
     Hydraulic System Maintenance Precautions . . . . . 2-5  
     Label Parts when Disassembling . . . . . 2-5  
     Hydraulic Oil Recommendations . . . . . 2-5  
     Draining and Flushing . . . . . 2-5  
     Removing Air From the Hydraulic System . . . . . 2-6  
     Parts Replacement . . . . . 2-7  
     Directional Control Valves . . . . . 2-7  
     Visual Inspection of Hoses and Fittings . . . . . 2-8  
 Supply Pressure And Return Circuit . . . . . 2-9  
     Description . . . . . 2-9  
     Hydraulic Pump Distribution . . . . . 2-11  
     Troubleshooting . . . . . 2-12  
     Troubleshooting Aids . . . . . 2-13  
     Troubleshooting Procedures . . . . . 2-13  
     Hydraulic Oil Return Filter Assembly . . . . . 2-14  
     Fill Cap/Breather . . . . . 2-14  
 Oil Cooler . . . . . 2-16  
     Description . . . . . 2-16  
     Maintenance . . . . . 2-16  
 Hydraulic Pumps . . . . . 2-18  
     Description . . . . . 2-18  
     Maintenance . . . . . 2-20  
 Pressure Setting Procedures . . . . . 2-23  
     Checking/Setting the Piston Pumps Cut-off and Differential Pressures . . . . . 2-24  
     Checking/Setting the Main Directional Control Valve, Hoists, Lift, and  
     Telescope Pressures . . . . . 2-26  
     Checking/Setting the Pilot Supply Pressure . . . . . 2-30  
     Checking/Setting the Front Steer Pressure . . . . . 2-30  
     Checking/Setting the Swing Brake Release Pressure . . . . . 2-31  
     Checking the Swing Work Pressure . . . . . 2-31  
     Checking the Service Brake Accumulator Charging Valve Pressure . . . . . 2-32  
     Checking the Service Brake Accumulators Pre-charge . . . . . 2-33  
     Pre-charging the Accumulators . . . . . 2-34  
     Checking/Setting Cab Tilt, Counterweight Removal, and Counterweight  
     Pinning Pressures . . . . . 2-35  
     Checking/Setting the Outriggers, Rear Steer, and Hydraulic Transmission  
     Oil Cooler Fan Motor Pressures . . . . . 2-36  
     Checking/Setting the Axle Lockout Circuit Pressure . . . . . 2-38  
     Checking/Setting the Luffing Jib Pressure . . . . . 2-38  
 Valves . . . . . 2-39  
     General . . . . . 2-39  
 Main Directional Control Manifold Valve . . . . . 2-42  
     Description . . . . . 2-42  
     Maintenance . . . . . 2-42  
 Swing Manifold Valve . . . . . 2-46  
     Description . . . . . 2-46  
     Maintenance . . . . . 2-46

Compact Manifold Valve . . . . . 2-49  
 Description . . . . . 2-49  
 Maintenance . . . . . 2-49  
 Accessory Manifold Valve . . . . . 2-52  
 Description . . . . . 2-52  
 Maintenance . . . . . 2-52  
 Lift Cylinder and Telescope Cylinder Control Valves. . . . . 2-56  
 Description . . . . . 2-56  
 Maintenance . . . . . 2-56  
 Carrier Combination Manifold Valve . . . . . 2-57  
 Description . . . . . 2-57  
 Maintenance . . . . . 2-57  
 Outrigger Control Manifold. . . . . 2-61  
 Description . . . . . 2-61  
 Maintenance . . . . . 2-61  
 Range Shift/Park Brake Manifold Valve. . . . . 2-63  
 Description . . . . . 2-63  
 Maintenance . . . . . 2-63  
 Telescope and Tele Fill Stage Select Manifold Valve . . . . . 2-64  
 Description . . . . . 2-64  
 Maintenance . . . . . 2-64  
 Dual Accumulator Charge Manifold Valve. . . . . 2-66  
 Description . . . . . 2-66  
 Maintenance . . . . . 2-66  
 Hydraulic Brake Accumulator . . . . . 2-68  
 Description . . . . . 2-68  
 Maintenance . . . . . 2-68  
 Cylinders . . . . . 2-69  
 Cylinder Rod Surface Protection. . . . . 2-69  
 Leak Check . . . . . 2-69  
 Temperature Effects On Hydraulic Cylinders . . . . . 2-70

**SECTION 3 . . . . . Electrical System**

Description. . . . . 3-1  
 General . . . . . 3-1  
 Alternator . . . . . 3-1  
 Batteries and Battery Disconnect Switch . . . . . 3-2  
 Cab Electrical Panel . . . . . 3-2  
 Carrier Electrical Panel . . . . . 3-7  
 Maintenance . . . . . 3-11  
 General . . . . . 3-11  
 General Troubleshooting . . . . . 3-12  
 Tools for Troubleshooting . . . . . 3-12  
 Swivel Electrical Troubleshooting . . . . . 3-12  
 Connector Troubleshooting. . . . . 3-12  
 Alternator/Charging System Troubleshooting . . . . . 3-14  
 Replace Alternator . . . . . 3-14  
 Starter Replacement . . . . . 3-15  
 Battery Replacement . . . . . 3-15  
 Relay Panel Components . . . . . 3-16  
 Steering Column and Dashboard . . . . . 3-16  
 Windshield Wiper Assembly Replacement . . . . . 3-20  
 Windshield Washer Assembly Replacement . . . . . 3-20  
 Skylight Wiper Assembly Replacement . . . . . 3-21  
 Adjusting Electronic Joysticks . . . . . 3-22  
 Fault Codes . . . . . 3-22  
 Optional Equipment . . . . . 3-26  
 Beacon Light. . . . . 3-26

Boom Mounted Floodlights . . . . . 3-26  
 Rear View Mirror . . . . . 3-26  
 Air Conditioner . . . . . 3-26  
 Cold Weather Operation . . . . . 3-27

**SECTION 4. . . . . Boom**

Description . . . . . 4-1  
 Theory of Operation . . . . . 4-2  
 Boom Removal . . . . . 4-2  
 Boom Disassembly . . . . . 4-15  
 Boom Nose Sheaves Removal and Installation . . . . . 4-29  
     Removal . . . . . 4-29  
     Installation . . . . . 4-29  
 Boom Assembly . . . . . 4-29  
 Boom Installation . . . . . 4-49  
 Boom Functional Check . . . . . 4-50  
 Boom Inspection . . . . . 4-51  
 Boom Alignment and Servicing . . . . . 4-51  
 Boom Extension and Retraction Cables . . . . . 4-51  
     Maintenance . . . . . 4-51  
     Inspection . . . . . 4-51  
     Cable Tensioning Check and Adjustment . . . . . 4-51  
 Telescope Circuit . . . . . 4-53  
     Description . . . . . 4-53  
     Theory of Operation . . . . . 4-53  
     Maintenance . . . . . 4-54  
     Removal And Installation . . . . . 4-55  
     Disassembly And Assembly . . . . . 4-55  
 Lift Circuit . . . . . 4-56  
     Description . . . . . 4-56  
     Theory of Operation . . . . . 4-56  
     Maintenance . . . . . 4-56  
     Lift Cylinder Removal . . . . . 4-58  
     Lift Cylinder Installation . . . . . 4-58  
 Hook Block . . . . . 4-61  
     Description . . . . . 4-61  
     Maintenance . . . . . 4-61  
 Adjusting Boom Extension Stowage Mounts . . . . . 4-62

**SECTION 5. . . . . Hoist and Counterweight**

Description . . . . . 5-1  
 Theory of Operation . . . . . 5-1  
 Maintenance . . . . . 5-2  
     Warm-up Procedure . . . . . 5-2  
     Hoist Area Access . . . . . 5-2  
 Installing Cable On Hoist . . . . . 5-3  
 Removing/Installing the Hoist . . . . . 5-4  
     Removing . . . . . 5-4  
     Installing . . . . . 5-4  
     Functional Check . . . . . 5-4  
     Hoist Fluid Level Check . . . . . 5-4  
     Usage and Inspection . . . . . 5-6  
     Preventative Maintenance . . . . . 5-6  
     Oil Sampling . . . . . 5-7  
     Brake Test Procedure . . . . . 5-8  
 Motor, Motor Control Valve, And Brake . . . . . 5-8  
     Description . . . . . 5-8  
 Hoist Rotation and Minimum Wrap Indicator System . . . . . 5-9



Description .....	5-9
Maintenance .....	5-9
Hoist Control Valves .....	5-10
Description .....	5-10
Removable Counterweight .....	5-11
Counterweight Control Panel .....	5-11
Removing .....	5-12
Installing .....	5-12
<b>SECTION 6 .....</b>	<b>Swing System</b>
Description .....	6-1
Theory of Operation .....	6-2
Swing Drive .....	6-2
Swing Brake .....	6-2
Maintenance .....	6-4
Swing Motor .....	6-7
Description .....	6-7
Maintenance .....	6-7
Swing Gearbox And Brake .....	6-8
Description .....	6-8
Maintenance .....	6-8
Swing Bearing .....	6-10
Description .....	6-10
Maintenance .....	6-10
Swivels .....	6-15
Description .....	6-15
Hydraulic Swivel .....	6-17
Description .....	6-17
Theory of Operation .....	6-17
Maintenance .....	6-17
Two Port Water Swivel .....	6-19
Description .....	6-19
Maintenance .....	6-19
Electrical Swivel .....	6-20
Description .....	6-20
Theory of Operation .....	6-20
Maintenance .....	6-20
Swing Lock Pin .....	6-21
Description .....	6-21
Maintenance .....	6-22
360° Swing Lock Control (Positive Lock Type) (Optional) .....	6-22
Description .....	6-22
Maintenance .....	6-22
<b>SECTION 7 .....</b>	<b>Power Train</b>
Engine .....	7-1
Description .....	7-1
Maintenance .....	7-2
Electronic Control System .....	7-4
Description .....	7-4
Engine Control System Indicator Lights .....	7-4
Fuel System .....	7-5
Description .....	7-5
Maintenance .....	7-5
Air Intake and Exhaust System .....	7-7
Description .....	7-7
Air Intake .....	7-7
Charge-Air Cooler System .....	7-12

Exhaust System . . . . . 7-13  
 Slip Joint Exhaust Connectors - Tier 3 and 4 . . . . . 7-13  
 Water Cooling System . . . . . 7-16  
     Description . . . . . 7-16  
     Maintenance . . . . . 7-16  
     Radiator Fill and Servicing . . . . . 7-20  
 Drive Train . . . . . 7-22  
     Description . . . . . 7-22  
     Maintenance . . . . . 7-22  
 Transmission/Torque Converter . . . . . 7-23  
     Description . . . . . 7-23  
     Theory of Operation . . . . . 7-23  
     Maintenance . . . . . 7-24  
     Towing or Pushing . . . . . 7-28

**SECTION 8. . . . . Undercarriage**

Axles . . . . . 8-1  
     Description . . . . . 8-1  
     Maintenance . . . . . 8-1  
     Wheels And Tires . . . . . 8-4  
     Typical Wear Patterns . . . . . 8-4  
 Steering Systems . . . . . 8-7  
     Description . . . . . 8-7  
     Maintenance . . . . . 8-7  
 Rear Axle Oscillation Lockout System . . . . . 8-10  
     Description . . . . . 8-10  
     Theory Of Operation . . . . . 8-10  
     Axle Oscillation Lockout Cylinders . . . . . 8-12  
     Axle Oscillation Lockout Valve . . . . . 8-12  
 Brake System . . . . . 8-12  
     Description . . . . . 8-12  
     Theory Of Operation . . . . . 8-13  
     Maintenance . . . . . 8-14  
 Service Brakes . . . . . 8-15  
     Description . . . . . 8-15  
     Maintenance . . . . . 8-15  
     Corrosion Protection . . . . . 8-19  
 Parking Brake Actuator . . . . . 8-21  
     Description . . . . . 8-21  
     Maintenance . . . . . 8-21  
 Parking Brake . . . . . 8-22  
     Description . . . . . 8-22  
     Maintenance . . . . . 8-22  
 Park Brake Solenoid Valve . . . . . 8-24  
 Outrigger . . . . . 8-25  
     Outrigger Circuit . . . . . 8-25  
     Maintenance . . . . . 8-26  
     Outrigger Beam . . . . . 8-29  
     Extension Cylinder . . . . . 8-32  
     Outrigger Monitoring System (Optional—Standard in North America) . . . . . 8-32  
     Jack Cylinder . . . . . 8-33

**SECTION 9. . . . . Maintenance and Lubrication**

General . . . . . 9-1  
 Environmental Protection . . . . . 9-1  
 Lubricants and Lubrication Intervals . . . . . 9-2  
     Standard Lubricants . . . . . 9-3  
     Arctic Lubricants and Conditions . . . . . 9-5

Cylinder Rod Surface Protection . . . . . 9-8

Wire Rope Lubrication . . . . . 9-8

Lubrication Points . . . . . 9-8

    CraneLUBE . . . . . 9-8

    Cummins Oil Registration List . . . . . 9-9

    Safety . . . . . 9-9

    Drive Train . . . . . 9-10

    Drive Train (continued) . . . . . 9-11

    Drive Train (Continued) . . . . . 9-13

    Drive Train (Continued) . . . . . 9-14

    Steering and Suspension . . . . . 9-15

    Steering and Suspension (Continued) . . . . . 9-16

    Axles . . . . . 9-17

    Turntable . . . . . 9-18

    Turntable (Continued) . . . . . 9-19

    Cab Tilt . . . . . 9-19

    Outriggers . . . . . 9-20

    Lift Cylinder . . . . . 9-21

    Boom . . . . . 9-22

    Boom (Continued) . . . . . 9-23

    Boom (Continued) . . . . . 9-26

    Hoist . . . . . 9-27

    Hydraulic . . . . . 9-28

Rust Protection . . . . . 9-29

    Cleaning Procedures . . . . . 9-29

    Inspection and Repair . . . . . 9-30

    Application . . . . . 9-30

    Areas of Application . . . . . 9-30

**SECTION 10 . . . . . Alphabetical Index**

Reference Only

**Thanks for your reading.**

**Please click here to download complete manual instantly.**

**And can also choose other manuals.**

**Feel free --->write to me with any questions.**

**Our service email:**

**manuals007@hotmail.com**