

Manitowoc MLC165-1

Service/Maintenance Manual



Grove

Manitowoc

National Crane

Potain





SERVICE/MAINTENANCE MANUAL

This manual has been prepared for and is considered part of -

MLC165-1

Crane Model Number

XXXXXRef

Crane Serial Number

This manual is divided into the following sections:


SECTION 1	INTRODUCTION
SECTION 2	HYDRAULIC SYSTEM
SECTION 3	ELECTRICAL SYSTEM
SECTION 4	BOOM
SECTION 5	HOISTS
SECTION 6	SWING SYSTEM
SECTION 7	POWER TRAIN
SECTION 8	UNDER CARRIAGE
SECTION 9	LUBRICATION
SECTION 10	ACCESSORIES

NOTICE

The serial number of the crane and applicable attachments (for example, luffing jib) is the only method your Manitowoc dealer or the Manitowoc Crane Care Lattice Team has of providing you with correct parts and service information.

The serial number is located on a crane identification plate attached to the operator cab and each attachment. Refer to the Nameplate and Decal Assembly drawing in Section 2 of this manual for the exact location of the crane identification plate.

Always furnish serial number of crane and its attachments when ordering parts or discussing service problems with your Manitowoc dealer or the Manitowoc Crane Care Lattice Team.

	⚠ WARNING
	<p>To prevent death or serious injury:</p> <ul style="list-style-type: none">• Avoid unsafe operation and maintenance. Crane and attachments must be operated and maintained by trained and experienced personnel. Manitowoc is not responsible for qualifying these personnel.• Do not operate or work on crane or attachments without first reading and understanding instructions contained in Operator Information Manual and Service Manual supplied with crane and applicable attachments.• Store Operator Information Manual and Service Manual in operator cab. <p>If Operator Information Manual or Service Manual is missing from cab, contact your Manitowoc dealer for a new one.</p>

THE ORIGINAL LANGUAGE OF THIS PUBLICATION IS ENGLISH

See end of this manual for Alphabetical Index

SECTION 1	Introduction
Continuous Innovation	1-1
Safety Messages	1-1
Safety Alert Symbol	1-1
Signal Words	1-1
Safe Maintenance Practices	1-2
Read This Manual	1-2
Basic Crane Maintenance Safety	1-2
Environmental Protection	1-4
Abbreviations	1-4
Identification and Location of Components	1-5
SECTION 2	Hydraulic System
Hydraulic System Overview	2-1
Hydraulic Pump Locations	2-1
Main Pump	2-2
Swing Pump	2-3
Accessory Pump	2-4
Free Fall Cooling Pump	2-4
Fan Cooling Pump	2-5
Drum 1 and 2 Motors	2-6
Drum 3 and 4 Motors	2-6
Swing Motor	2-7
Cooling Fan Motor	2-7
Travel Motors	2-8
Main Control Valve Manifold	2-9
Pilot Brake and Pawl Manifold	2-10
Accessory Manifold	2-11
Pilot Signal Manifold	2-12
Free Fall Manifold	2-13
Cooler Bypass Manifold	2-13
Hydraulic System Specifications	2-15
Hydraulic System Maintenance	2-16
Safety	2-16
Storing and Handling Oil	2-16
Storing and Handling Parts	2-16
Inspecting the Hydraulic System	2-17
Inspecting and Replacing Hydraulic Hoses	2-18
Tightening Hydraulic Connections	2-19
Replacing Desiccant Breather Cartridge	2-24
Replacing Return Filters	2-25
Replacing Pilot Filter	2-26
Replacing the Swing Filter	2-27
Changing the Hydraulic Oil	2-29
Servicing the Pumps	2-30
Replacing a Pressure Transducer	2-30
Hydraulic Tests and Calibrations	2-31
Travel Speed Test	2-31
Swing Speed Test	2-32
Pressure Transducer Test	2-33
Controls Calibration	2-34
Drum Brake Test	2-35
Swing Brake Test	2-35
SECTION 3	Electrical System

Drum Identification 3-1

Electrical Power Sequence 3-1

 Engine Bus Power 3-1

 Cab Bus Power 3-1

 CAN Bus Power 3-1

CAN Bus Control System 3-1

 Master Node (Node 1) 3-2

 Engine Node (Node 0) 3-3

 Side Console Node (Node 2) 3-3

 Universal Nodes (Nodes 3–5) 3-3

 Graphic Nodes 3-6

 Wind Speed Remote Input Node 3-6

 Boom and Luffing Jib Remote Input Nodes 3-6

Solenoid Valve Identification 3-7

Circuit Breakers 3-8

 Alternator Circuit 3-8

 Engine Node 3-8

 operator cab 3-9

 Grid Heater 3-9

 Exhaust Aftertreatment System 3-10

 240 VAC Electric System 3-10

Checking and Replacing Electrical Components 3-11

 Node Locations 3-13

 Component to Node Identification 3-13

 Pump and Motor Voltages and Currents 3-14

 Abbreviations 3-14

 Checking Electrical Inputs/Outputs (Using the Test Box) 3-15

 Checking Electrical Inputs/Outputs (Using the Test Board) 3-16

Test Voltages 3-17

 Node Heading Descriptions 3-17

 Node 1 — Master 3-18

 Node 2 — Alarms, Switches, and Gauge Panel 3-20

 Node 3 — Drum Control and Limit Switches 3-22

 Node 4 — Swing Control, Drum Brake and Pawl Control 3-25

 Node 5 — Accessories 3-27

 Boom Remote Input Node 30 3-30

 Luffing Jib Remote Input Node 31 3-31

 Node 0 — Engine 3-32

SECTION 4 Boom

Automatic Boom Stop 4-1

 Automatic Boom Stop Maintenance 4-1

 Automatic Boom Stop Adjustment 4-3

 Automatic Boom Stop Actuator Rod Replacement 4-3

Physical Boom Stop 4-5

 Physical Boom Stop Angles 4-5

 Physical Boom Stop Operation 4-5

 Physical Boom Stop Adjustment 4-5

Boom and Luffing Jib Angle Indicator 4-6

Mast Angle Sending Unit 4-7

 Adjusting Mast Angle 4-7

Strap Inspection and Maintenance 4-8

 Inspection 4-8

 Identifying Straps 4-8

 Replacement Specifications 4-9

 Storing Straps 4-11

Removing Straps from Service	4-12
Inspection Checklist	4-12
Lattice Section Inspection and Lacing Replacement	4-15

SECTION 5 **Hoists**

Hoist Theory of Operation	5-1
Overview of the Hoist System	5-1
Working and Pilot Flow Components	5-4
Free Fall System (Optional)	5-8
Electrical Diagrams	5-11
Drum Gearboxes	5-19
Gear Oil Specifications	5-19
Oil Analysis	5-19
Periodic Maintenance	5-19
Quick-Drain Valve	5-19
Oil Change Procedure	5-19
Drum 1 Pawl	5-29
Operation	5-29
Maintenance	5-29
Drum 4 Pawl	5-31
Operation	5-31
Maintenance	5-31
Drum 3 Pawl	5-32
Operation	5-32
Maintenance	5-32
Adjustment	5-32
Speed Sensor—Hoist Motors	5-33
Replacement	5-33
Speed Sensor—Free Fall Drums	5-35
Maintenance	5-35
Minimum Bail Limit (Drum 3)	5-37
Limit Switch Replacement	5-37
Weekly Maintenance	5-37
Pressure Roller (Drum 3)	5-39
Minimum Bail Limits and Pressure Rollers (Drums 1 and 2)	5-40
Minimum Bail Limit (Drum 1 and 2)	5-43
Limit Switch Replacement	5-43
Weekly Maintenance	5-43
Pressure Roller (Drum 1 and 2)	5-45
Pressure Roller (Drum 2)	5-45
Pressure Roller (Drum 1)	5-45
Block-Up Limit Switch	5-46
Theory of Operation	5-47
Weekly Maintenance	5-47
Adjustment	5-49
Free Fall Brake	5-51
Removing Free Fall Brake Cover	5-51
Installing Free Fall Brake Cover	5-51
Wire Rope Inspection and Replacement	5-52
Maintain a Wire Rope Condition Report	5-52
Daily Inspection	5-53
Periodic Comprehensive Inspection	5-54
Replacement Criteria	5-54
Distributing Wire Rope Wear	5-56
Sheave, Roller, and Drum Inspection (Weekly)	5-57
Load Block and Hook-and-Weight Ball Inspection	5-60

SECTION 6 Swing System

Swing System Overview 6-1
 Swing Brake 6-2
 Swing Handle Command 6-3
 Swing Pump Control 6-3
 Swinging Left 6-3
 Swinging Right 6-3
 Coasting 6-3
 Swing System Pressure Feedback 6-3
 Swing Alarms 6-3
 Manual Release of Swing Brake 6-5
 Swing Gearbox 6-6
 Gear Oil Specifications 6-6
 Oil Analysis 6-6
 Periodic Maintenance 6-6
 Quick-Drain Valve 6-7
 Oil Change Procedure 6-7

SECTION 7 Power Train

Batteries 7-1
 Safety 7-1
 Causes of Battery Failure 7-1
 Maintenance 7-2
 Charging 7-3
 Storage 7-4
 Battery Disconnect Switch 7-4
 Battery Charger 7-4
 Engine Controls 7-4
 Air Cleaner 7-6
 Inspection 7-6
 Changing the Filters 7-6
 Engine Throttle Adjustment 7-8
 Hand Throttle Control 7-8
 Foot Throttle Control 7-8
 Engine Enclosure 7-10
 Engine Belt Routing 7-10
 Engine Radiator 7-11
 Checking Coolant Level 7-11
 Draining and Filling Cooling System 7-12
 Exhaust Aftertreatment System 7-15
 DEF Tank 7-15
 Coolant Solenoid Valve 7-16
 Coolant Manifold 7-16
 Air Bleed Valves 7-16
 DEF Supply Module 7-16
 SCR Module 7-16
 DRT Module 7-16
 DEF Dosing Module 7-17
 DOC Module 7-17
 DEF Heating and Cooling System 7-17

SECTION 8 Under Carriage

Travel Overview 8-1
 Travel Enable 8-1
 No Travel 8-1
 Forward Travel 8-1

Reverse Travel	8-1
Travel Speed Selection	8-1
Turntable Bearing Maintenance	8-5
Installation	8-5
Torque Requirements	8-5
Crawler Preventative Maintenance	8-7
Crawler Tread Slack Measurement	8-7
Crawler Tread Slack Adjustment	8-7
Crawler Hand Pump and Jacking Cylinder	8-8
Assembly	8-8
Maintenance	8-8
Air Removal	8-9
Operation	8-9
SECTION 9	Lubrication
Lubrication	9-1
Lube and Coolant Product Guide	9-1
SECTION 10	Accessories
Accessory System Pressure	10-1
Carbody Theory of Operation	10-1
Jack Cylinders	10-2
Pin Pullers	10-2
Rotating Bed Cylinders	10-3
Mast	10-5
Assembly Cylinder (Optional)	10-6
Boom Butt Pin Pullers	10-7
Counterweight Cylinders	10-7
Counterweight Pin Pullers	10-8
Cab Tilt	10-9

THIS PAGE INTENTIONALLY LEFT BLANK

Reference Only

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com