

Manitowoc MLC650

Service/Maintenance Manual



Grove

Manitowoc

National Crane

Potain





SERVICE/MAINTENANCE MANUAL

This manual has been prepared for and is considered part of -

MLC650

Crane Model Number

XXXXXRef

Crane Serial Number

This manual is divided into the following sections:

SECTION 1	INTRODUCTION
SECTION 2	HYDRAULIC SYSTEM
SECTION 3	ELECTRICAL SYSTEM
SECTION 4	BOOM
SECTION 5	HOISTS
SECTION 6	SWING SYSTEM
SECTION 7	POWER TRAIN
SECTION 8	UNDERCARRIAGE
SECTION 9	LUBRICATION
SECTION 10	ACCESSORIES

NOTICE

The serial number of the crane and applicable attachments (luffing jib, VPC-MAX™) is the only method your Manitowoc dealer or the Manitowoc Crane Care Lattice Team has of providing you with correct parts and service information.

The serial number is located on a crane identification plate attached to the operator's cab and each attachment. Refer to the Nameplate and Decal Assembly Drawing in Section 2 of this manual for the exact location of the crane identification plate.

Always furnish serial number of crane and its attachments when ordering parts or discussing service problems with your Manitowoc dealer or the Manitowoc Crane Care Lattice Team.



⚠ WARNING

To prevent death or serious injury:

- Avoid unsafe operation and maintenance.
Crane and attachments must be operated and maintained by trained and experienced personnel. Manitowoc is not responsible for qualifying these personnel.
- Do not operate or work on crane or attachments without first reading and understanding instructions contained in Operator Information Manual and Service Manual supplied with crane and applicable attachments.
- Store Operator Information Manual and Service Manual in operator's cab.
If Operator Information Manual or Service Manual is missing from cab, contact your Manitowoc dealer for a new one.

THE ORIGINAL LANGUAGE OF THIS PUBLICATION IS ENGLISH

See end of this manual for Alphabetical Index

SECTION 1	Introduction
Continuous Innovation	1-1
Safety Messages	1-1
Safety Alert Symbol	1-1
Signal Words	1-1
Safe Maintenance Practices	1-2
Read This Manual	1-2
Basic Crane Maintenance Safety	1-2
Protection of the Environment	1-4
Identification and Location of Major Components	1-4
Solenoid Valve Identification	1-7
SECTION 2	Hydraulic System
Hydraulic System Overview	2-1
Hydraulic Pump Locations	2-1
Hydraulic Pump Identification	2-2
Pumps 1, 2, and 4	2-2
Pump 3	2-3
Pumps 5, 6, and 8	2-4
Pump 7	2-5
Pump 9	2-5
Hydraulic Motor Identification	2-6
Variable Displacement Motors	2-6
Fixed Displacement Motors	2-9
Manifold Identification	2-10
Pressure Transducer and Accessories Manifold	2-10
Upperworks Jacking and Rigging Winch Valve Assembly	2-11
Mast Assist and Self-Assembly Cylinder Valve Assembly	2-12
Drum Brakes Release Manifold and Solenoid Valves	2-13
Pawl Control Manifold	2-14
Swing Brake, Travel Brake, and Front Adapter Pin Pusher Valve Assembly	2-15
Lower Accessories Valve Assembly (Without Jacking Valve)	2-16
Lower Accessories Valve Assembly (With Jacking Valve)	2-17
Hydraulic System Specifications	2-18
Hydraulic System Maintenance	2-19
Safety	2-19
Storing and Handling Oil	2-19
Storing and Handling Parts	2-19
Inspecting the Hydraulic System	2-19
Inspecting and Replacing Hydraulic Hoses	2-20
Replacing the Desiccant Breather Cartridge	2-22
Replacing the Return Filters	2-23
Changing the Hydraulic Oil	2-24
Servicing the Pumps	2-25
Replacing a Pressure Transducer	2-26
Shop Procedures	2-27
Initial Hydraulic Oil Fill	2-27
Initial Hydraulic System Startup	2-30
Hydraulic Tests and Calibrations	2-32
SECTION 3	Electrical System
Electrical Drawings and Schematics	3-1
Electrical Power Sequence	3-1
Battery Power	3-1
Battery Power Disconnect	3-1

Crane Electrical Power Distribution	3-2
Crane Electrical System Ground Points	3-3
Circuit Breakers, Fuses, and Relays	3-5
Inspect Electrical Components	3-8
Every Month or 200 Hours	3-8
Degradation Due to Severe Environment	3-8
CAN Bus Control System	3-9
CAN Bus System Overview	3-9
CAN Bus System Chart	3-10
Control Modules	3-11
Control Module Devices	3-17
Control Module Test Voltages	3-20

SECTION 4 **Boom**

General Maintenance	4-1
Boom and Luffing Jib Angle Indicator Calibration	4-1
Boom Stop Limit Switch	4-1
Automatic Boom Stop Overview	4-2
Physical Boom Stop	4-5
Physical Boom Stop Operation	4-5
Boom and Luffing Jib Angle Indicators	4-6
Mast Angle Sending Unit	4-6
Adjusting the Mast Angle	4-6
Fleeting Sheave Maintenance	4-7
General	4-7
Specifications	4-7
Inspection	4-7
Replacement	4-7
Activation	4-7
Adjustment	4-7
Operation	4-7
Boom Top Electrical Schematic	4-8
Luffing Jib Top Electrical Schematic	4-9
Boom Wind Cap Electrical Schematic	4-10
Strap Inspection and Maintenance	4-11
Inspection	4-11
Identifying Straps	4-12
Replacement Specifications	4-12
Storing Straps	4-15
Removing Straps from Service	4-15
Inspection Checklist	4-15
Lattice Section Inspection and Lacing Replacement	4-18

SECTION 5 **Hoists**

General	5-1
Drum 1 Main Hoist	5-1
Drum 1 Brake Overview	5-1
Drum 1 Brake Operation	5-1
Drum 1 Motor Loop Flushing	5-2
Drum 1 Hoisting Operation	5-2
Drum 1 Lowering Operation	5-3
Drum 1 Minimum Bail Limit	5-3
Drum 1 Hoisting Hydraulic Schematic	5-6
Drum 1 Lowering Hydraulic Schematic	5-7
Drum 1 Electrical Schematic	5-9
Drum 2 Main Hoist	5-10

Drum 2 Brake Overview	5-10
Drum 2 Brake Operation	5-10
Drum 2 Motor Loop Flushing	5-11
Drum 2 Hoisting Operation	5-11
Drum 2 Lowering Operation	5-12
Drum 2 Minimum Bail Limit	5-13
Drum 2 Hoisting Hydraulic Schematic	5-15
Drum 2 Lowering Hydraulic Schematic	5-16
Drum 2 Electrical Schematic	5-18
Drum 3 Whip Hoist	5-19
Drum 3 Brake Overview	5-19
Drum 3 Brake Operation	5-19
Drum 3 Motor Loop Flushing	5-19
Drum 3 Hoisting Operation	5-20
Drum 3 Lowering Operation	5-20
Drum 3 Minimum Bail Limit	5-21
Drum 3 Hoisting Hydraulic Schematic	5-23
Drum 3 Lowering Hydraulic Schematic	5-24
Drum 3 Electrical Schematic	5-25
Drum 4 Boom Hoist or Mast Hoist (VPC-MAX™)	5-26
Drum 4 Brake Overview	5-26
Drum 4 Brake Operation	5-26
Drum 4 Motor Loop Flushing	5-26
Drum 4 Hoisting Operation	5-27
Drum 4 Lowering Operation	5-27
Drum 4 Pawl Operation	5-28
Drum 4 Pawl Limit Switch	5-28
Drum 4 Hoisting Hydraulic Schematic	5-30
Drum 4 Lowering Hydraulic Schematic	5-31
Drum 4 Electrical Schematic	5-32
Drum 5 Boom Hoist (VPC-MAX)	5-33
Drum 5 Brake Overview	5-33
Drum 5 Brake Operation	5-33
Drum 5 Hoisting Operation	5-33
Drum 5 Lowering Operation	5-34
Drum 5 Pawl Operation	5-34
Drum 5 Pawl Limit Switch	5-35
Drum 5 Hoisting Hydraulic Schematic	5-37
Drum 5 Lowering Hydraulic Schematic	5-38
Drum 5 Electrical Schematic	5-39
Drum 6 Luffing Hoist	5-40
Drum 6 Brake Overview	5-40
Drum 6 Brake Operation	5-40
Drum 6 Motor Loop Flushing	5-40
Drum 6 Hoisting Operation	5-41
Drum 6 Lowering Operation	5-41
Drum 6 Pawl Operation	5-42
Drum 6 Pawl Limit Switch	5-42
Drum 6 Hoisting Hydraulic Schematic	5-45
Drum 6 Lowering Hydraulic Schematic	5-46
Drum 6 Electrical Schematic	5-48
Gearboxes	5-49
Gear Oil Specifications	5-49
Oil Analysis	5-49
Periodic Maintenance	5-49
Quick-Drain Valve	5-49
Changing the Gearbox Oil	5-49

Drum Motor Speed Sensor	5-60
Speed Sensor Replacement	5-60
Weekly Speed Sensor Periodic Maintenance	5-60
Block Level	5-61
Operation	5-61
Sensor Replacement	5-61
Block-Up Limit Switch	5-62
Switch Activation Overview	5-62
Weekly Maintenance	5-62
Switch Adjustment and Replacement	5-63
Pressure Roller	5-72
Overview	5-72
Drum 3	5-72
Drum 5	5-73
Wire Rope Inspection and Replacement	5-75
Wire Rope Lubrication	5-75
Maintain a Wire Rope Condition Report	5-75
Periodic Comprehensive Inspection	5-77
Replacement Criteria	5-77
Distributing Wire Rope Wear	5-79
Sheave, Roller, and Drum Inspection	5-79
Load Block and Hook-and-Weight Ball Inspection	5-82
Daily Inspection	5-82
Yearly Inspection	5-84

SECTION 6 Swing System

General	6-1
Swing System Overview	6-1
Swing Brake Operation	6-1
Swing Park Switch Control	6-1
Momentary Swing Brake Control	6-1
Swing Operation	6-2
Swing Pump Control	6-2
Swing Left	6-2
Swing Right	6-2
Coasting	6-2
Swing Hydraulic Schematic	6-3
Swing Electrical Schematic	6-4
Swing Drive System	6-5
Planetary Swing Drive	6-5
Swing Adapter Frame	6-5
Planetary Swing Drive Gear Oil	6-6
Gear Oil Specifications	6-6
Oil Analysis	6-6
Periodic Maintenance	6-6
Quick-Drain Valve	6-6
Changing the Planetary Swing Drive Oil	6-6
Manual Release of Swing Brake	6-9
Swing Motor Speed Sensor	6-10
Speed Sensor Replacement	6-10
Speed Sensor Adjustment	6-10
Weekly Periodic Maintenance	6-10

SECTION 7 Power Train

Batteries	7-1
Battery Safety	7-1

Battery Gases Are Explosive	7-1
Jump-Starting a Battery	7-1
Causes of Battery Failure	7-1
Overcharging	7-1
Undercharging or Discharged	7-1
Lack of Water	7-1
Loose Hold-Downs	7-2
Overloads	7-2
Multiple Battery System	7-2
Battery Maintenance	7-2
Checking Battery State of Charge	7-2
Troubleshooting—Slow Cranking	7-3
Quarterly Battery System Maintenance	7-3
Charging	7-3
Storage	7-4
Battery Disconnect Switch	7-4
Engine Controls	7-4
Air Cleaner—Tier 4	7-5
Inspection	7-5
Changing the Filters	7-6
Air Cleaner—Tier 3	7-8
Inspection	7-8
Changing the Filters	7-9
Engine Throttle Adjustment	7-11
Hand Throttle Control	7-11
Foot Throttle Control	7-11
Foot Throttle Control Assembly and Calibration	7-11
Engine Electrical Schematic	7-13
Tier 4 ECM Electrical Schematic—Power and Ground Circuits	7-14
Tier 3 ECM Electrical Schematic—Power and Ground Circuits	7-15
Engine Enclosure	7-16
Engine Belt Routing	7-17
Engine Radiator	7-17
Checking Coolant Level	7-18
Fill a Drained Cooling System	7-19
Diesel Particulate Filter	7-20
Regeneration	7-20
Maintenance	7-20
DPF Replacement	7-21
SECTION 8	UnderCarriage
General	8-1
Hydraulic Travel System	8-1
Travel System Overview	8-1
Travel Brake Operation	8-1
Travel Speed Selection	8-2
Travel Operation	8-2
Forward Travel (High Speed) Hydraulic Schematic	8-4
Reverse Travel (Low Speed) Hydraulic Schematic	8-5
Travel Electrical Schematic	8-7
Turntable Bearing Alignment	8-8
Turntable Bearing Bolt Periodic Tightening	8-9
Replacing Turntable Bolts	8-9
Crawler Preventive Maintenance	8-9
Carbody Jack Cylinders and Carbody/Crawler Pin Pullers	8-10
Carbody Jack Cylinders Control	8-10

Carbody Manual Control	8-10
Setup Remote Control	8-13
Carbody Jacks Hydraulic Schematic	8-15
Carbody Jacks Hydraulic Schematic (Remote Control)	8-16
Carbody Jacks Hydraulic Schematic (Manual Control)	8-17
Carbody Jacks Electrical Schematic	8-18
Crawler/Carbody Pin Pullers Control	8-19
Carbody Manual Control	8-19
Setup Remote Control	8-19
Crawler/Carbody Pin Pullers Hydraulic Schematic	8-21
Crawler/Carbody Pin Pullers Hydraulic Schematic (Remote Control)	8-22
Crawler/Carbody Pin Pullers Hydraulic Schematic (Manual Control)	8-23
Crawler/Carbody Pin Pullers Electrical Schematic	8-24
Crawler Electrical Schematic	8-25
Crawler Tread Slack Measurement	8-26
Crawler Tread Slack Adjustment	8-27
Crawler Tensioning Assembly and Hydraulic Hand Pump	8-28
Operating the Hand Pump	8-28
Maintenance	8-29
Remove Air from the Crawler Tensioning Assembly	8-29

SECTION 9 Lubrication
 Lubrication 9-1

SECTION 10 Accessories

Adapter Frame-to-Rotating Bed Pin Pullers	10-1
General	10-1
Adapter Frame-to-Rotating Bed Front Pin Pullers Operation	10-1
Adapter Frame-to-Rotating Bed Front Pin Pullers Hydraulic Schematic	10-3
Adapter Frame-to-Rotating Bed Front Pin Pullers Electrical Schematic	10-4
Adapter Frame-to-Rotating Bed Rear Pin Pullers Operation	10-5
Adapter Frame-to-Rotating Bed Rear Pin Pullers Hydraulic Schematic	10-6
Adapter Frame-to-Rotating Bed Rear Pin Pullers Electrical Schematic	10-7
Rotating Bed Jack Cylinders	10-8
General	10-8
Setup Remote Control	10-9
Manual Control	10-10
Upperworks Jacking and Rigging Winch Valve Assembly	10-11
Rotating Bed Jacks Hydraulic Schematic	10-12
Rotating Bed Jacks Hydraulic Schematic (Remote Control)	10-13
Rotating Bed Jacks Hydraulic Schematic (Manual Control)	10-14
Rotating Bed Jacks Electrical Schematic	10-15
Rotating Bed Jack Stowage Cylinder	10-16
General	10-16
Rotating Bed Jack Stowage Cylinder Operation	10-17
Rotating Bed Jack Stowage Cylinders Hydraulic Schematic	10-18
Rotating Bed Jack Stowage Cylinder Electrical Schematic	10-19
Rigging Winch (Drum 0)	10-20
General	10-20
Setup Remote and J1 Joystick Control	10-20
Manual Control	10-21
Rigging Winch (Drum 0) Hydraulic Schematic	10-22
Rigging Winch (Drum 0) Hydraulic Schematic (Remote Control)	10-23
Rigging Winch (Drum 0) Hydraulic Schematic (Manual Control)	10-24
Rigging Winch (Drum 0) Electrical Schematic	10-25
Mast Assist Cylinders	10-26

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com