



Workshop literature

STILL
ELECTRONIC
DOCUMENTATION
SYSTEM

COP



1060 1061 1062

45398042109 EN - 04/2013

first in intralogistics

00 General information

Safety precautions	00- 1
Description of safety symbols	00- 1
Preliminary maintenance operations	00- 1
To avoid accidents	00- 1
Safety Regulations Relative to Operating Materials	00- 1
Product information	00- 3
Chassis marking - 2000 kg and 1000 kg capacity	00- 3
Chassis marking - 700 kg capacity	00- 3
Forklift Use in Cold-Storage Rooms.	00- 4
Loading and unloading the truck	00- 5
Using the truck with extension leads	00- 6

01 Technical assistance

Maintenance	01- 1
Synoptic Table of Maintenance Operations	01- 1
Supply Table	01- 1
Fork tolerance table	01- 2
Speed tolerance table	01- 2
Table of screws and respective tightening torques	01- 3

02 Diagnostics

Truck diagnostics	02- 1
.....	02- 1
Software for truck diagnostics	02- 3
Curtis system diagnostics	02- 4
Software for electronic system diagnostics	02- 4
Device monitor (Monitor Menu) - 2000 kg and 1000 kg capacity	02- 9
Device monitor (Monitor Menu) - 700 kg capacity	02-13
Device parameters (Parameters Menu) - 2000 kg and 1000 kg capacity	02-17
Device parameters (Parameters Menu) - 700 kg version	02-23
System fault monitor (Alarms)	02-28
Alarms list	02-28
"LES" electrical steering diagnostics	02-34
"DiaMon - LES" software	02-34

11 Motor

Traction motor	11- 1
Drive motor	11- 1
Technical data plate	11- 1
Removal of the drive motor	11- 2
Reassembly of the drive motor	11- 3

22 Reducer

Disassembly / Reassembly of the reducer	22- 1
Disassembly	22- 1
Removal of the anchorage plate	22- 1
Extraction of the drive reducer	22- 3
Assembly of the reducer group	22- 3
Removing and overhauling the drive reducer	22- 4
Reducer maintenance	22-11
Description of the reducer	22-11
Instructions for assembly/ service on the reducer	22-11
Adjustment of the bevel gear system	22-12
Reducer section	22-15

31 Truck

Covers	31- 1
Internal accessibility	31- 1
Removal of the upper bonnet	31- 1
Removal of the gas spring on the battery compartment cover	31- 3

42 Steering

Electric steering	42- 1
Steering system	42- 1
L.E.S. electronic control module	42- 2
Inputs-Outputs of the L.E.S. control	42- 2
Removing the steering motor reducer - 2000 kg and 1000 kg capacity	42- 4
Removing the steering motor reducer - 700 kg capacity	42- 8
Removal of the steering potentiometer	42-11
Reassembling the motor reducer and steering potentiometer - 2000 kg and 1000 kg capacity	42-13
Reassembling the motor reducer and steering potentiometer - 700 kg capacity	42-18
Centering the potentiometer	42-24
Electrical diagram of the drive wheel position potentiometer	42-25

L.E.S. interface connection diagram	42-26
Calibrating the actual value and nominal value potentiometers	42-27
Calibration of the electrical midpoint	42-28
Tiller	42-30
Remove the steering potentiometer on the shaft	42-30
Removal of shaft head	42-32
Removal of the shaft potentiometer group	42-35
Technical information regarding the drive accelerator potentiometer	42-36
Removal of the horn button	42-36
Removal of the consent buttons	42-37
Removing the step plate lifting-lowering buttons	42-37
Removal of the shaft card	42-39
Technical information regarding the electronic card for the shaft	42-39
Removal of the fork lifting-lowering button	42-40
Shaft head assembly	42-41
Removal of the shaft head from the forklift	42-42
Removal of the shaft support housing	42-43
Reassembly of the shaft support housing	42-50
46 Wheels and lever systems	
Wheels	46- 1
Wheel Wear Check	46- 1
Replacement of the drive wheel	46- 2
Wheel Tightening Check	46- 3
Removal of the stabiliser wheel - 2000 kg and 1000 kg capacity	46- 4
Reassembling the stabiliser wheel - 2000 kg and 1000 kg capacity	46- 6
Checking pivot wheel oil level - 2000 kg and 1000 kg capacity	46- 8
Replacing and topping up pivot wheel oil - 2000 kg and 1000 kg capacity	46- 8
Fork lifting levers - 2000 kg capacity	46-10
49 Braking system	
Braking devices and methods	49- 1
Braking devices and methods	49- 1
Motor braking	49- 1
Electromagnetic brake	49- 1
To check wear and adjustment of the electromagnetic brake	49- 2
Removal of the electromagnetic brake;	49- 3

Service brake (eABS)	49- 6
Description of service braking (eABS)	49- 6
Features of the eABS module	49- 7
eABS module inputs and outputs - 2000 kg and 1000 kg capacity version	49- 8
eABS module inputs and outputs - 700 kg capacity version	49- 9
Alarms encoding	49-10
List of alarms	49-10

60 Electrical and electronic system

Electrical/electronic system: general information	60- 1
Functional diagram for the "Curtis" electronic control system - 2000 kg and 1000 kg capacity	60- 1
Functional diagram for the "Curtis" electronic control system - 700 kg capacity	60- 3
Main features of the Curtis system	60- 5
Inputs and outputs of the "Curtis" system	60- 6
Temperature control	60- 7
Removal of Curtis three-phase drive system	60- 7
Disassembly of the complete system support	60- 8
Wiring harness	60-13
Fuses:location, check, replacement	60-13
Adjusting the dashboard microswitch control screw - 700 kg version	60-16
Batteries	60-17
Battery dimensions and weights	60-17
Removal of the battery status indicator and counter	60-17
Low battery charge indicator and counter	60-18
Battery Replacement	60-19
Stands with rollers for lateral battery extraction (option)	60-22
Electrolyte Level and Density Check	60-23
Battery Recharging	60-24

70 Hydraulic system

Hydraulic diagrams	70- 1
Hydraulic connection diagram for fixed platform	70- 1
Hydraulic connection diagram for mobile platform and capacity of 2000 Kg	70- 2
Hydraulic connection diagram for mobile platform and capacity of 1000 Kg	70- 4
Hydraulic connection diagram - 700 kg capacity - Fixed forks	70- 6
Hydraulic connection diagram - 700 kg capacity - Movable forks	70- 8
Solenoid valve unit - 2000 kg capacity	70- 9
Solenoid valve unit - 1000 kg capacity	70-10

Solenoid valve unit - 700 kg capacity - Fixed forks	70-11
Solenoid valve unit - 700 kg capacity - Movable forks	70-12
71 Hydraulic components	
Control unit and accumulator	71- 1
Replacement of the hydraulic control unit	71- 1
Removing the accumulator - 2000 kg and 1000 kg capacity - Movable step plate	71- 3
Hydraulic System Oil Level Check	71- 4
80 Lifting	
Fork lifting	80- 1
Removal of the fork lifting cylinder	80- 1
Removal of the supply pipe to the fork lifting cylinder	80- 3
Step plate	80- 6
Shimming the lateral runner of the mobile platform	80- 6
Adjust and replace the rubber buffers at the platform stroke end.	80- 7
Cylinders	80- 8
Drawing of forks lifting cylinder - 2000 kg capacity	80- 8
Drawing of forks lifting cylinder - 1000 kg capacity	80- 9
Drawing of fork lift cylinder - 700 kg capacity - Fixed forks	80-10
Drawing of fork lift cylinder - 700 kg capacity - Movable forks	80-11
Fork lifting cylinder servicing : Disassembly	80-12
Fork lifting cylinder servicing : Reassembly	80-15
Drawing of step plate lifting cylinder - 2000 kg and 1000 kg capacity	80-19
Drawing of step plate lifting cylinder - 700 kg capacity	80-20
Removal of platform lifting cylinder	80-21
Removal of the platform cylinder supply pipe	80-24

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com