



Workshop literature

STILL
ELECTRONIC
DOCUMENTATION
SYSTEM

Electric pallet truck

EGV-S
EGV-S LB



0221 0222 0229 0230

45238042105 rev.01 EN - 01/2014

first in intralogistics

Edition 02/2013

- **First edition**

Edition 01/2014

- **Second edition**
- Truck diagnostics updated
- Tightening torques updated
- LES errors list inserted

00 General information

Safety precautions	00- 1
Description of safety symbols	00- 1
Preliminary maintenance operations	00- 1
To avoid accidents	00- 1
Safety Regulations Relative to Operating Materials	00- 1
Product information	00- 3
Frame labelling	00- 3
Stopping the truck in an emergency	00- 3
Type of truck use of versions with straddles initial lift function	00- 4
Forklift Use in Cold-Storage Rooms.	00- 6
Using the truck with extension leads	00- 6
Maintenance	00- 7
Synoptic Table of Maintenance Operations	00- 7
Supply Table	00- 7
Tolerance table for forks and lift mast	00- 8
Hoist verticality tolerance table	00- 8
Speed tolerance table	00- 8
Table of screws and their respective tightening torques	00- 8

02 Diagnostics

Truck diagnostics	02- 1
Connections before running truck diagnostics	02- 1
Software for truck diagnostics	02- 3
Electronic system diagnostics	02- 4
"PC Console" software	02- 4
Description of the PC CONSOLE menus	02- 6
Menu description PARAMETER	02-11
Description of the TESTER menu	02-15
Analog signal acquisition (PROGRAM VACC)	02-16
Table of parameters	02-18
Alarms list	02-21
LES steering system diagnostics	02-24
"DiaMon - LES" software	02-24
Alarms	02-30

11 Motor

Traction motor	11- 1
Drive motor type	11- 1
Drive disabling	11- 1
Traction speed	11- 1
Automatic deceleration when turning	11- 2
Disassembly and reassembly of the traction motor	11- 3
Drive unit assembly diagram	11- 3
Removing the drive motor	11- 5

22 Reducer

Disassembly and reassembly of the transmission gear	22- 1
Instructions for assembly/ service on the reducer	22- 1
Reducer gearbox drawing	22- 2
Description of the reducer	22- 3
Reducer gearbox group overhaul	22- 4
Maintaining the reducer	22- 8
Lubricating the transmission gear	22- 8
Resetting the reduction gear oil level	22- 9
Adjustment of the bevel gear system	22- 9

31 Lift mast

Covers	31- 1
Removing the motor compartment cover	31- 1
Removing the battery cover	31- 3
Assembling the casing	31- 3
Compartment for accessing the battery charger supply cable (if fitted)	31- 4
Movable operator step plate	31- 5
Step plate assembly diagram	31- 5
Removing and fitting the step plate	31- 6
Step plate sensors	31-10
Movable operator side panels	31-11
Side panel assembly diagram	31-11
Hub torque assembly diagram	31-12
Removing the side panel assembly	31-13

42 Steering

Tiller	42- 1
Tiller head controls	42- 1
Anti-crush button	42- 2
Disassembling the tiller body	42- 3
Tiller head potentiometer	42- 8
Disassembling the tiller assembly	42-10
Overhauling the tie rod barrel	42-16
Assembling the tiller assembly	42-18
Tiller cable layout diagram	42-19
Calibrating the tiller assembly	42-21
Tiller operating conditions	42-22
Electric steering	42-23
Steering system	42-23
Steering motor reducer diagram(before modification)	42-25
Disassembling the steering motor unit(before modification)	42-27
Motor reducer assembly overhaul	42-32
Motor reducer pin greasing	42-41
Motor reducer diagram(post-modification)	42-42
Disassembling the motor reducer assembly(post-modification)	42-44
Electrical steering system calibration	42-47

46 Wheels

Drive wheel, pivoting wheels and load rollers	46- 1
Disassembly and reassembly of the drive wheel	46- 1
Complete pivoting wheel unit	46- 3
Disassembly and reassembly of the pivoting wheel	46- 4
Load rollers	46- 7
Removing and assembling the load castors	46- 8

49 Brake system

Braking method	49- 1
Braking devices and methods	49- 1
Electromagnetic brake	49- 3
Electromagnetic brake assembly diagram	49- 3
Steps for assembling the electromagnetic brake	49- 4
Calibration of the electromagnetic brake	49- 6

60 Electrical and electronic system

Electrical/electronic system: general information.	60- 1
Functional diagram	60- 1
Changing fuses	60- 3
Sleeves and connectors	60- 4
COMBI system	60- 5
Technical features of the electronic system	60- 5
List of electronic system input / output functions	60- 7
Batteries and battery charger	60- 9
Battery size and weight (for models without straddles initial lift function)	60- 9
Battery size and weight (for models with straddles initial lift function)	60- 9
Battery status indicator and hour meter	60-10
Battery Recharging	60-11
Recharging the battery using the on-board battery charger (optional)	60-11
Battery connectors (socket and plug)	60-12
Changing the battery (for models without straddles initial lift function)	60-13
Changing the battery (for models with straddles initial lift function)	60-15

71 Hydraulic components

Hydraulic control unit	71- 1
2.2 kW/24 V controller: for model without straddles initial lift function	71- 1
3 kW/24 V controller: for model without straddles initial lift function	71- 2
24 V, 3 kW controller: for models with straddles initial lift function	71- 3
Removing the hydraulic control unit and tank	71- 4
Tank: oil level	71- 7
Removal of proportional solenoid valve(before modification)	71- 8
Removal of proportional solenoid valve(post-modification)	71-13
Replacing the complete pre-modification control unit with the post-modification control unit	71-14
Valve block for emergency lowering(for models with the straddle initial lifting function)	71-16
Replacing the non-return valve	71-17
Fork lifting cylinder	71-20
Lift cylinder unit(for models with the straddle initial lift function)	71-20
Lift cylinder overhaul	71-22
Assembling the lift cylinder	71-25

80 Load lifting system

Lifting column	80- 1
Removal and assembly of the lifting column	80- 1
Disassembling and assembling column parts	80- 9
Bleeding cylinders	80-17
Adjusting the chains (for models with straddle initial lift)	80-18

84 Load support system

Fork carriage	84- 1
Removing and assembling the fork carriage runners	84- 1
Forks, rods and levers	84- 6
Removing and installing the levers(for models with the straddle initial lifting function) ..	84- 6
Removal and replacement of the bushings	84-15

91 Optional

Standard and optional features	91- 1
Standard and optional features	91- 1

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com