



Workshop literature

STILL
ELECTRONIC
DOCUMENTATION
SYSTEM

Electric pallet truck

EXU-SF-20



0160

50168070901 EN - 03.2010

first in intralogistics

- 03.2010: First edition

00 Product information

Description	00-1
Introduction	00-1
Technical description	00-2
Overview	00-6
Composition of the truck serial number	00-8
Dimensions	00-9
Technical data (VDI)	00-10
Defining directions	00-12
Table of tightening torques in Nm	00-13
Safety instructions	00-18
Parking the truck.	00-18
Battery connector	00-19
Slings and jacking the truck	00-21

02 Diagnostics

General	02-1
Diagnostic instructions	02-1
Accessing truck information	02-1
CAN-bus (Controller Area Network)	02-2
Error codes	02-3
Error codes	02-3

11 Motor

Traction motor	11-1
Technical data	11-1
Overview	11-1
Disassembly	11-2
Speed sensor	11-3
Speed sensor	11-3
Temperature sensor	11-6
Temperature sensor	11-6

22 Drive - Transmission

Reducer	22-1
Technical data	22-1
Disassembly	22-2

23 Drive unit

Drive unit	23-1
Description	23-1
Drive unit support	23-7
Proportional spring	23-10

30 Truck structure

Covers	30-1
Access to the technical compartment	30-1

34 Operator's seat

Platform	34-1
Folding platform	34-1
Side protection	34-10
Side protection	34-10

42 Steering system

Tiller	42-1
General	42-1
"Cold store" resistors""	42-2
Removing the tiller head	42-3
Removing the tiller	42-6
Electrical steering	42-18
Steering controller	42-18
Steering motor	42-20
Recopy potentiometer	42-23
Potentiometer pinion bearing	42-25

46 Wheels

Wheels	46-1
Drive wheel	46-1
Stabiliser rollers	46-2
Support rollers	46-4

49 Brake system

Electromagnetic brake	49-1
Technical data	49-1
Checking the air gap and the braking power	49-2

Disassembly	49-3
56 Display	
Display	56-1
Display	56-1
Disassembly	56-3
Digicode	56-5
Digicode option (LFM Go)	56-5
Disassembly	56-6
60 Electrical equipment	
General	60-1
Electric Circuit Diagram	60-1
Overview	60-2
Connectors	60-3
Electrical equipment	60-4
Description of the electrical panel	60-4
Disassembly	60-6
Emergency stop	60-10
Fuses	60-12
Key switch	60-13
Diagnostic connector	60-14
Signalling equipment	60-15
Horn	60-15
Battery and accessories	60-16
Battery PzS (open-lead)	60-16
Battery change	60-17
Battery connector	60-21
Charging the battery using an external charger	60-22
On-board charger	60-23
On-board charger	60-23
64 Electronic controls	
Traction controller	64-1
Technical data	64-1
Traction controller wiring	64-2
Disassembly	64-2

70 Hydraulics

General	70-1
General	70-1

71 Hydraulic control unit

Pump unit	71-1
Technical data	71-1
Disassembly	71-2
Servicing the hydraulic system	71-4

81 Lifting system

Linkage	81-1
Disassembly	81-1
Lift cylinder	81-4
Disassembly	81-4

Annex

100 Diagrams

Wiring diagram	100-2
Circuit diagrams	100-2
Hydraulic diagram	100-8
Hydraulic circuit diagram	100-8

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com