



Workshop Manual


STILL
ELECTRONIC
DOCUMENTATION
SYSTEM

Reach mast stacker

FM-4W 25



Ident. No. 172303

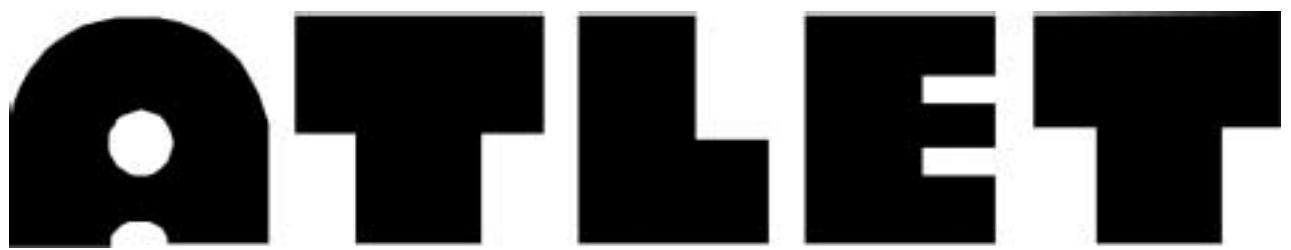

SERVICE MANUAL

Machine: U AC Power Plus

Manual No: 005954

Edition: 2010A

The content in the manual is protected by the Copyright Act and may not be copied either in full or part without written approval. The material has undergone carefull review with regards to its correctness. We reserve the right to make alterations.

In the event of conflict between the Swedish and English edition, the Swedish edition will take precedence.

Modifications and updates will be distributed via ATLET AB Service Manual Change.

Approved 2010-04-01:

Johan Rydenskog
After Sales Support

Martin Widegren
Technical Documentation



Table of Contents

Side 2

Edition 2010A

1 General information and technical data

Introduction	1.3
Service manual	1.3
The trucks	1.3
Manual structure	1.4
Symbol key	1.4
History	1.4
Safety	1.6
Lifting points	1.6
Safety instructions	1.7
Truck modification	1.7
Environmentally hazardous waste - environment	1.8
Handling	1.8
Trouble shooting	1.8
Designations	1.9
Truck types	1.9
Dimension.....	1.15
Dimension description UNS, UHS	1.15
Dimension description UFS	1.16
Dimension description USS	1.17
Dimension description URF	1.18
Component specification	1.19
Drive motor	1.19
Electric brake	1.19
Gearbox	1.19
Hydraulic unit	1.20
Control system for motor	1.20
Battery	1.21
Servo motor	1.21
Steering servo unit "fly by wire"	1.21
Steering servo unit EPS 2001	1.21
Torque	1.22
Conversion table torque	1.22
Bolt types and tensile grades	1.23
Recommended oil and grease types.....	1.24
Code explanations	1.25

Table of Contents

Side 3

Machine colours according to NCS	1.25
Colour codes for Atlet's wiring diagrams	1.25
Designations for electrical components	1.26
Units	1.27

Edition 2005C

2 Special tools

List of tools	2.3
----------------------------	------------

Edition 2009B

3 Service

Introduction	3.3
Service intervals	3.3
Service inspection.....	3.4
General	3.4
Check list	3.5
Code explanation	3.10
Lubrication.....	3.14
Recommended changing	3.14
Lubrication chart UNS, UNN, UHS, USS, UFS	3.15
Lubrication chart URF	3.16
Symbol key lubrication chart	3.17

Table of Contents

Side 4

Edition 2009B

4 Chassis

Introduction	4.3
Chassis, plates	4.4
Dismantling, assembling the overhead guard	4.4
Dismantling, assembling the overhead guard stanchion	4.4
Chassis, machine housing components	4.6
Dismantling, assembling the load wheel	4.6
Adjusting stabilizing lugs (UHH)	4.7
Adjusting the door	4.8
Battery lock, battery type R	4.8
Panels	4.10
Dismantling, assembling the panels	4.10
Adjustable arm rest U*S	4.11
Dismantling, assembling the arm rest	4.11
Driver seat U*S	4.12
Adjusting	4.12

Table of Contents

Side 5

Edition 2009B

5 Drive unit

Introduction	5.3
Dismantling, assembling the drive unit	5.4
Drive wheel nut tightening torque	5.5
Drive motor, general instructions	5.6
Storage of machines and motors	5.6
First service	5.6
Preventive maintenance	5.6
Dismantling, assembling the motor	5.6
Replacing the motor bearings	5.7
Replacing the bearing housing	5.9
Reconditioning the motor.....	5.10
Motor bearings	5.10
Pinion nut tightening torque	5.10
Stator housing	5.10
Assembly	5.10
Gearbox.....	5.11
First service	5.11
Preventive maintenance	5.11
Replacing the gearbox	5.11
Drive shaft and drive wheel.....	5.13
Replacing the drive shaft seal	5.13
Replacing the drive wheel	5.14
Trouble shooting chart	5.15

Table of Contents

Side 6

Edition 2007A

6 Mast

Mast.....	6.3
Dismantling of masts 141, 200	6.3
Dismantling of masts 140, 160, 161	6.5
Adjusting the brass lugs 141, 200	6.6
Adjusting the mast, top 141, 200	6.6
Adjusting the masts 140, 160, 161	6.7
Mast damper (2003w03=>)	6.10
Reach carriage	6.12
Dismantling the reach carriage 141, 200	6.12
Dismantling of reach carriage 140, 160, 161	6.12
Adjusting the reach carriages 141, 200	6.12
Adjusting the reach carriages 140, 160, 161	6.14
Fork carriage	6.15
Adjusting the fork carriage, 141, 200	6.15
Adjusting the fork carriages 140, 160, 161	6.16
Dismantling, assembling the fork carriage	6.16
Fork test	6.17
Fork side shift unit.....	6.19
Trouble shooting	6.20
Lift cylinders.....	6.21
Adjusting the cylinder attachment in the mast	6.21
Lift chains	6.22
Adjusting the lift chains	6.22
Checking the lift chains	6.22
Regular maintenance	6.23
Re-fitting the chains	6.24
Trouble shooting.....	6.25
Trouble shooting chart 141, 200	6.25
Trouble shooting charts 140, 160, 161	6.25
Three-way-stack unit type 134 URF	6.26
Safety instructions	6.26
General description	6.27
Installation instructions	6.29
Torque [Nm]	6.30
Pipe and hose connection	6.31

Table of Contents

Side 7

Function test	6.31
Hydraulic lines and connections	6.32
Adjusting	6.34
Fork holder	6.35
Rotation cylinders	6.35
Boom	6.35
Cam adjustment	6.35
Pinion drive axle	6.37
Thrust rollers	6.37
Hydraulic motor	6.38
Working conditions and dismantling of motors	6.38
Inspection list	6.39

Table of Contents

Side 8

Edition 2005C

7 Steering

Introduction	7.3
Chapter structure	7.3
Comprehensive description - fly by wire steering	7.3
Comprehensive description - EPS 2001 steering	7.4
Steering servo motor	7.6
Adjustment of steering servo system - fly by wire	7.6
Dismantling the steering servo motor	7.6
Settings, adjustments and tests	7.7
Controller, functions - fly by wire	7.7
Setting of controller - fly by wire	7.7
Controller factory settings - fly by wire	7.9
Operation test of steering servo system - fly by wire	7.9
Mechanical adjustment to the steering sensors - EPS 2001	7.10
Operation test of the steering steering sensors - EPS 2001	7.10
Calibration of the sensor system - EPS 2001	7.10
Setting of steering wheel indicator - EPS 2001	7.10
Setting of straight steering - URF EPS 2001	7.11
Driver setting for steering sensitivity - EPS 2001	7.12
Options	7.13
Limited or continuous steering - EPS 2001	7.13
Mini-wheel or midi-wheel - EPS 2001	7.13
Diagnostics and trouble shooting	7.14
Fly by Wire	7.14
EPS 2001	7.15

Table of Contents

Side 9

Edition 2010A

8 Hydraulic system

Introduction	8.3
Description	8.3
Hydraulic system general regulations	8.5
Installation	8.5
Connections	8.5
Start up	8.6
Installation instruction for pipe couplings	8.6
Hydraulic filter	8.10
Replace	8.10
Pump motor	8.11
Dismantling	8.11
Replacing the motor bearings	8.12
Replacing the bearing housing	8.13
Assembly	8.13
Suction hose	8.14
Replace	8.14
Tank	8.16
Draining	8.16
Cylinders	8.17
Dismantling the reach cylinder	8.17
Dismantling, assembling the reach cylinder	8.18
Bleeding the reach cylinder	8.19
Dismantling the tilt cylinder from the truck	8.20
Dismantling, assembling the tilt cylinder	8.20
Valves	8.21
Operation of control valve	8.21
Adjusting the working pressure	8.22
Emergency lowering valve	8.22
Troubleshooting control valve	8.23
Setting the hose rupture valve	8.24
Hydraulic control	8.25
Calibration	8.25
Hydraulic diagram	8.27
Revision list	8.27

Table of Contents

Side 10

Edition 2001A

9 Lift cylinders

Free lift cylinder	9.3
Dismantling	9.3
Dismantling	9.4
Draining, bleeding	9.5
Outer cylinder.....	9.6
Dismantling	9.6
Dismantling	9.7
Free lift cylinder URF	9.8
Dismantling	9.8
Bleeding	9.13
Free lift cylinder URF, older design.....	9.14
Dismantling	9.14
Free lift cylinder URF, newer design	9.18
Dismantling	9.18

Table of Contents

Side 11

Edition 2010A

10 Electrical system

Introduction	10.5
Component description	10.5
Safety	10.5
Battery	10.7
Replace	10.7
Capacity measurement	10.8
Battery parameters from version 3.00	10.10
Chassis	10.11
Checking the ATC - chassis connection	10.11
Potential measurement	10.11
Optical aisle sensor, rail guidance	10.12
Caster wheel rotation lock, UFS	10.13
Connectors in cold storage rooms	10.15
Greasing	10.15
Drive and pump regulator (2005w04–)	10.16
Dismantling, assembling	10.16
Designation	10.16
General on control of the AC motors	10.16
Connections	10.16
Cable connections	10.17
Power cables	10.17
Insulation resistance	10.18
Routine test	10.18
Temperature measurement	10.19
Trouble shooting - hydraulic functions channels 3, 4 and 5	10.20
Magnetic switch for the reach stop	10.21
Reach stop	10.21
Reach stop damping (2005w04÷) (trucks with S3)	10.22
Fuses	10.24
Standard	10.24
Extra accessories	10.24
Horn	10.26
Connection	10.26
Atlet's truck computer ATC	10.27
Component and interface description	10.27

Table of Contents

Side 12

Handling	10.28
Service functions	10.29
Change passwords	10.29
Calibration and control of the hydraulic levers	10.30
Running time functions	10.30
Printing of statistics	10.30
Collision sensor	10.30
ATC connector	10.30
Checking the inputs and outputs	10.31
Digital inputs	10.31
Digital outputs "XC1-XC11"	10.33
Digital outputs B+ supply	10.34
Digital outputs 12 V supply	10.34
Digital outputs B+ supply	10.35
Valve parameters	10.35
Performance parameters	10.36
Error codes.....	10.41
General	10.41
Error code description	10.41
Warnings.....	10.55
Description	10.55
Menu tree ATC	10.56
Error log	10.56
Subinfo	10.56
General instructions with all types of faults on trucks in combination with power outage	
10.56	
Trouble shooting - operational disturbance.....	10.58
Truck and ATC	10.58
Battery	10.59
Main contactor	10.59
Fuse	10.60
The drive regulator status indicator	10.61
Traction motor	10.62
Pump motor	10.66
Pump regulator status indicator	10.69
Steering system - EPS 2001	10.70
The drive function	10.72
Forks	10.73
Automatic driving of the drive unit - UFS	10.79

Table of Contents

Side 13

Rotating wheel indication - UFS	10.79
Low temp drive/Low temp hydraul	10.80
High/Low voltage - EPS 2001	10.80
High temp Steering/Overheated steer - EPS 2001	10.81
Trouble shooting - error messages	10.82
E05, E06, E07, Electric servo - fly by wire	10.82
CAN	10.83
E97, E98. Drive system stopped/ Hydraulics stopped	10.84
E100, E101. Drive system abnormal/ Hydraulics abnormal	10.88
E102, E103, E107 Servo stopped/Servo abnormal -EPS 2001	10.90
E105, Drive system	10.94
E106, Pump system	10.96
Trouble shooting table - battery.....	10.99
Battery stop	10.99
Wiring diagram	10.100
Appendix 1, Menu tree	10.101

Table of Contents

Side 14

Edition 2009B

11 Speed control and Brake system

Speed control, U*S.....	11.3
Dismantling the speed and brake controls, U*S	11.3
Inspection and adjustment of the speed control	11.3
Gill sensor	11.4
Calibration of speed controller (Gill sensor)	11.4
Calibration of speed controller (SLOAN)	11.6
Brake pedal.....	11.8
Adjusting and inspecting the brake pedal	11.9
Calibration of UFS brake pedal	11.10
Left-foot switch, U*S	11.13
Dismantling, assembling the left-foot switch	11.13
Adjusting the left-foot switch	11.13
Preventive maintenance	11.14
Electric brake	11.14
Electric brake, 1 disc (-2003w01)	11.14
Electrical brake, new version (2003w02-)	11.16
Service	11.17
Trouble shooting.....	11.18
The brakes do not release	11.18

Table of Contents

Side 15

Edition 2009B

12 Extra accessories

Level selector	12.3
Setting the switch level system	12.4
Height preselection	12.4
Operating height preselection	12.4
Pulse height preset	12.5
Operation	12.6
Checking settings	12.7
Example of use	12.7
Height measurement instrument	12.8
General	12.8
Technology	12.8
Settings	12.8
Programming	12.8
Setting the offset value	12.9
Protecting the preset value	12.9
Setting COEFF	12.9
Setting dECPt	12.9
Final test	12.9
Sensor	12.10
Adjusting the sensor	12.10
Height indication on the display	12.10
Cabin	12.10
Heating and ventilation	12.10
Ergologic	12.13
Electric calibration	12.13
Mechanical adjustment of the lifting/lowering potentiometer	12.14
Semi-automatic tilt centring	12.14
Semi-automatic side-shift centring	12.15
Stability Support System, S3.....	12.15
Identification	12.15
Functionality	12.16
Drive Speed	12.17
Hydraulic functions	12.19
Technical description	12.19
S3 option 2 (S3-2) Weight indication	12.20

Table of Contents

Side 16

Functionality	12.20
Technical description	12.20
Calibration	12.20
Truck Remote ACcess, TRAC	12.23

Thanks for your reading.
Please click here to download complete manual
instantly.
And can also choose other manuals.

Feel free --->write to me with any questions.
Our service email:
manuals007@hotmail.com