



## Workshop literature

**STILL  
ELECTRONIC  
DOCUMENTATION  
SYSTEM**

### Diesel forklift truck

R70-60  
R70-70  
R70-80



7090 7091 7092

Ident no. 171117 - EN



## Edition 01.2008

- First issue



## 00 Product information

Foreword .....	00-1
Symbols Used .....	00-1
Safety instructions .....	00-2
Safety instructions .....	00-2
Securing the fork carriage .....	00-2
Jacking up the truck .....	00-4

## 11 Electric motor

Traction motor .....	11-1
General technical data .....	11-1
Traction drive .....	11-2
Traction motor .....	11-3
Insulation testing of traction motor .....	11-5
Removing and installing the traction motor .....	11-7
Dismantling and assembling the traction motor .....	11-10
Speed sensor .....	11-12
Tacho generator .....	11-12
Temperature sensor .....	11-14
Temperature switches in the traction motors and alternator .....	11-14
Carbon brushes .....	11-16
Monitoring the carbon brushes .....	11-16
Changing the carbon brushes .....	11-17
Generator .....	11-20
General technical data .....	11-20
Generator .....	11-21
Testing the alternator insulation .....	11-23
Removing and installing the alternator .....	11-24
Dismantling and reassembling the generator .....	11-28
Forced ventilation .....	11-32
Forced ventilation — structure and function .....	11-32
Working on the forced ventilation system .....	11-33

## 12 Internal combustion engine

Internal combustion engine .....	12-1
Engine .....	12-1

Removing and installing the engine unit .....	12-2
<b>Diesel engine .....</b>	<b>12-7</b>
General technical data .....	12-7
Engine number .....	12-8
Electronic Engine Management EMR .....	12-9
Transmitters .....	12-10
V-ribbed belt .....	12-12
Setting the valve clearance .....	12-13
Three-phase alternator .....	12-15
Exhaust turbocharger .....	12-16
Starter .....	12-17
Engine brake .....	12-18
Changing the cylinder head seal .....	12-19
Front crankshaft sealing ring .....	12-26
Flywheel-side crankshaft sealing ring .....	12-29
Renewing the oil sump seal .....	12-31
<b>13 Internal combustion engine - attachment parts</b>	
<b>Air intake .....</b>	<b>13-1</b>
Intake air routing .....	13-1
Air filter .....	13-2
<b>Cooling system .....</b>	<b>13-4</b>
Cooling circuit .....	13-4
Coolant .....	13-5
Coolant pump .....	13-7
Thermostat .....	13-8
Coolant temperature sensor .....	13-8
Fan impeller .....	13-9
Removing and installing the radiator .....	13-10
<b>Fuel system .....</b>	<b>13-11</b>
Overview .....	13-11
Fuel pump .....	13-12
<b>22 Mechanical drive axle</b>	
<b>Mechanical drive axle .....</b>	<b>22-1</b>
General technical data .....	22-1

Drive wheel unit	22-2
Wheel gear GR80 - 05	22-2
Exchanging the shaft seal	22-4
<b>34 Driver's compartment</b>	
Hood — covering — insulation	34-1
Bonnet	34-1
Bonnet catch	34-2
<b>42 Steering system</b>	
Hydraulic steering	42-1
General technical data	42-1
Steering	42-2
Steering unit	42-3
Priority valve	42-4
Steering axle	42-6
General technical data	42-6
Swing axle	42-7
Removing and installing the swing axle	42-8
Dismantling and reassembling the wheel hub	42-9
Steering angle	42-11
Removing and installing the tie rod	42-12
Dismantling and reassembling the axle stub	42-13
<b>46 Wheels and tyres</b>	
Complete wheel	46-1
Wheels and tyres	46-1
<b>49 Brake system</b>	
Hydraulic service brake	49-1
Service brake	49-1
Changing the brake lining	49-2
Parking brake	49-4
Changing the brake lining	49-4
Parking brake switch	49-5

**50 Driver's controls**

<b>Traction and brake operation</b> .....	50-1
Accelerator — single-pedal .....	50-1
Brake sensor .....	50-3
<b>Double pedal</b> .....	50-4
Accelerator – double-pedal .....	50-4
<b>Switches</b> .....	50-6
Key switch, .....	50-6

**56 Display elements**

<b>Display</b> .....	56-1
Console - Operation .....	56-1
Programming mode .....	56-4
Password level 0 .....	56-5
Password level 1 .....	56-6
Password level 2 .....	56-11

**60 Electrics / Electronics**

<b>General</b> .....	60-1
General technical data .....	60-1
Component overview .....	60-2
<b>Electrical system</b> .....	60-4
Fuse holder .....	60-4
Relays .....	60-5
Contactor stand — operating principle .....	60-6
Contactor stand — arrangement .....	60-8
<b>Warning system</b> .....	60-12
Alarm horn .....	60-12
<b>Battery and accessories</b> .....	60-13
Starter battery .....	60-13
<b>Other components</b> .....	60-15
Relay plate .....	60-15

**64 Electronic controllers**

<b>Traction and operating hydraulics control</b> .....	64-1
A4 control unit .....	64-1



Pin assignments for control unit A4	64-2
Changing the control unit	64-5
Calibration	64-6
<b>70 Hydraulics</b>	
<b>General</b>	<b>70-1</b>
General technical data	70-1
Tilting operating speeds	70-2
Lowering operating speeds	70-3
Safety check forward tilt	70-3
Safety check lowering	70-3
Safety checks of hose assembly	70-4
Hydraulic circuit diagram	70-6
Hydraulic circuit	70-8
<b>Basic hydraulics</b>	<b>70-10</b>
Hydraulic pump	70-10
Pump regulator	70-12
Removing and installing the variable displacement pump	70-13
Hydraulic tank	70-14
Hydraulic oil	70-14
Retarder valve	70-16
Conical nipple fittings (CNF)	70-16
Bolted joint	70-17
<b>71 Working hydraulics</b>	
Tilt cylinder	71-1
Changing the seal kit	71-1
<b>76 Valves</b>	
Directional control valve	76-2
Directional control valve block - activation	76-2
Directional control valve block - structure	76-4
Distance sensor	76-5
Counter-balance valve	76-7
Lowering brake valve	76-10
Lowering brake valve	76-10

## 81 Lift mast

Lift mast .....	81-1
General technical data .....	81-1
Telescopic mast .....	81-2
Triplex mast .....	81-3
Removing and installing the lift mast .....	81-4
Load chains .....	81-7
Lift chains .....	81-7
Adjusting the load chains .....	81-8
Line breakage protection .....	81-10
Hose safety valve of triplex mast .....	81-10
Shock valve installation positions .....	81-11
Lift cylinders .....	81-13
Lift cylinders .....	81-13
Rollers / support rollers .....	81-16
Support roller clearance .....	81-16

## 84 Load support

Fork carriage .....	84-1
Removing and installing the fork carriage .....	84-1

**Thanks for your reading.**

**Please click here to download complete manual instantly.**

**And can also choose other manuals.**

**Feel free --->write to me with any questions.**

**Our service email:**

**manuals007@hotmail.com**