

## Workshop literature

**STILL**  
**ELECTRONIC**  
**DOCUMENTATION**  
**SYSTEM**

## Diesel/LPG forklift trucks

RC40-16  
RC40-17  
RC40-18  
RC40-20  
RC40-25  
RC40-30  
RC40-33  
RC40-35



4041 4042 4043 4044 4045 4046  
4051 4052 4053 4054 4055 4056

first in intralogistics

## 00 Product information

Foreword .....	00-1
Information about the RC40 .....	00-1
<b>Safety information .....</b>	<b>00-2</b>
<b>To avoid accidents .....</b>	<b>00-2</b>
<b>Jacking up the front of the truck .....</b>	<b>00-2</b>
<b>Jacking up the rear of the truck .....</b>	<b>00-3</b>
<b>Securing the fork carriage .....</b>	<b>00-4</b>
<b>Safety regulations for handling consumables .....</b>	<b>00-5</b>
Oils .....	00-5
Hydraulic fluid .....	00-6
Diesel fuel .....	00-7
Coolant .....	00-8
Battery acid .....	00-9
Disposal of consumables .....	00-9

Diagnostics	00-10
Tightening torques by units	00-10
Standard torques	00-10
<b>01 Service</b>	
<b>Maintenance</b>	01-1
Maintenance instructions	01-1
Operations Preliminary to Maintenance	01-1
<b>Scheduled truck maintenance</b>	01-2
Summary table of maintenance operations	01-2
<b>Maintaining the KT20/KT 30 torque converter</b>	01-4
Changing the oil for the KT20/KT 30 torque converter	01-4
<b>Maintenance check lists</b>	01-5
Maintenance - 400 hours	01-5
Maintenance - 500 hours	01-5
Maintenance - 1000 hours/annually	01-7
Maintenance - 1500 hours or annually	01-9
Maintenance - 3000 hours/every two years	01-12
<b>02 Diagnostics</b>	
<b>KT 20/KT 30 torque converter</b>	02-1
Troubleshooting	02-1
Fault detection	02-2
<b>Kubota diesel engine 1.6/2.0 t - 2.5/3.5 t</b>	02-5
Checklist for engine overheating	02-5
Troubleshooting	02-7
<b>12 Internal combustion engine</b>	
<b>Kubota V 2403-M-DI-E3B diesel engine (1.6/2.0 t)</b>	12-1
Description	12-1
Engine attachment parts	12-1
General technical data	12-2
Engine dimensions	12-3
Engine identification	12-4
Tightening torques for special screws	12-4
<b>Lubricating system specification</b>	12-4
Lubricating system specification, diesel version 1.6/2.0 t	12-4
Forced circulation lubrication	12-5

<b>Kubota V 2607-DI-E3B diesel engine (2.5/3.5 t)</b> .....	<b>12-7</b>
<b>Description</b> .....	<b>12-7</b>
Engine attachment parts .....	<b>12-7</b>
General technical data .....	<b>12-8</b>
Engine dimensions .....	<b>12-9</b>
Engine identification .....	<b>12-10</b>
Tightening torques for special screws .....	<b>12-11</b>
<b>Lubricating system specification</b> .....	<b>12-12</b>
Lubricating system specification, diesel version 2.5/3.5 t .....	<b>12-12</b>
Forced circulation lubrication .....	<b>12-13</b>
<b>Start-up smoke elimination</b> .....	<b>12-15</b>
Start-up smoke elimination - Functionality .....	<b>12-15</b>
Checking the speed sensor start-up smoke elimination .....	<b>12-16</b>
Checking the start-up smoke elimination magnet .....	<b>12-17</b>
Checking the start-up smoke elimination actuator .....	<b>12-18</b>
Engine shut-off magnet .....	<b>12-19</b>
<b>Mounting the engine 2.5/3.5 t</b> .....	<b>12-20</b>
Mounting the torque converter and engine .....	<b>12-20</b>
<b>Kubota WG 2503 LPG engine (1.6/2.0 t - 2.5/3.5 t)</b> .....	<b>12-22</b>
<b>Lubricating system specification</b> .....	<b>12-22</b>
Lubrication system specification, LPG version 1.6/3.5 t .....	<b>12-22</b>

## 13 Internal combustion engine - attachment parts

<b>Air intake/filter</b> .....	13-1
Cleaning the air filter .....	13-1
<b>Cooling system</b> .....	13-2
Radiator .....	13-2
Cooling system specification, diesel version 1.6/2.0 t .....	13-2
Cooling system specification, diesel version 2.5/3.5 t .....	13-4
Cooling system specification, LPG version 1.6/3.5 t .....	13-4
Checking and cleaning the radiator fins .....	13-5
Removing and installing the radiator .....	13-6
Checking the coolant level .....	13-9
Checking the coolant concentration .....	13-9
Draining the coolant .....	13-10
Topping up the coolant .....	13-10
<b>Fuel system</b> .....	13-12
Assembly overview: fuel system .....	13-12
Air bleeding from the fuel feed circuit procedure .....	13-13
Kubota diesel engine 1.6–2.0 t .....	13-13
Fuel system specifications, diesel version 1.6/2.0 t .....	13-13
Injector .....	13-15
Injection pump .....	13-16
Pump element .....	13-17
Glow plug .....	13-18
Glow plug continuity .....	13-19
Kubota diesel engine 2.5-3.5 t .....	13-20
Fuel system specifications, diesel version 2.5/3.5 t .....	13-20
Injector .....	13-21
Glow plug continuity measurement .....	13-21
Injection pump unit .....	13-22
Injector opening pressure .....	13-23
Injection pump .....	13-24
Pressure valve .....	13-24
Engine speed regulator .....	13-26
<b>Fuel filter</b> .....	13-28
Draining water from the fuel filter .....	13-28
<b>LPG system</b> .....	13-29
LPG system .....	13-29
Impco components .....	13-31
Evaporator function - gas mixer .....	13-33

0B6 MAP/MAT sensor	13-35
Suction module	13-35
Chassis module	13-37
Gas shut-off valve unit	13-38
Gas shut-off valve monitoring	13-38
Shut-down due to lack of gas	13-40
Maintenance and test specifications	13-41
Testing CO level in exhaust gases	13-42
Servicing the LPG filter	13-43
Servicing the 30-bar excess pressure safety device	13-44
Evaporator - Maintenance	13-45
High-pressure relief valve - 1.7 bar	13-48
<b>LPG cylinder/tank</b>	<b>13-49</b>
LPG cylinder	13-49
Changing the gas cylinder	13-49
<b>14 Internal combustion engine - exhaust system</b>	
<b>Exhaust system - diesel</b>	<b>14-1</b>
Removing and installing the exhaust system	14-1
<b>22 Mechanical drive axle</b>	
<b>Drive axle</b>	<b>22-1</b>
Lubricating system specification for drive axle	22-1
Differences between axle KA 30 and KA 20	22-1
<b>Drive axle 2.5/3.5 t</b>	<b>22-2</b>
Removing and installing the drive axle	22-2
<b>Axle cooling system</b>	<b>22-5</b>
Gearbox oil cooling	22-5
Checking the oil level in the axle cooling system	22-6
Gearbox oil pump	22-6
Cleaning the screen filter for gearbox oil	22-7
Petrone double hydraulic pump, 19 cm <sup>3</sup>	22-9
Petrone double hydraulic pump, 28 cm <sup>3</sup>	22-10
<b>Cardan shaft</b>	<b>22-11</b>
Cardan shaft	22-11
Installing and removing the cardan shaft	22-11

<b>Torque converter</b> .....	<b>22-13</b>
<b>Description</b> .....	<b>22-13</b>
Differences between KT 30 and KT 20 converter gears .....	<b>22-13</b>
Functionality .....	<b>22-14</b>
Sectional drawing .....	<b>22-15</b>
Technical data .....	<b>22-16</b>
Modes of operation (power flow) .....	<b>22-17</b>
<b>Lubricating system</b> .....	<b>22-18</b>
Lubricating system specification, KT 20 torque converter (1.6/2.0 t) .....	<b>22-18</b>
Lubricating system specification, KT 30 torque converter (2.5/3.5 t) .....	<b>22-19</b>
<b>Dismantling and assembling the torque converter</b> .....	<b>22-19</b>
Mounting screws and pilot bearing .....	<b>22-19</b>
Overview of gearbox assembly .....	<b>22-20</b>
Overview of converter assembly .....	<b>22-22</b>
Dismantling the torque converter .....	<b>22-23</b>
Assembling the converter gear .....	<b>22-32</b>
Dismantling the gearbox in assemblies .....	<b>22-40</b>
Installing the gearbox units .....	<b>22-42</b>
Dismantling the clutch drum unit .....	<b>22-44</b>
Assembling the clutch drum unit .....	<b>22-46</b>
Dismantling the forward gear clutch drum .....	<b>22-48</b>
Assembling the forwards gear clutch drum .....	<b>22-51</b>
Dismantling the reverse gear clutch drum .....	<b>22-53</b>
Assembling the reverse gear clutch drum .....	<b>22-56</b>
Dismantling the idling unit .....	<b>22-58</b>
Assembling the idling assembly .....	<b>22-60</b>
Dismantling the output pinion unit .....	<b>22-61</b>
Assembling the output pinion unit .....	<b>22-62</b>
<b>Valve block</b> .....	<b>22-65</b>
Valve block .....	<b>22-65</b>
Dismantling the valve block assembly .....	<b>22-66</b>
Assembling the valve block assembly .....	<b>22-69</b>
Converter gear pressure measurement .....	<b>22-72</b>
Oil circulation .....	<b>22-73</b>

## 31 Chassis

<b>Counterweight</b> .....	<b>31-1</b>
Counterweight .....	<b>31-1</b>

## 34 Driver's compartment

<b>Bonnet</b> .....	<b>34-1</b>
Installing and removing the bonnet .....	<b>34-1</b>

<b>42</b>	<b>Steering system</b>	
	Steering axle 1.6/2.0 t	42-1
	Steering axle	42-1
	Installing the steering axle	42-5
	Steering axle 2.5/3.0 t	42-8
	General technical data	42-8
	Swing axle	42-9
	Swing axle Removal and installation	42-10
	Wheel hub	42-12
	Steering angle	42-15
	Tie rod	42-16
	Axle stub	42-17
<b>46</b>	<b>Wheels and tyres</b>	
	General information	46-1
	Filling the tyres	46-1
	Winter tyres	46-1
	Tyrewear check	46-2
	General information for changing tyres	46-3
	Changing the wheels 1.6/2.0 t	46-4
	Checking the tightening torque of the wheel nuts (1.6/2.0 t)	46-4
	Wheel replacement procedure	46-5
	Changing the wheels 2.5/3.5 t	46-9
	Checking the tightening torque of the wheel nuts (2.5/3.5 t)	46-9
	Wheel replacement procedure	46-10
	Disassembling a wheel	46-14
	Disassembly/assembly of tyres on rims with movable flange	46-14
	Quick tyres assembly/disassembly	46-16
<b>49</b>	<b>Brake system</b>	
	Service brake	49-1
	Brake cylinder technical data	49-1
	Installing and removing the brake cylinder	49-1
	Stop lights microswitch	49-6
	Brake and inching pedal	49-7
	Brake system – General	49-7
	Function of the brake and inching pedal	49-7



Installing and removing the inching cable .....	49-8
Adjusting the inching pedal .....	49-14
Adjusting the brake pedal .....	49-15
<b>Parking brake .....</b>	<b>49-17</b>
Installing and removing the handbrake cable .....	49-17
Removing and installing the handbrake microswitch .....	49-21
Adjusting the handbrake .....	49-23
<b>Maintenance .....</b>	<b>49-24</b>
Filling and bleeding the brake system (Iruna brake cylinder) .....	49-24
Bleeding the brake system .....	49-29
<b>50 Operating devices</b>	
<b>Accelerator pedal .....</b>	<b>50-1</b>
Adjusting the pedal travel .....	50-1
Installing and removing the accelerator pedal .....	50-1
Removing and installing the accelerator pedal cable .....	50-3
<b>60 Electrics/electronics</b>	
<b>Electrical system .....</b>	<b>60-1</b>
Diesel version fuses .....	60-1
Fuses for LPG version .....	60-3
<b>Wiring .....</b>	<b>60-5</b>
Power cables .....	60-5
Maintenance guidelines for power cables .....	60-6
Repair - Contact elements .....	60-6
<b>Other components .....</b>	<b>60-8</b>
SRO drive direction switch monitoring module .....	60-8
ISO seat contact monitoring unit .....	60-9
<b>69 Batteries and accessories</b>	
<b>Starter battery .....</b>	<b>69-1</b>
Starter battery .....	69-1
<b>70 Hydraulics</b>	
<b>Basic hydraulics .....</b>	<b>70-1</b>
Conical nipple fittings (CNF) .....	70-1
Bolted joint .....	70-1

## 71 Working hydraulics

Tilt cylinder .....	71-1
Tilt cylinder Removal and installation .....	71-1
Dismantling the tilt cylinders .....	71-2
Pump unit .....	71-4
Petrone double hydraulic pump, 28 cm <sup>3</sup> .....	71-4
Petrone double hydraulic pump, 19 cm <sup>3</sup> .....	71-5
Hydraulic pump mounting .....	71-6

## 73 Hydraulic components

Pump for axle cooling system .....	73-1
Gearbox oil pump .....	73-1

## 76 Valves

Safety valve .....	76-1
Safety valve technical data .....	76-1
Safety valve .....	76-3

## 81 Lift mast

Lift mast .....	81-1
General technical data .....	81-1
Fork arm emergency lowering procedure .....	81-1
Telescopic lift mast .....	81-3
NiHo lift mast .....	81-4
Triplex lift mast .....	81-5
Lift mast - Removal .....	81-6
Lift mast - installation .....	81-8
Load chains .....	81-10
Load chains Checking, cleaning .....	81-10
Adjusting the load chains Telescopic lift mast (108/117/130) .....	81-11
Adjusting the load chains NiHo lift mast (108/117/130) .....	81-14
Middle load chain Triplex lift mast (108/117/130) .....	81-16
Outer load chain Triplex lift mast .....	81-18
Load chain locking device .....	81-20
Run-out barrier .....	81-21
End position damping .....	81-22
Outer cylinder end position damping .....	81-22
Middle cylinder end position damping .....	81-23

<b>Line break safety device</b> .....	<b>81-24</b>
<b>Line break safety device</b> .....	<b>81-24</b>
<b>Lift mast 1.6/1.8 t</b> .....	<b>81-25</b>
Telescopic lift mast 1.6/1.8 t .....	<b>81-25</b>
NiHo lift mast 1.6/1.8 t .....	<b>81-26</b>
Triplex lift mast 1.6/1.8 t .....	<b>81-27</b>
<b>Lift mast 2.0 t</b> .....	<b>81-28</b>
Telescopic lift mast 2.0 t .....	<b>81-28</b>
NiHo lift mast 2.0 t .....	<b>81-29</b>
Triplex lift mast 2.0 t .....	<b>81-30</b>
<b>Lift mast 2.5/3.0 t</b> .....	<b>81-31</b>
Telescopic lift mast 2.5/3.0 t .....	<b>81-31</b>
NiHo lift mast 2.5/3.0 t .....	<b>81-32</b>
Triplex lift mast 2.5/3.0 t .....	<b>81-33</b>
<b>Lift mast 3.5 t</b> .....	<b>81-34</b>
Telescopic lift mast 3.5 t .....	<b>81-34</b>
NiHo lift mast 3.5 t .....	<b>81-35</b>
Triplex lift mast 3.5 t .....	<b>81-36</b>
<b>Lift cylinder</b> .....	<b>81-37</b>
<b>Lift cylinder</b> .....	<b>81-37</b>
<b>Outer cylinder</b> .....	<b>81-37</b>
<b>Centre cylinder</b> .....	<b>81-39</b>
<b>Cylinder head</b> .....	<b>81-40</b>
<b>Rollers/support rollers</b> .....	<b>81-43</b>
<b>Support roller play</b> .....	<b>81-43</b>
<b>Assembling the mast/carriage support rollers</b> .....	<b>81-45</b>
<b>Check</b> .....	<b>81-46</b>
<b>Fork carriage</b> .....	<b>81-47</b>
<b>Fork carriage</b> .....	<b>81-47</b>

**Thanks for your reading.**

**Please click here to download complete manual instantly.**

**And can also choose other manuals.**

**Feel free --->write to me with any questions.**

**Our service email:**

**manuals007@hotmail.com**