

Workshop literature

**STILL
ELECTRONIC
DOCUMENTATION
SYSTEM**

Electric forklift truck

RX20-15 - 20, RX60-16 - 20



6209 6210 6211 6212 6213 6214
6215 6216 6217 6311 6313 6315

first in intralogistics

50638042201 EN - 06/2013

00 Product information

Foreword	00- 1
About the RX20-15 - 20	00- 1
About the RX60-16 - 20	00- 3
Safety information	00- 5
Safety instructions Electrical system	00- 5
Jacking up the front of the truck	00- 5
Jacking up the rear of the truck	00- 7
Securing the fork carriage	00- 8

01 Service

Maintenance	01- 1
Maintenance instructions	01- 1
Maintenance — 1000 hours/annually	01- 3
Maintenance — 3000 hours/every six months	01- 5
Tool	01- 7
Measuring and testing equipment	01- 7
Standard torques	01- 8

11 Electric motor

Traction motor	11- 1
General technical data	11- 1
Electrical connections	11- 1
Traction drive	11- 2
Rev sensor	11- 4
Pin sensor	11- 4
Temperature sensor	11- 6
Temperature sensor KTY84	11- 6

22 Mechanical drive axle

Drive axle AE18-05	22- 1
General technical data	22- 1
Drive axle	22- 2
Drive axle removal and installation	22- 3
Wheel drive	22- 7
Removal/installation of the drive wheel unit	22- 8
Repairing the drive wheel unit	22-10

Traction motor	22-13
Removing/installing the service brake	22-16
Drive axle AE18-07	22-20
General technical data	22-20
Drive axle AE18-07	22-21
Removing the drive wheel unit	22-22
Changing the shaft seal on the drive wheel unit	22-23
Refitting the drive wheel unit	22-27
Traction motor – Removing the rotor	22-27
Replacing the traction motor bearing and shaft seal	22-29
Traction motor - Installing the rotor	22-31
Dismantling the brake	22-32
Assembling the brake	22-34
Filling with oil	22-37
31 Chassis	
Chassis	31- 1
Battery door	31- 1
Counterweight	31- 2
Counterweight	31- 2
34 Driver's compartment	
Overhead guard	34- 1
Overhead guard	34- 1
Removing the overhead guard	34- 3
Installing the overhead guard	34- 8
42 Steering system	
Hydraulic steering	42- 1
General technical data	42- 1
Steering system	42- 2
Steering — error detection	42- 4
Steering unit	42- 5
6S3 diaphragm pressure switch	42- 7
Priority valve	42- 9
Steering wheel with steering column	42-11
Steering column	42-11
Steering angle sensor	42-13

Steering angle-dependent handling performance — CSC	42-15
CSC — functional test	42-16
Steering axle	42-19
General technical data Fifth wheel	42-19
General technical data Swing axle	42-20
Cornering switch	42-21
Fifth wheel	42-22
Removing/installing the fifth wheel	42-22
Swing axle	42-26
Removing/installing the swing axle	42-27
Wheel hub	42-30
Steering angle	42-32
Tie rod	42-33
Axle stub	42-34
49 Brake system	
Mechanical service brake	49- 1
Service brake AE18-05	49- 1
Brake cable changer AE18-05	49- 3
Service brake AE18-07	49- 5
Brake cable changer AE18-07	49- 6
Handbrake	49- 8
Handbrake cable changer	49- 8
Actuating force of the handbrake	49- 9
Parking brake switch 1S3	49-10
Electric parking brake	49-12
Electric parking brake	49-12
Function	49-13
Cause and effect	49-15
Design and system description	49-17
Maintenance instructions	49-19
Checking the brake	49-20
Calibration and functional test	49-22
Changing the parking brake cable	49-25
Limit position switch	49-28
Drive unit Installation and removal	49-30
Central lubrication device Installation and removal	49-32

50 Operating devices

Brake pedal	50- 1
Brake sensor	50- 1
Single pedal	50- 3
Accelerator — single-pedal	50- 3
Dead man switch 7S13	50- 6
Dual pedal	50- 7
Accelerator – dual pedal 2nd generation	50- 7
Accelerator – dual pedal 1st generation	50-12
Operating devices	50-17
Hand lever	50-17
Joystick	50-18
Joystick operation	50-20
Generation 1 mini-lever	50-21
Generation 2 mini-lever	50-23
Generation 2 mini-leverActuation	50-25
Tip switch	50-27
Axle assignment	50-29
Direction indicator module (Fabli)	50-32

56 Display elements

Operating console	56- 1
Drive direction turn indicator display	56- 1
Display	56- 3
Display operating unit (ABE 1) Generation 1	56- 3
ABE 1 Installation and removal	56- 5
Display operating unit (ABE 2) Generation 2	56- 6
ABE 2 Installation and removal	56- 8

60 Electrics / Electronics

General	60- 1
General technical data - 48 Volt	60- 1
General technical data - 80 Volt	60- 3
Overview of the controllers	60- 4
Electrical system	60- 5
Electrical components	60- 5
Switching on procedure for the electrical system	60- 7

Software compatibility	60-12
PAN process	60-13
Parameter management	60-14
Error ring buffer	60-15
Intermediate circuit	60-16
Insulation testing for electric trucks	60-18
Component insulation testing	60-20
Traction motor temperature monitoring	60-22
Pump motor temperature monitoring	60-24
Converter temperature monitoring	60-25
Drive mode — driving behaviour Availability	60-26
Drive mode — driving behaviour Description	60-27
Blue-Q = IQ	60-28
Wiring	60-30
CAN bus connections	60-30
Power cables	60-31
Maintenance guidelines for power cables	60-32
Repair - Contact elements	60-32
Electrical system	60-34
Fuse box	60-34
Fuses	60-34
Fuse plate Until April 2005	60-37
Fuses Until April 2005	60-39
Contactor	60-40
Sensor system	60-42
Vertical lift mast position	60-42
Tilt angle sensor 7B46	60-43
Tilt angle sensor parameters	60-45
Installation of the vertical lift mast position	60-46
Load measurement	60-49
Load measurement pressure sensor	60-51
Additional electrical installations	60-53
Distributor card	60-53
Option board	60-54
CAN-Power-Port (CPP)	60-55
CPP 1/CPP 3	60-55
CPP 2B	60-57

CPP 2/ CPP 4	60-58
CPP battery carrier (CPP5)	60-58
Relay-Power-Port	60-59

64 Electronic controls

Traction and working hydraulics control	64- 1
Main Control Unit (MCU)	64- 1
MCU with servo hydraulics	64- 2
MCU generation 2	64- 3
Main Control Unit (MCU) Removal and installation	64- 3
Supply Unit (SU)	64- 5
Supply Unit (SU) Removal and installation	64- 7
Converter	64-10
Inverters	64-10
Converter LAC - 48/80 Volt	64-10
Converter SAC - 48 Volt	64-12
Converter - removal and installation	64-13

69 Batteries and accessories

Traction battery	69- 1
Battery	69- 1
Battery plug	69- 3
Maintenance guidelines for appliance plugs	69- 4
Repair - Battery male connector contacts	69- 6
Working with reducer sleeves	69- 8
Discharge indicator	69- 9

70 Hydraulics

General	70- 1
General technical data	70- 1
Lifting operating speeds	70- 2
Tilting operating speeds	70- 3
Lowering operating speeds	70- 4
Forward tilt safety test	70- 4
Lowering safety test	70- 5
Safety checks of hose assembly	70- 5
Depressurising the hydraulics	70- 6

Basic hydraulics	70- 8
Basic hydraulics	70- 8
Steering hydraulics	70- 9
Working hydraulics	70-10
Hydraulic tank	70-11
Hydraulic oil	70-11
Return filter	70-12
Breather filter	70-14
Suction filter	70-15
High-pressure filter	70-16
Conical nipple fittings (CNF)	70-17
Bolted joint	70-17
71 Working hydraulics	
Pump unit	71- 1
General technical data	71- 1
Pump unit	71- 2
Electrical connections	71- 4
Pump motor without rev sensor	71- 4
Pump motor speed sensor	71- 5
Pump motor temperature sensor	71- 6
Pump motor removal	71- 8
Pump motor installation	71-10
Hydraulic pump	71-13
Hydraulic pump Removal and installation	71-14
Tilt cylinder	71-18
Mast tilt	71-18
Tilt cylinder Removal and installation	71-18
Changing the set of seals 1500 - 2000 kg	71-19
Auxiliary hydraulics	71-23
Attachments	71-23
Second operating function for attachments	71-24
Clamp locking mechanism with servo hydraulics	71-24
Clamp locking mechanism for hand levers	71-26
76 Valves	
Hand lever	76- 1
General technical data	76- 1

Hand lever valve block	76- 3
Emergency lowering	76- 4
Hydraulic transmitter	76- 5
Dismantling and installing valve block	76- 7
Directional control valve with blocking function (Buchholz)	76-11
Directional control valve with check valve 2Y46	76-11
Discharge pressure governor (lowering brake)	76-12
Check valve for hydraulics blocking function	76-12
Directional control valve without blocking function (Hawe)	76-14
Directional control valve - function	76-14
Directional control valve for lifting/tilting	76-15
Directional control valve - addition 1 and 2	76-17
Pressure relief valve	76-18
Load holding valve	76-19
Lowering brake	76-20
Servo hydraulics	76-21
General technical data	76-21
Servo hydraulics valve block	76-22
Manual lowering	76-23
Directional control valve block	76-24
Directional control valve - method of operation	76-26
81 Lift mast	
Lift mast	81- 1
General technical data	81- 1
Telescopic lift mast	81- 2
NiHo lift mast	81- 3
Triple mast	81- 4
Lift mast — removal	81- 6
Lift mast — installation	81- 8
Load chains	81-10
Load chains Checking, cleaning	81-10
Adjusting the load chains Telescopic mast	81-11
Adjusting the load chains NiHo lift mast	81-13
Outer load chain Triple mast	81-15
Middle load chain Triple mast	81-17

End position damping	81-20
End position damping of outer cylinder	81-20
Middle cylinder end dampener	81-21
Line break safety device	81-22
Hose safety valve of triplex mast	81-22
Shock valve installation positions	81-23
Lift cylinder	81-25
Lift jack	81-25
Outer cylinder	81-25
Centre cylinder	81-27
Cylinder head	81-28
Rollers / support rollers	81-31
Support roller clearance	81-31
84 Load castors	
Fork carriage	84- 1
Fork carriage	84- 1
Roller	84- 2

Annex

X Circuit diagrams

Hydraulics	X- 1
Hand lever until calendar week 38/2009	X- 1
Hand lever from calendar week 39/2009	X- 3
Servo hydraulics	X- 5

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com