



Workshop literature

STILL
ELECTRONIC
DOCUMENTATION
SYSTEM

Diesel/LPG forklift trucks



4011 4012 4013 4014 4015 4016
4017 4018 4019 4020

41818042201 EN - 09/2010

first in intralogistics

00 Product information

Foreword	00- 1
Information on RC40 1.5-3.0 t	00- 1
Safety precautions	00- 2
How to Consult the Manual	00- 2
Operations Preliminary to Maintenance	00- 2
To avoid accidents	00- 2
General safety Regulations	00- 3
Safety Regulations Relative to Operating Materials	00- 5

12 Engine

Engine models 4TNE92 and 4TNE98	12- 1
General service information	12- 1
Component identification	12- 1
Functions of the main engine components	12- 3
Diesel fuel specifications	12- 5
Priming the fuel supply system	12- 7
Specifications	12- 9
Main engine specifications	12-10
Engine processing	12-12
Tightening torques for standard bolts and nuts	12-13
Fuel system	12-15
Removal of the fuel injection pump	12-15
Installation of the fuel injection pump	12-19
Checking/adjusting the fuel injection timing	12-22
Maintenance of the fuel injectors	12-24
Fuel injectors inspection and testing	12-25
Servicing	12-30
Standard torques table	12-30
Engine oil level checking procedure	12-30
Checking / replacing the feed pipes and cooling hoses	12-31
Checking and adjusting the V-belt of the cooling fan	12-32
Changing the engine oil and oil filter	12-34
Checking and adjusting the regulator lever and engine speed control	12-37
Checking and adjusting the valve clearance	12-38
Changing the fuel filter	12-40
Troubleshooting	12-43
Troubleshooting information	12-43
Quick reference table for troubleshooting solutions	12-44
Troubleshooting solutions	12-47

Engine models Nissan K21 and K25	12-49
General service information	12-49
Main specifications	12-49
Engine plate	12-51
Standard data and repair limit	12-52
Tightening torque	12-56
Troubleshooting	12-59
Engine troubleshooting	12-59
LPG system troubleshooting	12-66
Onboard inspection and maintenance	12-67
Headed screw tightening	12-67
Retightening the manifold, nut and screw	12-68
Adjusting the intake/exhaust valve clearance	12-68
Inspecting and adjusting the accessory belt	12-69
Changing the oil and oil filter	12-70
Engine casing inspection	12-71
Retightening the cylinder head screws	12-71
Retightening the manifold nuts	12-71
Adjusting the valve clearance	12-72
Changing the engine coolant	12-72
Cleaning the exterior of the radiator	12-72
Checking the cooling hoses and connections	12-73
Checking the compression pressure	12-73
Fuel supply system inspection	12-74
Cleaning and replacing the air filter	12-74
Inspecting the mixer	12-74
Maintaining the mixer	12-74
Inspecting the FICD (fast idle control device)	12-75
Inspecting and changing the glow plugs	12-75
Inspecting the distributor	12-76
Inspecting the distributor cap and carbon terminals	12-76
Inspecting the rotor head	12-77
Inspecting the central signal rotor	12-77
Inspecting the vacuum control system	12-77
Inspection after refitting the distributor	12-77
Cleaning the interior of the distributor	12-77
Measuring the engine speed (carburettor model only)	12-77
Inspecting and adjusting the ignition timing, idle speed and air-fuel mixture.	12-79
Inspecting and adjusting the air-fuel mixture	12-80
Adjusting device	12-80
Adjusting the maximum RMP speed without load	12-81
Adjusting the maximum RMP speed with load	12-81
Inspecting the FICD (fast idle control device)	12-81
Special maintenance tools for the model with carburettor	12-82

13 Engine accessory parts

Setup	13- 1
Engine setup replacements	13- 1
Mounting the engine 1.5/2.0 t	13- 4
Engine	13- 4
Engine reassembly	13-11
Mounting the engine 2.5/3.0 t	13-15
Reinstalling the engine	13-15
Air intake	13-18
Air filter	13-18
Cleaning the air filter	13-21
Cooling system	13-23
Radiator	13-23
Checking the coolant level 1.5/2.0 t	13-27
Coolant level checking procedure	13-27
Checking the coolant level 2.5/3.0 t	13-29
Coolant level checking procedure	13-29
Checking and cleaning the radiator fins	13-31
Draining, rinsing and filling the cooling system with new coolant	13-32
Tank	13-34
Fuel tank	13-34

14 Exhaust gas system

Exhaust gas system	14- 1
Silencer and exhaust	14- 1

20 Transmission

Technical data for the TXL30	20- 1
General transmission views (TXL30)	20- 1
Transmission technical data (TXL30)	20- 3
General transmission description (TXL 30)	20- 4
Transmission sectional views for the TXL30	20- 7
Transmission wiring diagram	20- 9
Distributor technical data (TXL30)	20-10
Description of the hydraulic circuit	20-11
Transmission fastening for the TXL30	20-12
Engine-transmission coupling	20-12

Checking the engine-gearbox coupling	20-14
Maintenance for the TXL30	20-15
Transmission oil level inspection procedure	20-15
Check axle oil level	20-15
Troubleshooting	20-16
Troubleshooting	20-16
31 Truck	
Truck	31- 1
Counterweight	31- 1
Reinstalling the counterweight 1.5/2.0 t	31- 6
Counterweight reassembly	31- 6
Reinstalling the counterweight 2.5/3.0 t	31- 9
Reinstalling the counterweight	31- 9
34 Driver's compartment	
Driver's compartment	34- 1
Driver's compartment central cross traverse	34- 1
Driver's compartment	34- 5
Driver's compartment reassembly	34-12
Driver's compartment spring supports	34-14
Covers	34-18
Driver's compartment covers and panelling	34-18
42 Steering	
Hydraulically assisted steering	42- 1
Hydraulically assisted steering technical data	42- 1
Hydraulically assisted steering column unit	42- 3
Hydraulically assisted steering - troubleshooting and corrective actions	42- 8
Steering axle 1.5/2.0 t	42- 9
Steering axle	42- 9
Reinstalling the steering axle	42-13
Steering axle 2.5/3.0 t	42-15
Reinstalling the steering axle	42-15

46 Wheels and tyres

General information	46- 1
Safety regulations for wheels and rims	46- 1
General information for changing tyres	46- 2
Tyrewear check	46- 3
Changing the wheels 1.5/2.0 t	46- 4
Wheel replacement procedure	46- 4
Changing the wheels 2.5/3.0 t	46- 8
Wheel replacement procedure	46- 8
Disassembling a wheel	46-12
Disassembly/assembly of tyres on rims with movable flange	46-12
Quick tyres assembly/disassembly	46-14
Tightening torques 1.5/2.0 t	46-17
Wheel Tightening Check	46-17
Tightening torques 2.5/3.0 t	46-18
Wheel Tightening Check	46-18

49 Braking/inching system

Braking system operating characteristics	49- 1
Braking system technical data	49- 1
Braking system reassembly	49- 4
Service brake	49-12
Brake pump	49-12
Brake shoes	49-15
Stop lights microswitch	49-19
Parking brake	49-20
Parking brake lever	49-20
Parking brake microswitch	49-22
Parking brake cables	49-25
Servicing	49-29
Brake fluid level check	49-29
Air bleeding from the brake pipes	49-30

50 Controls

Twin pedal	50- 1
Accelerator pedal	50- 1

Accelerator cable	50- 4
56 Instruments	
Instrument panel	56- 1
Instrument panel	56- 1
60 Electrical and electronic system	
Battery	60- 1
Battery carrier	60- 1
Checking the battery	60- 5
Fuses	60- 7
Fuse and relay location	60- 7
Fuse replacement	60- 9
71 Working hydraulic system	
Service and lifting pump 1.5/2.0 t	71- 1
Service and lifting pump technical data	71- 1
Service and lifting pump 2.5/3.0 t	71- 3
Service and lifting pump technical data	71- 3
71 Hydraulic components	
Service and lifting pump	71- 1
Service and lifting pump	71- 1
Tank	71- 3
Hydraulic oil tank technical data	71- 3
Oil tank	71- 4
Oil filter unit	71- 8
Hydraulic tank oil level check procedure	71- 9
76 Valves	
Shut-off valves	76- 1
Safety valve (load lowering block) (VBDC)	76- 1
Safety valve	76- 2
Safety valve	76- 2
Safety valve technical data	76- 3
Safety valve layout 1.5/2.0 t	76- 5
Safety valve layout	76- 5

Safety valve layout 2.5/3.0 t	76-10
Safety valve positioning on the simplex lift mast	76-10
Safety valve positioning on the duplex lift mast	76-11
Safety valve positioning on the triplex lift mast	76-12
Distributor valves	76-13
Lifting distributor technical data	76-13
80 Lift mast	
Lift mast 1.5/2.0 t	80- 1
Lift typologies	80- 1
Simplex lift mast (Tele)	80- 4
Simplex lift mast functional description	80- 4
Hydraulic circuit for supplying the simplex lift mast cylinders	80- 5
Adjusting the Simplex lift load chain	80- 6
Simplex lifting diagram	80- 7
Duplex lift mast (HiLo)	80- 9
Duplex lift mast functional description	80- 9
Hydraulic circuit for supplying the duplex lift mast cylinders	80-10
Adjusting the load chains of the duplex lift mast	80-12
Duplex lifting diagram	80-13
Triplex lift mast	80-16
Triplex lift mast functional description	80-16
Hydraulic circuit for supplying the triplex lift cylinders	80-17
Adjusting the lift chains on the triplex lift mast	80-19
Triplex lifting diagram	80-20

Load chain locking device	80-23
Fork carriage retaining device	80-23
Assembly of the mast / carriage support rollers	80-23
Check	80-25
Disassembly of the Simplex lift cylinder	80-26
Removing the side cylinders of the duplex lift mast	80-27
Disassembly of the side cylinders of the Triplex lift	80-29
Duplex / Triplex central cylinder	80-31
Limit stop dampers	80-33
Disassembly of the fork carriage	80-34
Lift	80-35
Lift reassembly	80-40
Lift mast 2.5/3.0 t	80-41
Lift typologies	80-41
Simplex lift mast	80-44
Description of the simplex lift mast	80-44
Hydraulic circuit for supplying the simplex lift mast cylinders	80-45
Adjusting the simplex lift mast load chain	80-46
Duplex lift mast	80-47
Description of the duplex lift mast	80-47
Hydraulic circuit for supplying the duplex lift mast cylinders	80-48
Adjusting the load chains of the duplex lift mast	80-49
Triplex lift mast	80-50
Triplex lift mast functional description	80-50
Hydraulic circuit for supplying the triplex lift mast cylinders	80-51
Adjusting the lift chains on the triplex lift mast	80-52

Load chain locking device	80-53
Fork carriage retaining device	80-53
Assembly of the mast / carriage support rollers	80-54
Check	80-56
Removing the cylinder of the simplex lift mast	80-58
Removing the side cylinders of the duplex lift mast	80-60
Removing the side cylinders of the triplex lift mast	80-62
Removing the duplex/triplex central cylinder	80-65
Limit stop dampers (duplex and triplex)	80-68
Removing the fork carriage	80-69
Reinstalling the lift mast	80-70
Tilt cylinders 1.5/2.0 t	80-72
Tilt cylinder	80-72
Tilt cylinder	80-74
Tilt cylinders 2.5/3.0 t	80-76
Tilt cylinder	80-76
Cylinders	80-78
Lift cylinders	80-78
Air bleeding of the lift cylinders	80-85
Bleeding the tilt cylinders of air	80-87

Annex

A Diagrams

Circuit diagrams	A- 1
Diagram 4011-13 4017-18	A- 1
Truck functional diagram	A- 1
Diagram 4014-16 4019-20	A- 3
Truck functional diagram	A- 3
Lights diagram	A- 5
Lights functional diagram	A- 5
Hydraulic diagrams	A- 7
Diagram 4011-16	A- 7
Hydraulic diagram	A- 7
Diagram 4017-20	A- 9
Hydraulic diagram	A- 9

Foreword

Information on RC40 1.5-3.0 t

The following table gives all the models and their main components.

Main features

Model	Supply	Engine	Transmission	Technical code
RC40 - 15	Diesel fuel	4TNE92	TXL20	4011
RC40 - 18	Diesel fuel	4TNE92	TXL20	4012
RC40 - 20	Diesel fuel	4TNE92	TXL20	4013
RC40 - 15 T	LPG	K21	TXL20	4014
RC40 - 18 T	LPG	K21	TXL20	4015
RC40 - 20 T	LPG	K21	TXL20	4016
RC40 - 25	Diesel fuel	4TNE98	TXL30	4017
RC40 - 30	Diesel fuel	4TNE98	TXL30	4018
RC40 - 25 T	LPG	K25	TXL30	4019
RC40 - 30 T	LPG	K25	TXL30	4020

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com