



## Workshop literature

**STILL**  
**ELECTRONIC**  
**DOCUMENTATION**  
**SYSTEM**

## Electric forklift truck

RX50-10  
RX50-13  
RX50-15  
RX50-16



5060 5061 5063 5065 5066  
55048042201 EN - 08/2011

first in intralogistics

## 00 Product information

Foreword .....	00- 1
About RX50-10-16 .....	00- 1
Safety information .....	00- 3
Safety instructions Electrical system .....	00- 3
Jacking up the front of the truck .....	00- 3
Jacking up the rear of the truck .....	00- 4
Securing the fork carriage .....	00- 5
Maintenance .....	00- 7
Maintenance as required .....	00- 7
1000-hour maintenance .....	00- 9
2000-hour maintenance .....	00-11
3000-hour maintenance .....	00-13
Diagnostics .....	00-15
Measuring and testing equipment .....	00-15
Special tools .....	00-16
Standard torques .....	00-16

## 11 Electric motor

Traction motor .....	11- 1
General technical data .....	11- 1
Electrical connections .....	11- 1
Drive unit .....	11- 2
Rev sensor .....	11- 4
Pin sensor 6B17 .....	11- 4
Temperature sensor .....	11- 6
Temperature sensor KTY84 .....	11- 6

## 22 Mechanical drive axle

Drive wheel unit .....	22- 1
Wheel hub removal .....	22- 1
Installing the wheel hub .....	22- 2
Power unit .....	22- 4
General technical data .....	22- 4
power unit .....	22- 5

## 31 Chassis

Chassis .....	31- 1
Battery removal without the battery carrier .....	31- 1
Counterweight .....	31- 3
Counterweight .....	31- 3

## 41 Front axle

Running axle .....	41- 1
General technical data .....	41- 1
Running axle .....	41- 2
Replacing the wheel bearings .....	41- 3

## 42 Steering system

Hydraulic steering .....	42- 1
General technical data .....	42- 1
Steering system .....	42- 2
Steering — error detection .....	42- 2
Steering motor .....	42- 3
Sprocket with trigger wheel .....	42- 4
Steering unit .....	42- 5
Priority valve .....	42- 6
Steering angle-dependent handling performance — CSC .....	42- 8
CSC — functional test .....	42- 9
Steering motor sensor 3B29 .....	42-10
Zero position sensor 3B28 .....	42-12
Steering wheel with steering column .....	42-14
Steering column .....	42-14
Steering angle sensor 3B01 .....	42-15

## 49 Brake system

Hydraulic service brake .....	49- 1
Replacing the brake shoes .....	49- 1
Checking the service brake .....	49- 2
Wheel brake cylinder .....	49- 3
Brake master cylinder .....	49- 3
Brake sensor 1B2 .....	49- 5
Brake fluid switch .....	49- 6

Handbrake .....	49- 7
Adjusting the parking brake .....	49- 7
<b>50 Operating devices</b>	
Single pedal .....	50- 1
Accelerator — single-pedal .....	50- 1
Dual pedal .....	50- 4
Accelerator — dual pedal .....	50- 4
<b>Operating devices</b> .....	50- 8
Hand lever .....	50- 8
Joystick .....	50- 9
Joystick operation .....	50-11
Generation 2 mini-lever .....	50-13
Generation 2 mini-leverActuation .....	50-15
Tip switch .....	50-17
Axle assignment .....	50-19
Depressurising the hydraulics .....	50-22
Direction indicator module (Fabli) .....	50-23
<b>56 Display elements</b>	
Display .....	56- 1
Display operating unit (ABE 2) Generation 2 .....	56- 1
ABE 2 Installation and removal .....	56- 2
<b>60 Electrics/electronics</b>	
General .....	60- 1
General technical data .....	60- 1
Overview of the controllers .....	60- 2
Electrical system .....	60- 3
Electrical components .....	60- 3
Switching on procedure for the electrical system .....	60- 4
Software compatibility .....	60- 6
Parameter management .....	60- 7
Error ring buffer .....	60- 8
Traction motor temperature monitoring .....	60- 9
Pump motor temperature monitoring .....	60-11
Converter temperature monitoring .....	60-12
Intermediate circuit .....	60-13

Insulation testing for electric trucks .....	60-15
Component insulation testing .....	60-17
Blue-Q = IQ .....	60-19
<b>Wiring .....</b>	<b>60-21</b>
CAN bus connections .....	60-21
<b>Electrical system .....</b>	<b>60-22</b>
Fuse box .....	60-22
Fuses .....	60-23
Main contactor 1K1 .....	60-23
<b>Sensor system .....</b>	<b>60-25</b>
Vertical lift mast position .....	60-25
Tilt angle sensor 7B46 .....	60-26
Tilt angle sensor parameters .....	60-28
Installing the lift mast — vertical position .....	60-30
<b>Additional electrical installations .....</b>	<b>60-31</b>
Option board .....	60-31
CAN-Power-Port (CPP) .....	60-32
CPP 1/CPP 3 .....	60-32
CPP 2B .....	60-33
Relay-Power-Port (RPP) .....	60-34
<b>64 Electronic controllers</b>	
<b>Traction and working hydraulics control .....</b>	<b>64- 1</b>
Main Control Unit (MCU) .....	64- 1
MCU with servo hydraulics .....	64- 2
Main Control Unit (MCU) Removal and installation .....	64- 3
<b>Converter .....</b>	<b>64- 5</b>
Converter .....	64- 5
Removing and installing the converter .....	64- 7
<b>69 Batteries and accessories</b>	
<b>Traction battery .....</b>	<b>69- 1</b>
battery .....	69- 1
Battery male connector .....	69- 3
Discharge indicator .....	69- 4

## 70 Hydraulics

<b>General</b> .....	70- 1
General technical data .....	70- 1
Lifting operating speeds .....	70- 2
Tilting operating speeds .....	70- 3
Operating speeds for lowering .....	70- 3
Forward tilt safety test .....	70- 4
Lowering safety test .....	70- 4
Safety checks of hose assembly .....	70- 5
<b>Basic hydraulics</b> .....	70- 6
Basic hydraulics .....	70- 6
Steering hydraulics .....	70- 7
Working hydraulics .....	70- 9
Hydraulic tank .....	70-10
Hydraulic oil .....	70-10
Return line filter .....	70-11
Breather filter .....	70-12
Suction filter .....	70-13
High-pressure filter .....	70-14
Bolted joint .....	70-15
Conical nipple fittings (CNF) .....	70-17

## 71 Working hydraulics

<b>Pump unit</b> .....	71- 1
General technical data .....	71- 1
Pump unit .....	71- 1
Electrical connections .....	71- 3
Pump motor with rev sensor .....	71- 3
Pump motor without rev sensor .....	71- 4
Pump motor temperature sensor .....	71- 5
Hydraulic pump .....	71- 8
<b>Tilt cylinder</b> .....	71- 9
Mast tilt .....	71- 9
Tilt cylinder Removal and installation .....	71- 9
Changing the set of seals .....	71-10
<b>Auxiliary hydraulics</b> .....	71-13
Attachments .....	71-13

Second operating function for attachments	71-14
Clamp locking mechanism with servo hydraulics	71-14
Clamp locking mechanism for hand levers	71-16

## 76 Valves

Hand lever	76- 1
General technical data	76- 1
Hand lever valve block	76- 2
Emergency lowering	76- 3
Directional control valve with check valve 2Y46	76- 4
Check valve for hydraulics blocking function	76- 5
Hydraulic transmitter	76- 6
Servo hydraulics	76- 8
General technical data	76- 8
Servo hydraulics valve block	76- 9
Emergency lowering	76- 9
Directional control valve block	76-10
Directional control valve - method of operation	76-12

## 81 Lift mast

Lift mast	81- 1
General technical data	81- 1
Telescopic lift mast	81- 2
NiHo lift mast	81- 3
Triple mast	81- 4
Lift mast — removal	81- 6
Lift mast — installation	81- 8
Load chains	81-10
Load chains Checking, cleaning	81-10
Adjusting the load chains Telescopic mast	81-11
Adjusting the load chains NiHo lift mast	81-13
Outer load chain Triple mast	81-15
Middle load chain Triple mast	81-17
End position damping	81-20
End position damping of outer cylinder	81-20
Middle cylinder end dampener	81-21

<b>Line break safety device</b> .....	<b>81-22</b>
Hose safety valve of triplex mast .....	<b>81-22</b>
Shock valve installation positions .....	<b>81-22</b>
<b>Lift cylinder</b> .....	<b>81-24</b>
Lift jack .....	<b>81-24</b>
Outer cylinder .....	<b>81-24</b>
Centre cylinder .....	<b>81-26</b>
Cylinder head .....	<b>81-27</b>
<b>Rollers/support rollers</b> .....	<b>81-30</b>
Support roller clearance .....	<b>81-30</b>
<b>84 Load support</b>	
Fork carriage .....	<b>84- 1</b>
Fork carriage .....	<b>84- 1</b>
Roller .....	<b>84- 2</b>

## Annex

### X Circuit diagrams

<b>Hydraulics</b> .....	<b>X- 1</b>
Hand lever .....	<b>X- 1</b>
Servo hydraulics .....	<b>X- 3</b>



**Thanks for your reading.**

**Please click here to download complete manual instantly.**

**And can also choose other manuals.**

**Feel free --->write to me with any questions.**

**Our service email:**

**manuals007@hotmail.com**