

Workshop literature

**STILL
ELECTRONIC
DOCUMENTATION
SYSTEM**

Diesel/LPG forklift trucks

RX70-16
RX70-18
RX70-20



7311 7312 7313 7314 7315 7316

Ident no. 175719 - 07/2009 - EN

Edition 08/2009

- Version 1
- First issue

00 Product information

Foreword	00-1
About the RX70 1.6t - 2.0t	00-1
Safety information	00-3
Symbols Used	00-3
Securing the fork carriage	00-3
Working on live electrical components	00-5

11 Electric motor

Traction motor	11-1
General technical data	11-1
Electrical connections	11-1
Drive unit	11-2
Traction motor	11-4
Rev sensor	11-7
Pin sensor	11-7
Temperature sensor	11-9
Temperature sensor KTY84	11-9
Generator	11-11
General technical data	11-11
Generator	11-11
Removing and installing the generator	11-12

12 Internal combustion engine

Internal combustion engine	12-1
Engine unit	12-1
Engine unit Removal and installation	12-2
Starter ring gear	12-4
Starter motor	12-5
Diesel engine	12-6
SDI general technical data	12-6
VW - Diesel engine	12-7
Engine control unit ECU - two-part	12-8
LPG engine	12-11
LPG general technical data	12-11
VW LPG - 2.0 litre BEF	12-13

Engine control unit ECU	12-14
-------------------------------	-------

13 Internal combustion engine - attachment parts

Air intake / filter	13-1
Air intake	13-1
Air filter	13-1
Cooling system	13-3
Cooling circuit	13-3
Coolant	13-4
Checking, topping up and changing the coolant	13-6
Radiator system	13-8
Radiator Removal and installation	13-9
Fan impeller - fan motor	13-11
Diesel fuel system	13-13
Fuel system	13-13
Fuel filter	13-14
LPG system	13-16
LPG system	13-16
Impco components	13-17
Evaporator function - gas mixer	13-19
Suction module	13-21
OB6 MAP/MAT sensor	13-23
Chassis module	13-23
Actuator unit	13-25
Gas shut-off valve unit	13-26
Shut-down due to lack of gas	13-27
Maintenance and test specifications	13-28
Servicing the LPG filter	13-29
Servicing the 30-bar excess pressure safety device	13-30
Testing CO level in exhaust gases	13-30
Evaporator - maintenance	13-33
Checking the evaporator for leaks	13-36
High-pressure relief valve - 1.7 bar	13-38
LPG cylinder/tank	13-39
LPG cylinder	13-39

14	Internal combustion engine - exhaust system	
	Exhaust system - diesel	14-1
	Exhaust system	14-1
	Exhaust system - particle filter	14-3
	Eberspächer particle filter	14-3
	Exhaust system — LPG	14-5
	Lambda control system	14-5
	Lambda sensor	14-6
	Three-way catalytic converter	14-9
22	Mechanical drive axle	
	Drive wheel unit	22-1
	Drive wheel unit	22-1
	Removal/installation of the drive wheel unit	22-3
	Repairing the drive wheel unit	22-5
	Power unit	22-7
	General technical data	22-7
	Drive axle	22-8
	Removal/installation of the drive axle	22-10
31	Chassis	
	Counterweight	31-1
	Counterweight	31-1
34	Driver's place	
	Bonnet - cover - insulation	34-1
	Bonnet	34-1
42	Steering system	
	Hydraulic steering	42-1
	General technical data	42-1
	Steering system	42-2
	Steering — error detection	42-3
	Steering unit	42-4
	Priority valve	42-6
	Steering wheel and steering column	42-7
	Steering column	42-7

Steering axle	42-11
General technical data Swing axle	42-11
Swing axle	42-12
Swing axle Removal and installation	42-13
Wheel hub	42-15
Steering angle	42-18
Tie rod	42-19
Axle stub	42-20
49 Brake system	
Mechanical service brake	49-1
Service brake	49-1
Brake sensor 1B2	49-2
Changing the brake cable Service brake	49-3
Parking brake	49-5
Parking brake switch 1S3	49-5
Changing the brake cable Parking brake	49-6
50 Controls	
Single pedal	50-1
Accelerator – single-pedal	50-1
Dual pedal	50-4
Accelerator – dual-pedal 2nd generation	50-4
Controls	50-9
Joystick	50-9
Joystick operation	50-10
Tip switch	50-12
Generation 2 mini-lever	50-14
Axle assignment	50-17
Depressurising the hydraulics	50-19
Direction indicator module (Fabli)	50-20
56 Display elements	
Display screen	56-1
Display operating unit (ABE 2) Generation 2	56-1
ABE 2 Installation and removal	56-2

60 Electrics / Electronics

General	60-1
General technical data	60-1
Device detection and readout options of all controllers	60-2
Overview of electrical components	60-3
Software compatibility	60-4
PAN process	60-5
Parameter management	60-6
Error ring buffer	60-7
Insulation measurement	60-8
Traction motor temperature monitoring	60-13
Drive mode — driving behaviour Availability	60-14
Driving mode — driving behaviour Description	60-15
Wiring	60-18
CAN bus connections	60-18
Electrical system	60-19
Brake resistor	60-19
Fuse box	60-20
Fuses	60-21
Relays	60-22
Battery and accessories	60-23
Starter battery	60-23
Additional electrical installations	60-25
Option board	60-25
CAN power port (CPP)	60-26
Relay power port (RPP)	60-28

64 Electronic controls

Traction hydraulics and working hydraulics control	64-1
Truck Control Unit (TCU)	64-1
Truck Control Unit (TCU) Removal and installation	64-2
Inverter	64-4
Inverter	64-4
Inverter Removal and installation	64-6

70 Hydraulics

General	70-1
General technical data	70-1
Lifting operating speeds	70-2
Tilting operating speed	70-3
Lowering operating speeds	70-3
Forward tilt safety test	70-4
Lowering safety test	70-4
Safety checks of hose assembly	70-5
Basic hydraulics	70-6
Basic hydraulics	70-6
Fan motor	70-7
Steering hydraulics	70-8
Working hydraulics	70-9
Hydraulic pump	70-10
Hydraulic pump Removal and installation	70-11
Hydraulic oil	70-12
Return line filter	70-14
Breather filter	70-15
Suction filter	70-16
High-pressure filter	70-17
Bolted joint	70-18
Conical nipple fittings (CNF)	70-20

71 Working hydraulics

Tilt cylinders	71-1
Mast tilt angle	71-1
Tilt cylinder Removal and installation	71-1
Changing the set of seals	71-2
Auxiliary hydraulics	71-5
Attachments	71-5

76 Valves

Servo hydraulics	76-1
General technical data	76-1
Valve block components	76-2
Valve block Removal and installation	76-3
Directional control valve block	76-4

Directional control valve function Lifting	76-5
Directional control valve function Lowering	76-7

81 Lift masts

Lift mast	81-1
General technical data	81-1
Telescopic lift mast	81-2
NiHo lift mast	81-3
Triple mast	81-4
Lift mast — removal	81-6
Lift mast — installation	81-8
Load chains	81-10
Load chains Checking, cleaning	81-10
Adjusting the load chains Telescopic mast	81-11
Adjusting the load chains NiHo lift mast	81-13
Outer load chain Triple mast	81-15
Middle load chain Triple mast	81-17
End position damping	81-20
End position damping of outer cylinder	81-20
Middle cylinder end dampener	81-21
Line break safety device	81-22
Hose safety valve of triplex mast	81-22
Shock valve installation positions	81-23

Annex

X Circuit diagrams

Hydraulics	X-1
Servo hydraulics	X-1

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com