

Workshop literature

**STILL
ELECTRONIC
DOCUMENTATION
SYSTEM**

Diesel/LPG forklift trucks

RX70-22
RX70-25
RX70-30
RX70-35



7321 7322 7323 7324 7325 7326
7327 7328 7329 7330

first in intralogistics

00 Product information

Foreword	00- 1
About RX70 2.2t - 3.5t	00- 1
Safety instructions	00- 3
Working on live electrical components	00- 3
Working on Hybrid components	00- 4
Jacking up the front of the truck	00- 4
Jacking up the rear of the truck	00- 5
Securing the fork carriage	00- 6
Maintenance	00- 9
Maintenance instructions	00- 9
Maintenance — 1000 hours/annually	00-11
Maintenance — 3000 hours/every six months	00-13
Diagnostics	00-15
Measuring and testing equipment	00-15
Special tool	00-16
Standard torques	00-17

11 Electric motor

Traction motor	11- 1
General technical data	11- 1
Electrical connections	11- 1
Traction drive	11- 2
Traction motor	11- 4
Speed sensor	11- 6
Pin sensor	11- 6
Temperature sensor	11- 8
Temperature sensor KTY84	11- 8
Alternator	11-10
General technical data	11-10
Alternator	11-10
Alternator removal-installation	11-11

12 Internal combustion engine

Internal combustion engine	12- 1
Engine	12- 1

Engine unit Removal and installation	12- 3
Starter ring gear	12- 8
Starter motor	12- 9
Alternator	12-10
Alternator monitoring	12-11
Diesel engine	12-12
General technical data VW 1.9l SDI	12-12
General technical data VW 1.9l TDI	12-13
Diesel engine VW 1.9l SDI/TDI	12-14
Engine control unit VW 1.9l SDI/TDI	12-15
General technical data VW 2.0l TDI	12-18
Diesel engine VW 2.0l TDI	12-19
LPG engine	12-21
General technical data VW 2.0l SPI	12-21
VW LPG - 2.0 litre BEF	12-23
Engine control unit VW 2.0l SPI	12-24
13 Combustion engine — attachments	
Air intake / filter	13- 1
Air intake	13- 1
Air filter	13- 2
Cooling system	13- 4
Cooling circuit	13- 4
Coolant	13- 5
Checking, topping up and changing the coolant	13- 7
Radiator system	13- 9
Radiator Removal and installation	13-10
Fan wheel rotor - fan motor	13-11
Diesel fuel system	13-14
Fuel system	13-14
Fuel filter	13-14
Low fuel warning threshold	13-15
LPG system	13-16
LPG system	13-16
Impco components	13-17
Evaporator function - gas mixer	13-18
Suction module	13-21

0B6 MAP/MAT sensor	13-22
Chassis module	13-23
Actuator unit	13-24
Gas shut-off valve unit	13-25
Gas shut-off valve monitoring	13-25
Shut-down due to lack of gas	13-26
Maintenance and test specifications	13-27
Testing CO level in exhaust gases	13-28
Servicing the LPG filter	13-29
Servicing the 30-bar excess pressure safety device	13-30
Evaporator - maintenance	13-31
Checking the evaporator for leaks	13-34
High-pressure relief valve - 1.7 bar	13-36
LPG cylinder/tank	13-37
LPG cylinder	13-37
14 Combustion engine — exhaust system	
Exhaust system - diesel	14- 1
Exhaust system	14- 1
Exhaust system - particle filter	14- 2
General technical data - Eberspächer	14- 2
Structure of the Eberspächer particle filter	14- 3
7.5 kW Eberspächer particle filter	14- 3
Regeneration	14- 6
Maintenance instructions	14- 8
Exhaust system — LPG	14- 9
Lambda control system	14- 9
Lambda sensor	14-10
Three-way catalytic converter	14-12
22 Mechanical drive axle	
Wheel drive	22- 1
Wheel drive	22- 1
Power unit	22- 4
General technical data Carraro 8.30	22- 4
Drive axle	22- 5
Removal and installation of the drive axle	22- 6

Differential gearbox	22-10
31 Chassis	
Chassis	31- 1
Floorplate	31- 1
Counterweight	31- 2
Counterweight	31- 2
34 Driver's compartment	
Hood — covering — insulation	34- 1
Motor hood	34- 1
42 Steering system	
Hydraulic steering	42- 1
General technical data	42- 1
Steering system	42- 2
Steering — error detection	42- 3
Steering unit	42- 4
Priority valve	42- 6
Steering wheel and steering column	42- 7
Steering column	42- 7
Steering axle	42-11
General technical data	42-11
Swing axle	42-12
Swing axle Removal and installation	42-13
Wheel hub	42-15
Steering angle	42-18
Tie rod	42-19
Axle stub	42-20
49 Brake system	
Hydraulic service brake	49- 1
Service brake	49- 1
Brake sensor 1B2	49- 3
Parking brake	49- 5
Parking brake switch 1S3	49- 5
Parking brake	49- 6

50 Operating devices

Single pedal	50- 1
Accelerator – single-pedal	50- 1
Dual pedal	50- 4
Accelerator — dual pedal	50- 4
Operating devices	50- 7
Hand lever	50- 7
Joystick	50- 8
Joystick operation	50-10
Generation 2 mini-lever	50-12
Generation 2 mini-leverActuation	50-14
Tip switch	50-16
Generation 1 mini-lever	50-18
Axle assignment	50-19
Direction indicator module (Fabli)	50-23

56 Display elements

Operating console	56- 1
Drive direction turn indicator display	56- 1
Display	56- 3
Display operating unit (ABE 1) Generation 1	56- 3
ABE 1 Installation and removal	56- 5
Display operating unit (ABE 2) Generation 2	56- 6
ABE 2 Installation and removal	56- 8

60 Electrics/Electronics

General	60- 1
General technical data	60- 1
Overview of the controllers	60- 2
Overview of electrical components	60- 3
Software compatibility	60- 4
PAN process	60- 5
Parameter management	60- 6
Error ring buffer	60- 7
Insulation measurement	60- 7
Hybrid component insulation measurements	60-11
Traction motor temperature monitoring	60-12

Drive mode — driving behaviour Availability	60-13
Driving mode — driving behaviour Description	60-14
Blue-Q = IQ	60-16
Wiring	60-18
CAN bus connections	60-18
Electrical system	60-20
Fuse box	60-20
Fuses	60-21
Relays	60-22
Sensor system	60-24
Vertical lift mast position	60-24
Tilt angle sensor 7B46	60-25
Tilt angle sensor parameters	60-27
Installation of the vertical lift mast position	60-28
Load measurement	60-31
Load measurement pressure sensor	60-33
Other components	60-35
Option board	60-35
CAN-Power-Port (CPP)	60-36
CPP 1/CPP 3	60-36
CPP 2/CPP 4	60-37
CPP 2B	60-38
Soot CPP (CPP5)	60-39
Relay-Power-Port	60-40
64 Electronic controllers	
Truck control unit	64- 1
Truck Control Unit (TCU)	64- 1
Truck Control Unit (TCU) Removal and installation	64- 2
Converters	64- 4
Inverter	64- 4
Hybrid I converter	64- 6
Converters Removal and installation	64- 7
Brake resistor	64-11
Hybrid components	64-13
Hybrid I function	64-13
DC/DC converter	64-14

DC/DC converter Removal and installation	64-15
Storage module — energy accumulators	64-18
Storage module Removal and installation	64-20
Forced ventilation	64-21
69 Batteries and accessories	
Starter battery	69- 1
Starter battery	69- 1
70 Hydraulics	
General	70- 1
General technical data	70- 1
Lifting operating speeds	70- 2
Tilting operating speeds	70- 3
Lowering operating speeds	70- 4
Forward tilt safety test	70- 4
Lowering safety test	70- 5
Safety checks of hose assembly	70- 5
Depressurising the hydraulics	70- 6
Basic hydraulics	70- 8
Basic hydraulics	70- 8
Fan motor control unit	70-10
Fan control valve	70-11
Steering hydraulics	70-13
Operating hydraulics	70-15
Variable displacement pump	70-17
Hybrid I variable displacement pump	70-19
Pump regulator	70-20
Variable pump Removal and installation	70-21
Hydraulic tank	70-23
Hydraulic oil	70-23
Return filter	70-25
Breather	70-26
Suction filter	70-27
High-pressure filter	70-28
Conical nipple fittings (CNF)	70-29
Bolted joint	70-29

71 Operating hydraulics

Tilt cylinder	71- 1
Mast tilt	71- 1
Tilt cylinder Removal and installation	71- 2
Changing the set of seals 2200 - 5000 kg	71- 3
Additional hydraulics	71- 6
Attachments	71- 6
Second operating function for attachments	71- 8
Clamp locking mechanism for hand levers	71- 8

76 Valves

Hand lever	76- 1
General technical data	76- 1
Hand lever valve block	76- 2
Valve block Removal / installation	76- 3
Directional control valve block	76- 5
Check valve for hydraulics blocking function	76- 7
Hydraulic transmitter	76- 9
Servo hydraulics	76-11
General technical data	76-11
Servo hydraulics valve block	76-12
Directional control valve block	76-13
Directional control valve function Lifting	76-16
Directional control valve function Lowering	76-18

81 Lift mast

Lift mast	81- 1
General technical data	81- 1
Telescopic lift mast	81- 2
NiHo lift mast	81- 3
Triple mast	81- 4
Lift mast — removal	81- 6
Lift mast — installation	81- 8
Load chains	81-10
Load chains Checking, cleaning	81-10
Adjusting the load chains Telescopic mast	81-11
Adjusting the load chains NiHo lift mast	81-13

Outer load chain Triple mast	81-15
Middle load chain Triple mast	81-17
End position cushioning	81-20
End position damping of outer cylinder	81-20
Middle cylinder end dampener	81-21
Line breakage protection	81-22
Hose safety valve of triplex mast	81-22
Shock valve installation positions	81-23
Lift cylinders	81-25
Lift jack	81-25
Outer cylinder	81-25
Centre cylinder	81-27
Cylinder head	81-28
Rollers/supporting rollers	81-31
Support roller clearance	81-31
84 Load support	
Fork carriage	84- 1
Fork carriage	84- 1
Roller	84- 2

Annex

X Circuit diagrams

Hydraulics	X- 1
Hand lever until 12/2009	X- 1
Hand lever from 01/2010	X- 3
Servo hydraulics	X- 5

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com