



## Workshop literature

**STILL**  
**ELECTRONIC**  
**DOCUMENTATION**  
**SYSTEM**

## Diesel forklift truck

RX70-60  
RX70-70  
RX70-80



7341 7342 7343 7344  
57348012001 EN - 08/2013

first in intralogistics

## **Working with electronic controls**

It is not generally permitted to open controls. STILL's liability and the warranty are no longer applicable once the seal has been damaged.

In exceptional cases, personnel authorised by STILL are allowed to open the controls.

## 00 Product information

Foreword .....	00-1
About RX70 6.0 - 8.0 t .....	00-1
Safety information .....	00-2
Working on live electrical components .....	00-2
Jacking up the front of the truck .....	00-3
Jacking up the rear of the truck .....	00-5
Securing the fork carriage .....	00-6
Safety chains .....	00-9

## 01 Service

Maintenance .....	01-1
Maintenance instructions .....	01-1
Maintenance — 1000 hours/year .....	01-3
Maintenance — 3000 hours/every two years .....	01-5
Tools .....	01-7
Measuring and testing equipment .....	01-7
Special tool .....	01-8
Standard torques .....	01-8

## 11 Electric motor

Traction motor .....	11-1
General technical data .....	11-1
Electrical connections .....	11-1
Traction motors .....	11-2
Replacing the traction motor .....	11-2
Speed sensor .....	11-4
Pin sensor .....	11-4
Temperature sensor .....	11-6
Temperature sensor KTY84 .....	11-6
Generator .....	11-8
General technical data .....	11-8
Generator .....	11-9
Removing and installing the generator .....	11-10

## 12 Internal combustion engine

<b>Diesel engine</b> .....	12-1
General technical data .....	12-1
Engine unit .....	12-2
Diesel engine Deutz TCD 4.1 .....	12-2
Removing the engine unit .....	12-3
Installing the engine unit .....	12-10
Replacing the catch plate .....	12-16
Starter motor .....	12-17
Alternator monitoring .....	12-18

## 13 Internal combustion engine - attachment parts

<b>Air intake/filter</b> .....	13-1
Air filter system .....	13-1
Air filter .....	13-2
Oil bath air filter .....	13-4
<b>Cooling system</b> .....	13-5
Cooling circuit .....	13-5
Water pump .....	13-7
Checking, topping up and bleeding the coolant .....	13-7
Coolant .....	13-10
<b>Diesel fuel system</b> .....	13-12
Fuel diagram .....	13-12
Fuel filter .....	13-13
Low fuel warning threshold .....	13-13

## 14 Internal combustion engine - exhaust system

<b>Diesel exhaust system</b> .....	14-1
Exhaust gas recirculation .....	14-1
Diesel particle filter (DPF) Removal and installation .....	14-2

## 22 Mechanical drive axle

<b>AE80-01 drive axle</b> .....	22-1
General technical data .....	22-1
General technical data - pilot series .....	22-3
Drive axle .....	22-4

<b>31 Chassis</b>	
Counterweight .....	31-1
Counterweight .....	31-1
<b>42 Steering system</b>	
Hydraulic steering .....	42-1
General technical data .....	42-1
Steering system .....	42-2
Steering — error detection .....	42-3
Steering unit .....	42-4
Priority valve .....	42-5
Steering axle .....	42-6
General technical data .....	42-6
Swing axle .....	42-7
Steering angle sensor 3B02 .....	42-8
Wheel hub .....	42-10
Steering angle .....	42-12
Tie rod .....	42-13
<b>49 Brake system</b>	
Hydraulic service brake .....	49-1
General technical data .....	49-1
Spring-operated brake .....	49-2
Brake valve .....	49-3
<b>50 Operating devices</b>	
Single pedal .....	50-1
Accelerator – single-pedal .....	50-1
Dual pedal .....	50-4
Accelerator – dual-pedal 2nd generation .....	50-4
Operating devices .....	50-8
Joystick .....	50-8
Joystick operation .....	50-9
Generation 2 mini-lever .....	50-12
Generation 2 mini-leverActuation .....	50-14
Tip switch .....	50-16
Axle assignment .....	50-18

## 56 Display elements

Operating console .....	56-1
Direction indicator module (Fabli) .....	56-1
Display .....	56-3
Display operating unit (ABE 2) Generation 2 .....	56-3
ABE 2 Installation and removal .....	56-4

## 60 Electrics/electronics

General .....	60-1
General technical data .....	60-1
Overview of the controllers .....	60-2
Software compatibility .....	60-2
PAN process .....	60-3
Parameter management .....	60-4
Error ring buffer .....	60-5
Intermediate circuit .....	60-6
Insulation measurement .....	60-7
Traction motor temperature monitoring .....	60-10
Converter temperature monitoring .....	60-12
Wiring .....	60-13
CAN bus system .....	60-13
CAN bus connections .....	60-15
Power cables .....	60-17
Maintenance guidelines for power cables .....	60-18
Repair - Contact elements .....	60-18
Electrical system .....	60-20
Fuse box .....	60-20
Fuses in the fuse box .....	60-21
Additional fuses .....	60-22
Relays in the fuse box .....	60-22
Other components .....	60-23
Option Board .....	60-23
CAN-Power-Port (CPP) .....	60-25
CPP 1/CPP 3 .....	60-25
CPP 2B .....	60-27
Relay-Power-Port .....	60-28

## 64 Electronic controllers

Truck control unit .....	64-1
Truck Control Unit 2 (TCU 2) .....	64-1
Truck Control Unit (TCU) Removal and installation .....	64-2
Converters .....	64-4
Converter .....	64-4
Converters Removal and installation .....	64-6
Brake resistor .....	64-8

## 69 Batteries and accessories

Starter battery .....	69-1
Starter battery .....	69-1

## 70 Hydraulics

General .....	70-1
General technical data .....	70-1
Depressurising the hydraulics .....	70-3
Lifting operating speeds .....	70-4
Lowering operating speeds .....	70-4
Tilt operating speeds .....	70-5
Safety check .....	70-6
Forward tilt safety test .....	70-6
Lowering safety test .....	70-6
Safety checks of hose assembly .....	70-7
Basic hydraulics .....	70-8
Basic hydraulics .....	70-8
Fan control valve .....	70-10
Steering hydraulics .....	70-12
Working hydraulics .....	70-13
Variable displacement pump .....	70-14
Pump regulator .....	70-15
Variable displacement pump Removal and installation .....	70-16
Intake filter .....	70-20
Return filter .....	70-21
Breather .....	70-22
High-pressure filter .....	70-23
Conical nipple fittings (CNF) .....	70-23

Bolted joint .....	70-24
<b>71 Working hydraulics</b>	
Tilt cylinder .....	71-1
Tilt cylinder Removal and installation .....	71-1
Changing the set of seals 6000 - 8000 kg .....	71-2
Auxiliary hydraulics .....	71-5
Second operating function for attachments .....	71-5
Clamp locking mechanism with servo hydraulics .....	71-6
<b>76 Valves</b>	
Servo hydraulics .....	76-1
General technical data .....	76-1
Directional control valve .....	76-2
Removing and installing the valve block .....	76-3
<b>81 Lift mast</b>	
Lift mast .....	81-1
General technical data .....	81-1
<b>Annex</b>	
<b>X Circuit diagrams</b>	
Hydraulics .....	X-1
Servo hydraulics .....	X-1



**Thanks for your reading.**

**Please click here to download complete manual instantly.**

**And can also choose other manuals.**

**Feel free --->write to me with any questions.**

**Our service email:**

**manuals007@hotmail.com**