



Workshop literature

STILL
ELECTRONIC
DOCUMENTATION
SYSTEM

Electric forklift truck

RX50-10
RX50-13
RX50-15
RX50-16



CE

5051 5053 5054 5055

164530 EN - 05/2011

first in intralogistics

Edition 05/2011

- Version 5
- Update of the entire book and standardization of the RX-series workshop manuals

Edition 03/2005

- Version 3
- Completely revised edition
- Generation 5 converter added

Edition 08/2005

- Version 4
- Servo hydraulics has been added

Documentation

This workshop manual contains all the information required to assist the trained service engineers with all work, repairs and maintenance on this truck. In addition, some of the components have been deliberately excluded from this workshop manual and are explained elsewhere in order to ensure a clear overview. Changes at short notice are possible at any time and are communicated via Service Information documents.

The additional documentation comprises workshop manuals, special documentation and operating circuit diagrams.

Workshop manuals

- Display elements - display
- FleetManager™

Special documentation

- Error list
- Overview of truck software
- STILL Flasher
- Overview of consumables
- FEM 4.004 test log book

Operating circuit diagrams

- see the circuit diagram overview

Symbols Used

The signal terms **Danger**, **Warning**, **Caution**, **Note** and **Environment note** are used in this document as hazard warnings or for unusual information that requires special identification:

⚠ DANGER

means that failure to comply involves risk to life and/or major damage to property can occur.

⚠ WARNING

means that failure to comply involves risk of serious injury and/or major damage to property can occur.

⚠ CAUTION

means that failure to comply involves risk of material damage or destruction.



NOTE

means that particular attention is drawn to combinations of technical factors which may not be evident even to a specialist.



ENVIRONMENT NOTE

The instructions listed here must be complied with as otherwise environmental damage may result.

For your safety, additional symbols are also used.
Please heed the various symbols.

Changes and retrofitting

Warnings before making changes to the truck

If the truck is used for work not listed in the guidelines or truck-specific original operating instructions and has to be converted or retrofitted accordingly, you should be aware of the following:

- Any structural modification can affect the handling and stability of the truck, and can result in accidents.
- Without authorisation from STILL, no changes that affect the stability, the load capacity and the safety systems may be carried out.
- Operation of the truck without an overhead guard at a lift height of over 1800 mm is prohibited.
- It is prohibited to install and use restraint systems that are not approved by STILL.
- It is prohibited to drill holes in the overhead guard or to perform welding on it.
- When carrying out welding on other parts of the truck, it is essential that the battery and all connections to the electronic controls are disconnected.
- **Only for electric forklift trucks:** It is prohibited to drill holes in the area of the driver's seat into the battery hood because hydrogen can enter through the bores into the driver's cab.

CE conformity


With the CE declaration of conformity, STILL confirms that the truck complies with the standards and regulations valid at the time of marketing. The CE conformity mark is shown on the nameplate and indicates compliance with the above regulations.

A subsequent structural change or addition to the truck can compromise safety, thus invalidating the CE declaration of conformity. In this case, a new CE declaration of conformity is essential for the structural changes. The company that was instructed by the truck operating company to carry out the change is responsible for issuing a new CE declaration of conformity.

The contractor of the operating company must also fulfil the following prerequisites:

- Construction documents, test documents and assembly instructions associated with the change must be archived and remain accessible at all times.
- Check that the capacity rating plate, decal information, hazard warnings and the operating instructions are consistent with regard to the changes and modify if necessary.

The change must be processed by a design office that specialises in the area of industrial trucks. The change must be planned, checked and implemented in accordance with the standards and directives valid at the time.

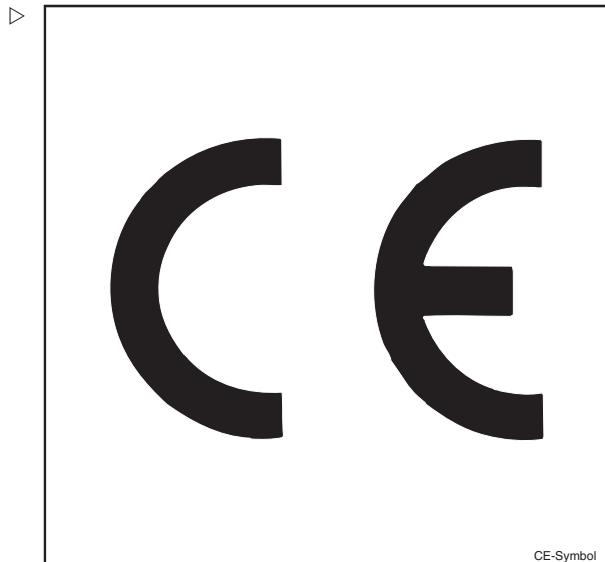

Working with spare parts

Warning regarding non-original parts

Original parts, attachments and accessories are specially designed for this truck. We specifically draw your attention to the fact that parts, attachments and accessories supplied by other companies have not been tested and approved by STILL.

▲ CAUTION

Installation and/or use of such products may therefore have a negative impact on the design features of the truck and thus impair active and/or passive driving safety.

We recommend that you obtain approval from the manufacturer and, if necessary, from the relevant regulatory authorities before installing such parts. STILL accepts no liability for any damage caused by the use of non-original parts and accessories without approval.

Working with electronic controls

It is not generally permitted to open controls.
STILL's liability and the warranty are no longer applicable once the seal has been damaged.

In exceptional cases, personnel authorised by STILL are allowed to open the controls.

Table of contents

00 Product information

| | |
|--|-------|
| Safety instructions | 00- 1 |
| Safety instructions Electrical system | 00- 1 |
| Jacking up the front of the truck | 00- 1 |
| Jacking up the rear of the truck | 00- 2 |
| Securing the fork carriage | 00- 3 |

11 Electrical motor

| | |
|--|-------|
| Motor | 11- 1 |
| General technical data | 11- 1 |
| Electrical connections | 11- 2 |
| Drive unit | 11- 3 |
| Traction motor rotor disassembly | 11- 4 |
| Traction motor rotor assembly | 11- 5 |
| Speed sensor | 11- 7 |
| 6B17 pin sensor | 11- 7 |
| 6B17 sensor bearing | 11- 8 |
| Removing the sensor bearing | 11-10 |
| Installing the sensor bearing | 11-11 |
| Temperature sensor | 11-13 |
| KTY84 temperature sensor | 11-13 |
| Forced ventilation | 11-15 |
| Forced ventilation at the pump motor Heavy dust guard | 11-15 |

22 Mechanical drive axle

| | |
|---------------------------------------|-------|
| Wheel drive | 22- 1 |
| Wheel hub removal | 22- 1 |
| Installing the wheel hub | 22- 2 |
| Power unit | 22- 4 |
| General technical data | 22- 4 |
| power unit | 22- 5 |
| Power unit disassembly | 22- 5 |
| Power unit installation | 22- 7 |

31 Chassis

| | |
|----------------------------|-------|
| Counterweight | 31- 1 |
| Counterweight | 31- 1 |

34 Driver's compartment

| | |
|----------------------------|--------------|
| Driver's seat | 34- 1 |
| seat contact switch | 34- 1 |
| Seatbelt lock switch | 34- 1 |

42 Steering system

| | |
|--|--------------|
| Hydraulic steering | 42- 1 |
| General technical data | 42- 1 |
| steering system | 42- 2 |
| Steering — error detection | 42- 3 |
| Steering motor | 42- 3 |
| steering motor removal | 42- 4 |
| Steering motor installation | 42- 5 |
| Sprocket with trigger wheel | 42- 6 |
| Steering unit | 42- 8 |
| diaphragm pressure switch | 42- 9 |
| Priority valve | 42-10 |
| Steering-angle-dependent performance - CSC | 42-11 |
| CSC — functional test | 42-12 |
| 3B28 steering zero sensor | 42-13 |
| Steering angle sensor with sensor disc | 42-14 |
| Steering angle sensor | 42-15 |
| Steering wheel with steering column | 42-17 |
| steering column | 42-17 |

46 Wheels and tires

| | |
|--------------------------------------|--------------|
| Complete wheel assembly | 46- 1 |
| General technical data | 46- 1 |
| Superelastic tyres | 46- 1 |
| Wheel bearing | 46- 3 |
| General technical data | 46- 3 |
| Wheel bearing — wheel hub | 46- 3 |

49 Brake system

| | |
|--------------------------------------|--------------|
| Hydraulic service brake | 49- 1 |
| General technical data | 49- 1 |
| Replacing the brake shoes | 49- 1 |
| Checking the service brake | 49- 4 |

Table of contents

| | |
|---|-------|
| Wheel brake cylinder | 49- 5 |
| Main brake cylinder | 49- 6 |
| Brake sensor 1B2 | 49- 7 |
| Brake fluid switch | 49- 8 |
| Parking brake | 49- 9 |
| Adjusting the parking brake | 49- 9 |
| parking brake switch | 49-11 |
| 50 Operational controls | |
| Single pedal | 50- 1 |
| Single-pedal accelerator | 50- 1 |
| Twin-pedal | 50- 5 |
| Two-pedal accelerator | 50- 5 |
| Operational controls | 50- 8 |
| Hand lever | 50- 8 |
| joystick | 50- 9 |
| Joystick operation | 50-11 |
| Fingertip | 50-12 |
| Axe assignment | 50-14 |
| Depressurising the hydraulics | 50-17 |
| Switch | 50-18 |
| emergency isolator switch | 50-18 |
| Emergency off switch in the joystick | 50-18 |
| Key switch | 50-19 |
| 56 Indicator elements | |
| operator control panel | 56- 1 |
| keypad | 56- 1 |
| mini console | 56- 3 |
| Display | 56- 7 |
| Display and operating element - control processor | 56- 7 |
| Programming mode | 56- 9 |
| Password level 1 | 56-11 |
| Password level 2 | 56-15 |

60 Electrical system / electronic system

| | |
|---|-------|
| General | 60- 1 |
| General technical data | 60- 1 |
| Device code and read options | 60- 2 |
| Overview of electrical components | 60- 3 |
| Electrical system | 60- 4 |
| Switching on procedure for the electrical system | 60- 5 |
| Traction motor temperature monitoring | 60- 8 |
| Pump motor temperature monitoring | 60-10 |
| Software compatibility | 60-11 |
| Parameter management | 60-13 |
| Intermediate circuit | 60-14 |
| Insulation testing for electric trucks | 60-15 |
| Component insulation testing | 60-17 |
| Wiring | 60-20 |
| CAN bus connections | 60-20 |
| Electrical installation | 60-21 |
| Control unit (vo) | 60-21 |
| Fuses | 60-22 |
| contactor | 60-23 |
| Warning system | 60-24 |
| horn | 60-24 |
| Additional electrical installations | 60-25 |
| Rear distributor plate (add-on) | 60-25 |
| Front distributor plate | 60-26 |
| Relay board | 60-27 |

64 Electronic controls

| | |
|--|-------|
| Traction and working hydraulics control | 64- 1 |
| control computer | 64- 1 |
| Removing and installing the control processor | 64- 2 |
| pump regulator | 64- 4 |
| Removing and installing the pump actuator | 64- 6 |
| Converter | 64- 9 |
| Converter | 64- 9 |
| Generation 3 converter | 64-10 |
| Generation 5 drive converter | 64-11 |

Table of contents

| | |
|---|--------|
| Removing and installing the converter | 64- 13 |
| Hydraulic controller | 64- 16 |
| Hydraulic control unit | 64- 16 |
| 69 Batteries and accessories | |
| Traction battery | 69- 1 |
| battery | 69- 1 |
| Battery connector | 69- 3 |
| battery discharge indicator | 69- 4 |
| roller platform | 69- 6 |
| 70 Hydraulics | |
| General | 70- 1 |
| General technical data | 70- 1 |
| Operating speeds for lifting | 70- 2 |
| Operating speeds tilt | 70- 2 |
| Operating speeds for lowering | 70- 3 |
| Forward tilt safety test | 70- 4 |
| Lowering safety test | 70- 4 |
| Safety checks of hose assembly | 70- 5 |
| Base hydraulics | 70- 6 |
| Hydraulic installation | 70- 6 |
| hydraulic oil tank | 70- 7 |
| Hydraulic oil | 70- 8 |
| Intake filter | 70- 9 |
| breather filter | 70-10 |
| High-pressure filter | 70-11 |
| Conical nipple fittings (CNF) | 70-12 |
| Bolted joint | 70-12 |
| 71 Working hydraulics | |
| Pump assembly | 71- 1 |
| General technical data | 71- 1 |
| Pump unit | 71- 2 |
| electrical connections | 71- 3 |
| Pump motor - speed sensor | 71- 3 |
| Temperature sensor pump motor | 71- 4 |
| motor brush monitor | 71- 6 |

| | |
|--|--------------|
| brushes | 71- 8 |
| Pump motor removal | 71- 9 |
| Pump motor installation | 71- 9 |
| hydraulic pump | 71-10 |
| Hydraulic pump Removal and installation | 71-11 |
| Tilt cylinder | 71-13 |
| Mast tilt | 71-13 |
| Tilt cylinder Removal and installation | 71-13 |
| Changing the set of seals | 71-15 |
| Connection screw joints | 71-17 |
| Additional hydraulics | 71-18 |
| Attachments | 71-18 |
| Clamp locking mechanism for hand levers | 71-19 |
| Hose line on mast | 71-19 |

76 Valves

| | |
|--|--------------|
| Hand lever | 76- 1 |
| General technical data | 76- 1 |
| Hand lever valve block | 76- 3 |
| Removing and installing the valve block | 76- 5 |
| Directional control valve - arrangement | 76- 7 |
| Directional control valve - function | 76- 8 |
| Hydraulic sensor | 76- 9 |
| pressure regulator | 76-11 |
| Servo hydraulics | 76-13 |
| General technical data | 76-13 |
| Servo hydraulics valve block | 76-14 |
| Manual lowering | 76-15 |
| Directional control valve block | 76-16 |

81 Mast

| | |
|-------------------------------------|--------------|
| Mast | 81- 1 |
| General technical data | 81- 1 |
| Telescopic mast | 81- 2 |
| NiHo lift mast | 81- 3 |
| triplex mast | 81- 4 |
| Mast removal | 81- 5 |
| Mast installation | 81- 7 |

Table of contents

| | |
|---|-------|
| Chains | 81- 8 |
| Load chains Checking, cleaning | 81- 8 |
| Adjusting the load chains Telescopic mast | 81- 9 |
| Adjusting the load chains NiHo lift mast | 81-11 |
| Outer load chain Triple mast | 81-13 |
| Middle load chain Triple mast | 81-15 |
| End position damping | 81-18 |
| End position damping of outer cylinder | 81-18 |
| Middle cylinder end dampener | 81-19 |
| Hose safety valve | 81-20 |
| Hose safety valve of triplex mast | 81-20 |
| Shock valve installation positions | 81-20 |
| Lift cylinder | 81-22 |
| Lift jack | 81-22 |
| Centre cylinder | 81-22 |
| Outer cylinder | 81-23 |
| Rollers / supporting rollers | 81-26 |
| Removing and installing the support rollers | 81-26 |

84 Load carrier

| | |
|----------------------------|-------|
| Fork carriage | 84- 1 |
| Fork carriage | 84- 1 |
| Roller | 84- 2 |

Annex

X Circuit diagrams

| | |
|-------------------------|------|
| Hydraulics | X- 1 |
| Hand lever | X- 1 |
| Servo hydraulics | X- 3 |

Thanks for your reading.
Please click here to download complete manual
instantly.
And can also choose other manuals.

Feel free --->write to me with any questions.
Our service email:
manuals007@hotmail.com