

**HR81486U**  
**404C-22T**

HR81486U  
2006/08/31

The information given within this parts book was correct at the time of printing and is subject to change without notice. Always refer to your local Perkins outlet for the latest information. Only fully trained personnel should carry out servicing of engines. Before working on any engine always refer to the correct user service and maintenance manual.

Always refer to your local Perkins outlet before purchasing any parts

Subject to any existing rights of third parties, the information given in this document is the property of Perkins Engines Limited and should not be copied, in whole or part, without the prior written consent of the Company.



## **Contents**

1. Introduction	Pg. 4
2. How To Use Your Parts Book	Pg. 4
3. Engine Breakdown	Pg. 5
4. Symbol Descriptions	Pg. 9
5. Parts Lists & Illustrations	Pg. 11
6. Parts Index	Pg. 128

## **Introduction**

The build list of your engine, found on the front page of this parts book, provides a unique reference to the components fitted to your engine; therefore this parts book is only applicable to this particular engine

Always quote your build list and engine serial number when contacting your Perkins outlet.

## **How to use your Parts Book**

This parts book has been designed to provide you with all the information you need to identify parts to service your engine. There are several features within the book to make it easy to find the parts you require.

### **Front Page**

This lists your build list number and the date of publication of this book

### **Symbol Descriptions**

Provides a quick reference guide to the symbols used within the book.

### **Engine Breakdown**

Use this to identify all the major sections of your engine and the relevant pages within the book.

### **Parts Lists & Illustrations**

This section shows each major section of your engine broken down into individual part numbers along with an associated illustration for identifying the parts you require.

The illustrations used in this parts book are representational only and should only be used for identification purposes.

For fitting instructions please refer to your engine Service Manual.

### **Parts Index**

Using either the part number or description of the part you require this section will help you locate the page within the **Parts Lists & Illustrations** section where the part appears.

<b>Section</b>	<b>Page</b>
<b>Long Engine ACEH0829</b>	<b>11</b>
<b>Cylinder Block A6CH</b>	<b>13</b>
<b>Crankshaft &amp; Bearings A6CH</b>	<b>15</b>
<b>Pistons &amp; Rings A6CH</b>	<b>17</b>
<b>Cylinder Head Assembly B6CH</b>	<b>19</b>
<b>Rocker Shaft Assembly B6CH</b>	<b>21</b>
<b>Timing Case C6MH</b>	<b>23</b>
<b>Timing Case C6MH</b>	<b>25</b>
<b>Timing Case C6MH</b>	<b>27</b>
<b>Stop Solenoid Control C6MH</b>	<b>29</b>
<b>Camshaft &amp; Gears C6MH</b>	<b>31</b>
<b>Timing Case C6VH</b>	<b>33</b>
<b>Timing Case C6VH</b>	<b>35</b>

<b>Section</b>	<b>Page</b>
<b>Timing Case C6VH</b>	<b>37</b>
<b>Timing Case C6VH</b>	<b>39</b>
<b>Camshaft &amp; Gears C6VH</b>	<b>41</b>
<b>Fuel Injection Pump D6AH</b>	<b>43</b>
<b>High Pressure Fuel Pipes D6AH</b>	<b>45</b>
<b>Atomisers D6AH</b>	<b>47</b>
<b>Fuel Injection Pump D6MH</b>	<b>49</b>
<b>High Pressure Fuel Pipes D6MH</b>	<b>51</b>
<b>Atomisers D6MH</b>	<b>53</b>
<b>Fuel Injection Pump D6QH</b>	<b>55</b>
<b>High Pressure Fuel Pipes D6QH</b>	<b>57</b>
<b>Atomisers D6QH</b>	<b>59</b>
<b>Cold Start System E6AK</b>	<b>61</b>

**Engine Breakdown**

<b>Section</b>	<b>Page</b>
<b>Fan Drive F4DK</b>	<b>63</b>
<b>Water Pump F6XH</b>	<b>65</b>
<b>Water Pump F6XH</b>	<b>67</b>
<b>Oil Pump &amp; Connections F6XH</b>	<b>69</b>
<b>Pulleys F8CH</b>	<b>71</b>
<b>Sump G6BH</b>	<b>73</b>
<b>Oil Filter G6BH</b>	<b>75</b>
<b>Oil Leak-Off Pipes G6BH</b>	<b>77</b>
<b>Rotor G6BH</b>	<b>79</b>
<b>Fuel Filter H6FH</b>	<b>81</b>
<b>Pipes H6FH</b>	<b>83</b>
<b>Lift Pump H7CK</b>	<b>85</b>
<b>Back End Group J6LK</b>	<b>87</b>

 
 
















<b>Section</b>	<b>Page</b>
<b>Starter Group K6EK</b>	<b>89</b>
<b>Starter Group K6EK</b>	<b>91</b>
<b>Exhaust Manifold L6AH</b>	<b>93</b>
<b>Alternator N6GH</b>	<b>95</b>
<b>Engine Lifting Eyes O6BH</b>	<b>97</b>
<b>Auxiliary Drive P6AH</b>	<b>99</b>
<b>Instrumentation Q6AH</b>	<b>101</b>
<b>Instrumentation Q6QH</b>	<b>103</b>
<b>Inlet Manifold S6EH</b>	<b>105</b>
<b>Turbocharger S6EH</b>	<b>107</b>
<b>Exhaust Z1AK</b>	<b>109</b>
<b>Electrical Z3AH</b>	<b>111</b>

<b>Section</b>	<b>Page</b>
<b>Electrical Z3FH</b>	<b>113</b>
<b>Electrical Z3PK</b>	<b>115</b>
<b>Miscellaneous Z3YK</b>	<b>117</b>
<b>Fan Z5DH</b>	<b>119</b>
<b>Miscellaneous Z6AK</b>	<b>121</b>
<b>Miscellaneous Z6AK</b>	<b>123</b>
<b>Miscellaneous Z6CK</b>	<b>125</b>
<b>Miscellaneous Z6DK</b>	<b>127</b>

## Engine Breakdown



## Symbols and Notes

Symbol	Description
	From Engine Number
	Upto Engine Number
	Repairs and Replaces
	See Appropriate Section - Reference Number
	Alternative
	Order
	Remanufactured Part
	New for Old Part
	Number of Teeth
	Thickness
	Bottom
	Top
	Left Hand
	Right Hand
	Reference for Detailed Breakdown
	Other Service Options Available
	Cylinder Number
	See History Section

ACEH0829

1

Long Engine  
Moteur Long  
Langer Motor  
Motor Largo  
Motore Completo

**Thanks for your reading.**

**Please click here to download complete manual instantly.**

**And can also choose other manuals.**

**Feel free --->write to me with any questions.**

**Our service email:**

**manuals007@hotmail.com**