

KOBELCO

SHOP MANUAL
HYDRAULIC EXCAVATOR
SK50SR-5

S5PJ0028E01

Issued October 2009

APPLICABLE:

SK50SR-5.....PJ06-08890~



SHOP MANUAL

HYDRAULIC EXCAVATOR

SK50SR-C

APPLICABLE

SK50SR-5 PJ06-08890~

CNH America, LLC reserved the right to make improvements in design or changed in specifications at any time without incurring any obligation to install them on units previously sold.

All data given in this publication is subject to production variations. Dimensions and weights are only approximate. Illustrations do not necessarily show products in standard condition. For exact information about any particular product, please consult your Dealer.

This unit became available 10-2009.			
REVISION HISTORY			
Issue	Issue Date	Applicable Machines	Remarks
First Edition	October 2009	SK50SR-5	S5PJ0028E01

HYDRAULIC EXCAVATOR

SHOP
MANUAL model SK50SR-5

INDEX

1	SPECIFICATIONS
2	MAINTENANCE
3	SYSTEM
4	DISASSEMBLING
5	TROUBLESHOOTING
6	ENGINE
7	INSTALLATION PROCEDURES FOR OPTIONAL ATTACHMENT
8	SUPPORTING DATA

GENERAL SAFETY INFORMATION

 **WARNING**

Do not operate or perform any maintenance on this machine until all instructions found in the OPERATOR'S MANUAL and this MANUAL have been thoroughly read and understood.

Improper operation or maintenance of this machine may cause accidents and could result in serious injury or death.

Always keep the manual in storage.

If it is missing or damaged, place an order with an authorized our Distributor for a replacement.

If you have any questions, please consult an authorized our Distributor.

- (1) Most accidents, which occur during operation, are due to neglect of precautionary measures and safety rules. Sufficient care should be taken to avoid these accidents. Erroneous operation, lubrication or maintenance services are very dangerous and may cause injury or death of personnel. Therefore all precautionary measures, NOTES, DANGERS, WARNINGS and CAUTIONS contained in the manual and on the machine should be read and understood by all personnel before starting any work with or on the machine.
- (2) Operation, inspection, and maintenance should be carefully carried out, and safety must be given the first priority. Messages of safety are indicated with marks. The safety information contained in the manual is intended only to supplement safety codes, insurance requirements, local laws, rules and regulations.
- (3) Messages of safety appear in the manual and on the machine : All messages of safety are identified by either word of "DANGER", "WARNING" and "CAUTION".

- 1) **DANGER-** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury and is represented as follows:

 **DANGER**

- 2) **WARNING-** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury and is represented as follows:

 **WARNING**

- 3) **CAUTION-** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against possible damage to the machine and its components and is represented as follows:

 **CAUTION**

- (4) It is very difficult to forecast every danger that may occur during operation. However, safety can be ensured by fully understanding proper operating procedures for this machine according to methods recommended by Manufacturer.
- (5) While operating the machine, be sure to perform work with great care, so as not to damage the machine, or allow accidents to occur.
- (6) Continue studying the manual until all Safety, Operation and Maintenance procedures are completely understood by all persons working with the machine.

SAFETY PRECAUTIONS

WARNING

The proper and safe lubrication and maintenance for this machine, recommended by Manufacturer, are outlined in the OPERATOR'S MANUAL for the machine.

Improper performance of lubrication or maintenance procedures are dangerous and could result in injury or death. Read and understand the MANUAL before performing any lubrication or maintenance.

The serviceman or mechanic may be unfamiliar with many of the systems on this machine. This makes it important to use caution when performing service work. A knowledge of the system and or components is important before the removal or disassembly of any component.

Because of the size of some of the machine components, the serviceman or mechanic should check the weights noted in this manual. Use proper lifting procedures when removing any components. Weight of components table is shown in the section ; SPECIFICATIONS.

The following is a list of basic precautions that must always be observed.

- (1) Read and understand all Warning plates and decal on the machine before Operating, Maintaining or Repairing this machine.
- (2) Always wear protective glasses and protective shoes when working around machines. In particular, wear protective glasses when using hammers, punches or drifts on any part of the machine or attachments. Use welders gloves, hood/goggles, apron and the protective clothing appropriate to the welding job being performed. Do not wear loose fitting or torn clothing. Remove all rings from fingers, loose jewelry, confine long hair and loose clothing before working on this machinery.
- (3) Disconnect the battery and hang a "Do Not Operate" tag in the Operators Compartment. Remove ignition keys.
- (4) If possible, make all repairs with the machine parked on a firm level surface. Block the machine so it does not roll while working on or under the machine. Hang a "Do Not Operate" tag in the Operators Compartment.
- (5) Do not work on any machine that is supported only by lift, jacks or a hoist. Always use blocks or jack

stands, capable of supporting the machine, before performing any disassembly.

WARNING

Do not operate this machine unless you have read and understand the instructions in the OPERATOR'S MANUAL. Improper machine operation is dangerous and could result in injury or death.

- (6) Relieve all pressure in air, oil or water systems before any lines, fittings or related items are disconnected or removed. Always make sure all raised components are blocked correctly and be alert for possible pressure when disconnecting any device from a system that utilizes pressure.
- (7) Lower the bucket, dozer, or other attachments to the ground before performing any work on the machine. If this cannot be done, make sure the bucket, dozer, ripper or other attachment is blocked correctly to prevent it from dropping unexpectedly.
- (8) Use steps and grab handles when mounting or dismounting a machine. Clean any mud or debris from steps, walkways or work platforms before using. Always face to the machine when using steps, ladders and walkways. When it is not possible to use the designed access system, provide ladders, scaffolds, or work platforms to perform safe repair operations.
- (9) To avoid back injury, use a hoist when lifting components which weigh 20kg (45lbs) or more. Make sure all chains, hooks, slings, etc., are in good condition and are the correct capacity. Be sure hooks are positioned correctly. Lifting eyes are not to be side loaded during a lifting operation.
- (10) To avoid burns, be alert for hot parts on machines which have just been stopped and hot fluids in lines, tubes and compartments.
- (11) Be careful when removing cover plates. Gradually back off the last two capscrews or nuts located at opposite ends of the cover or device and carefully pry cover loose to relieve any spring or other pressure, before removing the last two capscrews or nuts completely.
- (12) Be careful when removing filler caps, breathers and plugs on the machine. Hold a rag over the cap or plug to prevent being sprayed or splashed by liquids under pressure. The danger is even greater if the machine has just been stopped because fluids can be hot.

-
- (13) Always use the proper tools that are in good condition and that are suited for the job at hand. Be sure you understand how to use them before performing any service work.
- (14) Reinstall all fasteners with the same part number. Do not use a lesser quality fastener if replacements are necessary.
- (15) Repairs which require welding should be performed only with the benefit of the appropriate reference information and by personnel adequately trained and knowledgeable in welding procedures. Determine type of metal being welded and select correct welding procedure and electrodes, rods or wire to provide a weld metal strength equivalent at least to that of the parent metal. Make sure to disconnect battery before any welding procedures are attempted.
- (16) Do not damage wiring during removal operations. Reinstall the wiring so it is not damaged nor will be damaged in operation of the machine by contacting sharp corners, or by rubbing against some object or hot surface. Do not connect wiring to a line containing fluid.
- (17) Be sure all protective devices including guards and shields are properly installed and functioning correctly before starting a repair. If a guard or shield must be removed to perform the repair work, use extra caution and replace the guard or shield after repair is completed.
- (18) The maintenance and repair work while holding the bucket raised is dangerous due to the possibility of a falling attachment. Don't fail to lower the attachment and place the bucket to the ground before starting the work.
- (19) Loose or damaged fuel, lubricant and hydraulic lines, tubes and hoses can cause fires. Do not bend or strike high pressure lines or install ones which have been bent or damaged. Inspect lines, tubes and hoses carefully. Do not check for leaks with your hands. Very small (pinhole) leaks can result in a high velocity oil stream that will be invisible close to the hose. This oil can penetrate the skin and cause personal injury. Use card-board or paper to locate pinhole leaks.
- (20) Tighten connections to the correct torque. Make sure that all heat shields, clamps and guards are installed correctly to avoid excessive heat, vibration or rubbing against other parts during operation. Shields that protect against oil spray onto hot exhaust components in event of a line, tube or seal failure must be installed correctly.
- (21) Do not operate a machine if any rotating part is damaged or contacts any other part during operation. Any high speed rotating component that has been damaged or altered should be checked for balance before reusing.
- (22) Be careful when servicing or separating the tracks (crawlers). Chips can fly when removing or installing a track (crawlers) pin. Wear safety glasses and long sleeve protective clothing. Tracks (crawlers) can unroll very quickly when separated. Keep away from front and rear of machine. The machine can move unexpectedly when both tracks (crawlers) are disengaged from the sprockets. Block the machine to prevent it from moving.

Book Code No. Distribution Year–Month			Title	Index No.
S5PW0108E01 2008-9		SPECIFICATIONS	OUTLINE	1
S5PJ0228E01 2008-9			SPECIFICATIONS	2
S5PJ0328E01 2008-9			ATTACHMENT DIMENSIONS	3
S5PJ1108E01 2008-9		MAINTENANCE	TOOLS	11
S5PJ1228E01 2008-9			STANDARD MAINTENANCE TIME TABLE	12
S5PJ1328E01 2008-9			MAINTENANCE STANDARD AND TEST PROCEDURES	13
—				
S5PJ2228E01 2008-9		SYSTEM	HYDRAULIC SYSTEM	22
S5PJ2328E01 2008-9			ELECTRICAL SYSTEM	23
S5PJ2428E01 2008-9			COMPONENTS SYSTEM	24
—				
—				
S5PW3108E01 2008-9		DISASSEMBLING	GENERAL DISASSEMBLY & ASSEMBLY	31
S5PJ3223E01 2008-9			ATTACHMENT	32
S5PJ3328E01 2008-9			UPPER SLEWING STRUCTURE	33
S5PJ3423E01 2008-9			TRAVEL SYSTEM	34
—				
S5PW4209E01 2008-9		TROUBLESHOOTING	HYDRAULIC SYSTEM	42
S5PW4309E01 2008-9			ELECTRICAL SYSTEM	43
S5PW4408E01 2008-9			ENGINE	44
S5PW5122E01 2008-9		E/G	ENGINE	51
—		OPT.		
—				
S5PJ7128E01 2008-9		DATA	SUPPORTING DATA	71
PJ06-08890~			APPLICABLE MACHINES	

NOTE:

This Manual is prepared as a technical material in which the information necessary for the maintenance and repairing services of our hydraulic excavators are collected, and is categorized into 7 Chapters, Specification, Maintenance, System, Disassembly, Troubleshooting, Engine, and Installation Procedures for Optional Attachment.

- The Chapter "Specification" describes the specifications for entire machine and material, which are instructive for replacement and repairing of attachments.
- The Chapter "Maintenance" describes the material, which is helpful for maintenance service and adjustments for entire machine.
- The Chapter "System" describes the operating system like hydraulic system, electric system, components, and so on.
- The Chapter "Disassembly" describes the removal and installing of assembly mounted on the upper structure and undercarriage, and the assembling and disassembling of the associated hydraulic equipment.
- The Chapter "Troubleshooting" describes how to find the fault equipment.
- The Chapter "Engine" describes the engines making use of the "Maintenance Manual" provided by the suppliers.
- The Chapter "Installation Procedures for Optional Attachment" describes the supplements added on request as required.

This Manual may be properly revised due to the improvement of products, modification of specifications, etc. And there are cases where the system on actual machine and a part of the contents of this manual may differ due to the variations of specification by countries. For the section in which the description is hardly understood, contact our distributor.

The number is assigned to every part handled in this Manual on account of the description, but the parts, which cannot be supplied as service parts are contained. Therefore, the order must be placed with respective formal number with due confirmation on the Parts Manual for applicable machine.

1. OUTLINE

TABLE OF CONTENTS

1.1	GENERAL PRECAUTIONS FOR REPAIRS	1-3
1.1.1	PREPARATION BEFORE DISASSEMBLING	1-3
1.1.2	SAFETY IN DISASSEMBLING AND ASSEMBLING	1-3
1.1.3	DISASSEMBLING AND ASSEMBLING HYDRAULIC EQUIPMENT	1-3
1.1.4	ELECTRICAL EQUIPMENT	1-4
1.1.5	HYDRAULIC PARTS	1-5
1.1.6	WELDING REPAIR.....	1-5
1.1.7	ENVIRONMENTAL MEASURE	1-5
1.2	INTERNATIONAL UNIT CONVERSION SYSTEM (Based on MARKS' STANDARD HANDBOOK FOR MECHANICAL ENGINEERS)	1-6

1. OUTLINE

Issue	Data of Issue	Applicable Machines	Remarks
First Edition	April, 2007	SK30SR-3 : PW13-42001~ SK35SR-3 : PX14-17001~	S5PW0108E01 (KCM North America) SZ
↑	↑	SK27SR-3 : PV12-31001~	↑ (KCM North America) SZ
↑	August, 2007	SK30SR-5 : PW14-45001~ SK35SR-5 : PX15-20001~	↑ (KCM North America) K
↑	September, 2007	↑	↑ (KCM S.E.ASIA&OCE) K
↑	↑	SK27SR-5 : PV13-33001~	↑ (KCM North America) K
↑	↑	SK20SR-5 : PM10-10001~ SK27SR-5 : PV13-33001~	↑ (KCM S.E.ASIA&OCE) K
↑	October, 2007	E30B : PW14-45001~ E35B : PX15-20001~	↑ (NH Australia) K
↑	↑	↑	↑ (NH North America) K
↑	↑	E27B : PV13-33001~	↑ (NH Australia) K
↑	November, 2007	SK50SR-5 : PJ06-08001~	↑ (KCM North America) K
↑	↑	E50B : PJ06-08001~	↑ (NH North America) K
↑	December, 2007	SK40SR-5 : PH07-06001~ SK50SR-5 : PJ06-08001~	↑ (KCM S.E.Asia&Oceania) K
↑	↑	E50B : PJ06-08001~	↑ (NH Australia) K
↑	September, 2008	SK30SR-5 : PW14-45964~ SK35SR-5 : PX15-20658~	↑ (KCM North America) K
↑	↑	SK27SR-5 : PV13-33292~	↑ (NA) K
↑	↑	SK50SR-5 : PJ06-08890~	↑ (NA) K

1.1 GENERAL PRECAUTIONS FOR REPAIRS

1.1.1 PREPARATION BEFORE DISASSEMBLING



- (1) Understanding operating procedure
Read OPERATOR'S MANUAL carefully to understand the operating procedure.
- (2) Cleaning machines
Remove soil, mud, and dust from the machine before carrying it into the service shop to prevent loss of work efficiency, damage of parts, and difficulty in rust prevention and dust protection while reassembling.
- (3) Inspecting machines
Identify the parts to be disassembled before starting work, determine the disassembling procedure by yourself considering the workshop situations etc., and request procurement of necessary parts in advance.
- (4) Recording
Record the following items for communication and prevention of recurring malfunction.
 - 1) Inspection date and place
 - 2) Model name, applicable machine number, and hour meter read
 - 3) Trouble condition, place and cause.
 - 4) Visible oil leakage, water leakage and damage
 - 5) Clogging of filters, oil level, oil quality, oil contamination and loosening of connections
 - 6) Result of consideration if any problem exists based on the operation rate per month calculated from hour meter indication after the last inspection date.
- (5) Arrangement and cleaning in service shop
 - 1) Tools required for repair work.
 - 2) Prepare space to place the disassembled parts.
 - 3) Prepare oil containers for draining oil etc.

1.1.2 SAFETY IN DISASSEMBLING AND ASSEMBLING



- (1) Wear appropriate clothes with long sleeves, safety shoes, safety helmet and protective glasses.

- (2) Suspend warning tag "DO NOT OPERATE" from the doorknob or the operating lever, and have a preliminary meeting before starting work.
- (3) Stop the engine before starting inspection and maintenance to prevent the operator being caught in machine.
- (4) Identify the location of a first-aid kit and a fire extinguisher, and also where to make contact in a state of emergency.
- (5) Choose a hard, level and safe place, and place the attachment on the ground securely.
- (6) Use a lifter such as a crane to remove heavy parts (20 kg [45 lbs] or more) from the machine.
- (7) Use proper tools, and replace or repair defective tools.
- (8) Support the machine and attachment with supports or blocks if the work is performed in the lifted condition.

1.1.3 DISASSEMBLING AND ASSEMBLING HYDRAULIC EQUIPMENT



- (1) Removing hydraulic equipment
 - 1) Before disconnecting pipes, release the hydraulic pressure of the system, or open the return side cover and take out the filter.
 - 2) Carefully drain oil of the removed pipes into a containers without spilling on the floor.
 - 3) Apply plugs or caps on the pipe ends to avoid oil spillage and dust intrusion.
 - 4) Clean off the external surface of the equipment before disassembling, and drain hydraulic and gear oil before placing it on the workbench.
- (2) Disassembling hydraulic equipment
 - 1) Do not disassemble, reassemble or modify the hydraulic equipment without the permission of the manufacturer, who is not responsible for the performance and function of the product after modification.
 - 2) When disassembling and reassembling for unavoidable reason, refer the work to qualified personnel who have the specific knowledge or completed the parts service training.
 - 3) Provide matching marks to facilitate reassembling work.
 - 4) Before starting the work, read the manual of disassembling procedure, if it is provided, and decide whether the work can be performed by yourself.

1. OUTLINE

- 5) Use the special jig and tools without fail if they are specified.
 - 6) If it is hard to remove a part according to the procedure, do not try it by force but investigate the cause.
 - 7) Place the removed parts in order and attach tags to facilitate the reassembling.
 - 8) Note the location and quantity of parts commonly applied to multiple locations.
- (3) Inspecting parts
- 1) Ensure that the disassembled parts are free from seizure, interference and uneven contact.
 - 2) Measure and record wear condition of parts and clearance.
 - 3) If the problem is found in a part, repair or replace it with a new one.
- (4) Reassembling hydraulic equipment
- 1) Turn ON the ventilation fan or open windows to maintain good ventilation prior to starting the cleaning of parts.
 - 2) Perform rough and finish cleaning before assembling.
 - 3) Remove washing oil by air and apply clean hydraulic or gear oil for assembling.
 - 4) Always replace the removed O-rings, backup rings and oil seals with new ones by applying grease in advance.
 - 5) Remove dirt and moisture from and perform degreasing on the surface where liquid gasket to be applied.
 - 6) Remove rust preventive agent from the new parts before use.
 - 7) Fit bearings, bushings and oil seals using special jigs.
 - 8) Assemble the parts utilizing matching marks.
 - 9) Ensure all the parts are completely assembled after the work.
- (5) Installing hydraulic equipment
- 1) Ensure hydraulic oil and lubricant are properly supplied.
 - 2) Perform air bleeding when:
 1. Hydraulic oil changed
 2. Parts of suction side piping replaced
 3. Hydraulic pump installed
 4. Slewing motor installed
 5. Travel motor installed
 6. Hydraulic cylinder installed




Operation of the hydraulic equipment without filling hydraulic oil or lubricant or without performing air bleeding will result in damage to the equipment.

- 3) Perform air bleeding of the hydraulic pump and slewing motor after loosening the upper drain plug, starting the engine and keep it in low idle condition.
Complete the air bleeding when seeping of hydraulic oil is recognized, and tightly plug.
- 4) Perform air bleeding of the travel motor and the hydraulic cylinders by running the engine for more than 5 minutes at low speed without load.




Do not allow the hydraulic cylinder to bottom on the stroke end just after the maintenance.

- 5) Perform air bleeding of pilot line by performing a series of digging, slewing and travel.
- 6) Check hydraulic oil level after placing the attachment to the oil check position, and replenish oil if necessary.

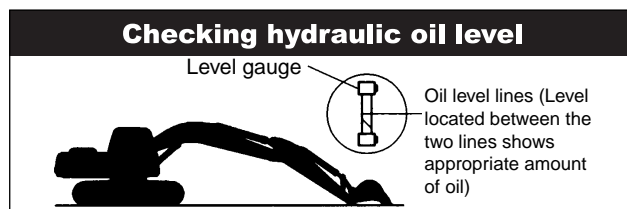

1.1.4 ELECTRICAL EQUIPMENT



- (1) Do not disassemble electrical equipment.
- (2) Handle it carefully not to drop and give a shock.
- (3) Turn the key OFF prior to connecting and disconnecting work.
- (4) Disconnect the connector by holding it and pressing the lock. Do not pull the wire to apply force to the caulking portion.
- (5) Connect the connector and ensure it is completely locked.
- (6) Turn the key OFF prior to touching the terminal of starter or generator.
- (7) Remove the ground (earth) terminal of battery when handling tools around the battery or its relay.

- (8) Do not splash water on the electrical equipment and connectors during machine washing.
- (9) Check for moisture adhesion inside the waterproof connector after pulling it out, since it is hard to remove moisture from the connector.
If moisture adhesion is found, dry it completely before the connection.



Battery electrolyte is hazardous.

Battery electrolyte is dilute sulfuric acid. Exposure of skin or eyes to this liquid will cause burning or loss of eyesight.

If the exposure occurs, take the following emergency measures and seek the advice of a medical specialist.

•When skin exposed:

Wash with water and soap sufficiently.

•When eyes exposed:

Immediately wash away with city water continuously for more than 10 minutes.

•When a large amount of the liquid flows out:

Neutralize with sodium bicarbonate or wash away with city water.

•When swallowed:

Drink a large amount of milk or water.

•When clothes exposed:

Immediately undress and wash.

1.1.5 HYDRAULIC PARTS



(1) O-ring

- Ensure O-rings have elasticity and are not damaged before use.
- Use the appropriate O-rings. O-rings are made of various kinds of materials having different hardness to apply to a variety of parts, such as the part for moving or fixed portion, subjected to high pressure, and exposed to corrosive fluid, even if the size is same.
- Fit the O-rings without distortion and bend.
- Always handle floating seals as a pair.

(2) Flexible hose (F hose)

- Use the appropriate parts. Different parts are used depending on the working pressure even the size of fitting and the total length of the hose is same.

- Tighten the fitting at the specified torque. Ensure no kink, tension, interference nor oil leakage is recognized.

1.1.6 WELDING REPAIR

- (1) Refer repair welding to qualified personnel according to the appropriate procedure.
- (2) Disconnect the ground (earth) cable of the battery before starting the repair.
Failure to do so will cause damage to the electrical equipment.
- (3) Move away the articles in advance that may cause fire if exposed to sparks.
- (4) Before starting the repair of the attachment, do not fail to cover the plated surface of the piston rod with flameproof sheet to prevent it from being exposed to sparks.

1.1.7 ENVIRONMENTAL MEASURE

- (1) Run the engine at the place that is sufficiently ventilated.
- (2) Industrial waste disposal
Dispose of the following parts according to the relevant regulations:
Waste oil and waste container
Battery
- (3) Precautions for handling hydraulic oil
Exposure of eyes to hydraulic oil will cause inflammation. Wear protective glasses before handling to avoid an accident. If an eye is exposed to the oil, take the following emergency measures:
 - When an eye exposed:
Immediately wash away with city water sufficiently till stimulative feeling vanishes.
 - When swallowed:
Do not let vomit, and receive medical treatment immediately.
 - When skin exposed:
Wash with water and soap sufficiently.
- (4) Others
Use replacement parts and lubricants authorized as the manufacturer's genuine parts.

1. OUTLINE

1.2 INTERNATIONAL UNIT CONVERSION SYSTEM (Based on MARKS' STANDARD HANDBOOK FOR MECHANICAL ENGINEERS)

Introduction


Although this manual includes International System of Unit and Foot-Pound System of Units, if you need SI unit, refer to the following international system of units. Given hereinafter is an excerpt of the units that are related to this manual.

1. Etymology of SI Unites

French : Le Systeme International d' Unites

English : International System of Units

2. Construction of SI Unit System

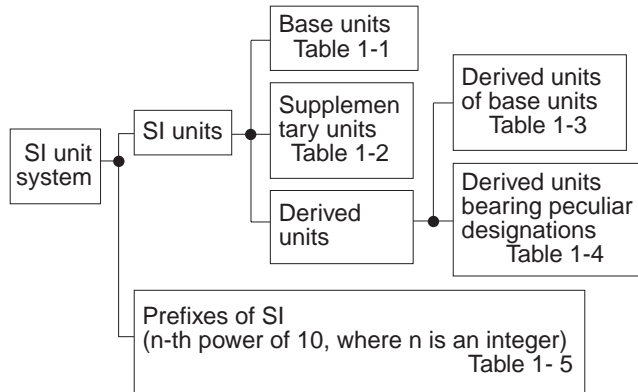

(1) Base units

Table 1-1

QUANTITY	UNIT	SYMBOL
Length	meter	m
Mass	kilogram	kg
Time	second	s
Electric current	ampere	A
Thermodynamic temperature	kelvin	K
Amount of substance	mol	mol
Luminous intensity	candela	cd

(2) Supplementary units

Table 1-2

QUANTITY	UNIT	SYMBOL
Plane angle	radian	rad
Solid angle	steradian	sr

(3) Derived Units

Table 1-3

QUANTITY	UNIT	SYMBOL
Area	square meter	m ²
Volume	cubic meter	m ³
Velocity	meter per second	m/s
Acceleration	meter per second squared	m/s ²
Density	kilogram per cubic meter	kg/m ³

(4) Derived Units bearing Peculiar Designations

Table 1-4

QUANTITY	UNIT	SYMBOL	FORMULA
Frequency	hertz	Hz	1/s
Force	newton	N	kg • m/s ²
Pressure and Stress	pascal	Pa	N/m ²
Energy, Work and Quantity of heat	joule	J	N•m
Power	watt	W	J/s
Quantity of electricity	coulomb	C	A•s
Electric potential difference, Voltage, and Electromotive force	volt	V	W/A
Quantity of static electricity and Electric capacitance	farad	F	C/V
Electric resistance	ohm	Ω	V/A
Celcius temperature	celcius degree or degree	°C	(t+273.15)K
Illuminance	lux	lx	l m/m ²

(5) Prefixes of SI

Table 1-5

PREFIX	SYMBOL	MULTIPLICATION FACTORS
giga	G	10^9
mega	M	10^6
kilo	k	10^3
hecto	h	10^2
deca	da	10
deci	d	10^{-1}
centi	c	10^{-2}
milli	m	10^{-3}
micro	μ	10^{-6}
nano	n	10^{-9}
pico	p	10^{-12}

(6) Unit Conversion

Table 1-6

QUANTITY	Gravitational	SI	CONVERSION FACTOR
Mass	kg	kg	
Force	kgf	N	1 kgf=9.807 N
Torque	kgf•m	N•m	kgf•m=9.807 N•m
Pressure	kgf/cm ²	MPa	1 kgf/cm ² =0.09807 MPa
Motive Power	PS	kW	1 PS=0.7355 kW
Revolution	rpm	min ⁻¹	r/min *1

*1 Units that are allowed to use.

[MEMO]

2. SPECIFICATIONS


TABLE OF CONTENTS

2.1	COMPONENTS NAME	2-3
2.2	MACHINE DIMENSIONS.....	2-4
2.3	SPECIFICATIONS AND PERFORMANCE	2-5
2.4	MACHINE & COMPONENTS WEIGHT (DRY).....	2-6
2.5	TRANSPORTATION.....	2-7
2.6	TYPE OF CRAWLER SHOES	2-9
2.7	TYPE OF BUCKET	2-9
2.8	ENGINE SPECIFICATIONS	2-10
2.8.1	SPECIFICATIONS.....	2-10
2.8.2	ENGINE PERFORMANCE CURVE	2-11

2. SPECIFICATIONS

Issue	Date of Issue	Applicable Machines	Remarks
First edition	September, 2008	SK50SR-5 : PJ06-08890~	S5PJ0228E01 (NA) K

2.1 COMPONENTS NAME

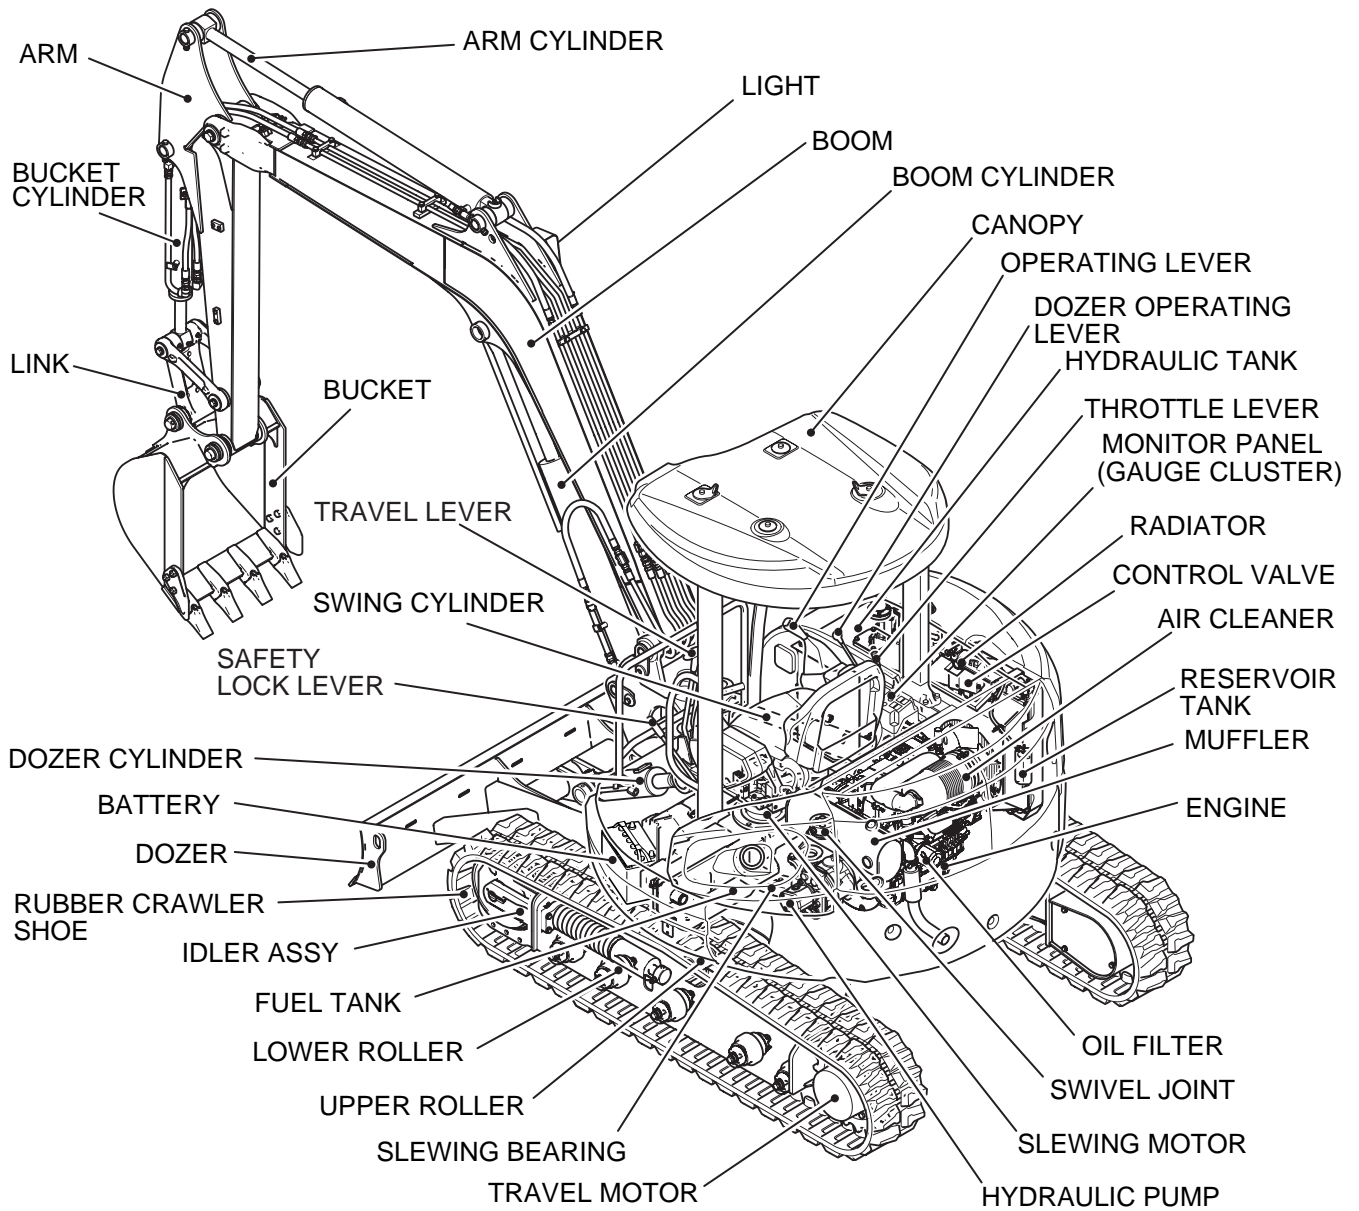


2. SPECIFICATIONS


2.2 MACHINE DIMENSIONS

Unit: mm (ft•in)

(1) SK50SR-5 (CANOPY)

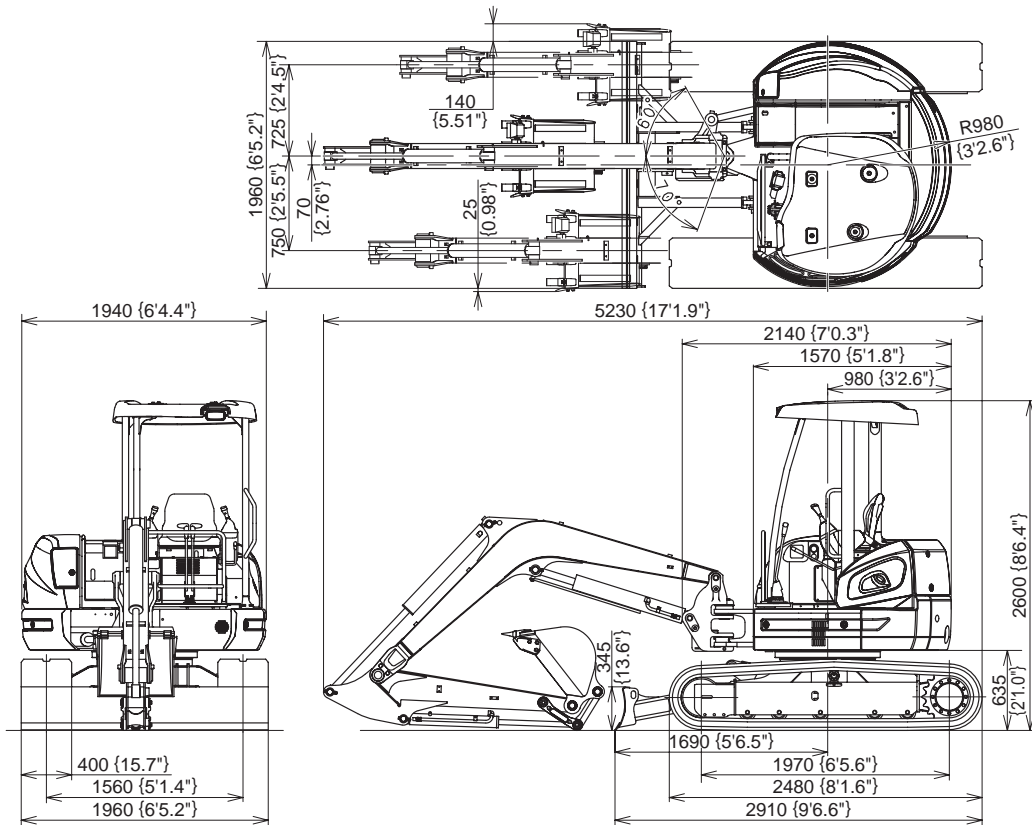

(2) SK50SR-5 (CAB)

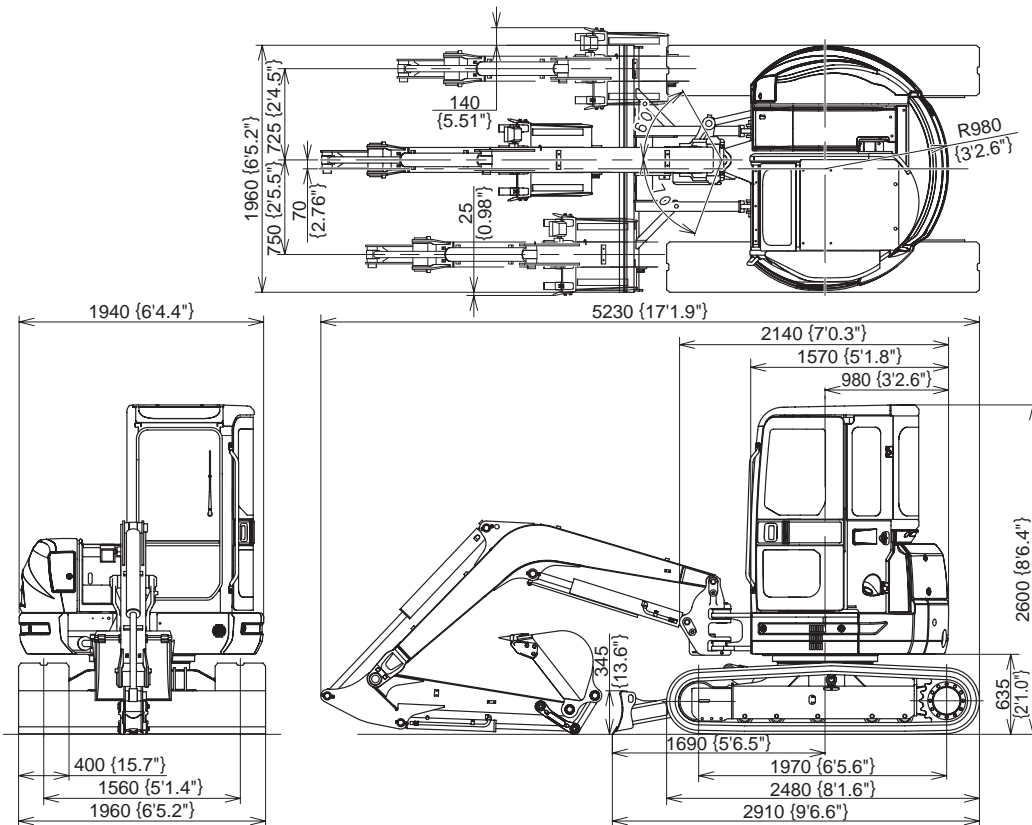

2.3 SPECIFICATIONS AND PERFORMANCE

SPEED AND GRADEABILITY

Model	SK50SR-5				
Applicable Machines	PJ06-08890~				
Shoe Type	Rubber shoe		Iron shoe (OPT)		
Slewing Speed	min ⁻¹ {rpm}	8.8 {8.8}			
Travel Speed	km/h (mph)	Low (1st)	High (2nd)	Low (1st)	High (2nd)
		2.8	4.6	2.8	4.6
Gradeability	% (degree)	58(30)			

ENGINE

Model (YANMAR)	4TNV88-BXYB (EDM-4TNV88)			
Type	Water-cooled, 4-cycle type Swirl chamber type diesel engine			
Number of cylinders-Bore × Stroke	4 - ø88 mm × 90 mm (3.46 in × 3.54 in)			
Total Displacement	L	2.189 (134 cu•in)		
Output Rating	kW/min ⁻¹ {PS/rpm}	29.3/2,400 {40/2,400}		
Maximum Torque	N•m/min ⁻¹ (lb•ft/rpm)	131/1,440 (97/1,440)		
Starting Motor	V × kW	12 × 2.3		
Generator	V × A	12 × 55		

HYDRAULIC COMPONENTS

Hydraulic Pump	Variable displacement axial piston + gear pump			
Hydraulic Motor	Axial piston			
Hydraulic Motor w/Reducer (Travel)	2-Axial piston, 2-Speed motor			
Control Valve	11-spool multiple control valve			
Cylinder (Boom, Arm, Swing, Bucket, Dozer)	Double action cylinder			
Return Filter	Safety valve containing/Filter Type (30μ)			

SIDE DIGGING & DOZER

Type	Boom swing by hydraulic cylinder			
Boom Swing Angle	Right	60°		
	Left	70°		
Stroke of Dozer (above/below)	mm (in)	495 / 375 (19.5/14.8)		

WEIGHT

Machine Weight	kg (lb)	Rubber shoe	Iron shoe
		4,630 (10,200)	4,730 (10,400)
Upper slewing body	kg (lb)	2,280 (5,030)	←
Travel system	kg (lb)	1,720 (3,790)	1,820 (4,010)
Attachment (Boom+STD Arm+STD Bucket)	kg (lb)	535 (1,180)	
Oil & Water	kg (lb)	95 (209)	

Note : This figure is calculated with Japanese standard bucket.

2. SPECIFICATIONS

2.4 MACHINE & COMPONENTS WEIGHT (DRY)

Unit ; kg (lb)

MODEL	SK50SR-5			
	RUBBER SHOE		IRON SHOE	
	CANOPY	CAB	CANOPY	CAB
COMPLETE MACHINE	4,630 (10,200)	4,770 (10,500)	4,730 (10,400)	4,870 (10,700)
UPPER FRAME ASSEMBLY (ASSY OF FOLLOWINGS)	2,280 (5,030)	2,420 (5,340)	2,280 (5,030)	2,420 (5,340)
UPPER FRAME	544 (1,200)	←	←	←
CANOPY / CAB	85 (187)	220 (485)	85 (187)	220 (485)
ENGINE	170 (375)	←	←	←
HYDRAULIC PUMP	35 (77)	←	←	←
RADIATOR	5 (11)	←	←	←
HYDRAULIC TANK	37 (82)	←	←	←
FUEL TANK	4 (9)	←	←	←
SWING BRACKET	106 (234)	←	←	←
SWING CYLINDER	39 (86)	←	←	←
SLEWING MOTOR	40 (88)	←	←	←
CONTROL VALVE	35 (77)	←	←	←
COUNTERWEIGHT	580 (1,280)	←	←	←
GUARD • BONNET	145 (320)	←	←	←
BOOM CYLINDER	58 (128)	←	←	←
LOWER FRAME ASSEMBLY (ASSY OF FOLLOWINGS)	1,720 (3,790)	←	1,820 (4,010)	←
LOWER FRAME	545 (1,200)	←	←	←
SLEWING BEARING	76 (168)	←	←	←
TRAVEL MOTOR	65×2 (143×2)	←	←	←
UPPER ROLLER	5×2 (11×2)	←	←	←
LOWER ROLLER	9×10 (20×10)	←	←	←
FRONT IDLER	42×2 (93×2)	←	←	←
IDLER ADJUSTER	30×2 (66×2)	←	←	←
SPROCKET	14×2 (31×2)	←	←	←
RUBBER CRAWLER SHOE	210×2 (463×2)	←	—	—
400mm (15.7") IRON SHOE	—	—	275×2 (606×2)	←
SWIVEL JOINT	22 (49)	←	←	←
DOZER	175 (386)	←	←	←
DOZER CYLINDER	27 (60)	←	←	←
ATTACHMENT ASSEMBLY (ASSY OF FOLLOWINGS)	535 (1,180)	←	←	←
BOOM ASSEMBLY	240 (529)	←	←	←
BOOM	165 (364)	←	←	←
ARM CYLINDER	50 (110)	←	←	←
ARM ASSEMBLY	180 (397)	←	←	←
ARM	115 (256)	←	←	←
BUCKET CYLINDER	27 (60)	←	←	←
BUCKET LINK	13 (29)	←	←	←
IDLER LINK	4×2 (9×2)	←	←	←
BUCKET ASSEMBLY (STD)	112 (247)	←	←	←
FLUIDS (ASSY OF FOLLOWINGS)	95 (210)	←	←	←
HYDRAULIC OIL	45 (99)	←	←	←
FUEL	44 (97)	←	←	←
COOLANT	6 (13)	←	←	←

Note : Bucket weight is shown with Japanese standard bucket weight.

2.5 TRANSPORTATION

(1) LOADING MACHINE ON A TRAILER

- 1) Keep trailer bed clean. Put chocks against truck wheels.
- 2) Use a ramp or loading deck. Ramps must be strong enough, have a low angle, and correct height. Load and unload machine on a level surface.
- 3) Travel machine onto ramps slowly. Center the machine over the trailer.
- 4) Lower all attachment.
- 5) Stop engine. Remove key from switch.



Do not put chains over or against hydraulic lines or hoses.

- 6) Fasten machine to trailer with chains or cables.


During transportation, the bucket or attachments may hit the canopy or the cab. Therefore, set the machine in the transporting position by observing following points:

1. Extend the bucket cylinder fully.
2. Extend the arm cylinder fully.
3. Lower the boom.
4. If machine cannot be transported with arm cylinder fully extended, remove bucket or attachment and extend arm cylinder.

(2) TRANSPORTATION DIMENSION AND WEIGHT OF ATTACHMENT


1) BOOM WITH ARM CYLINDER

Model	SK50SR-5
L × H × W mm (ft•in)	2,910 × 1,040 × 310 (9'6.6") (3'4.9") (12.2")
Weight w/Arm cyl. kg (lb)	240 (529)

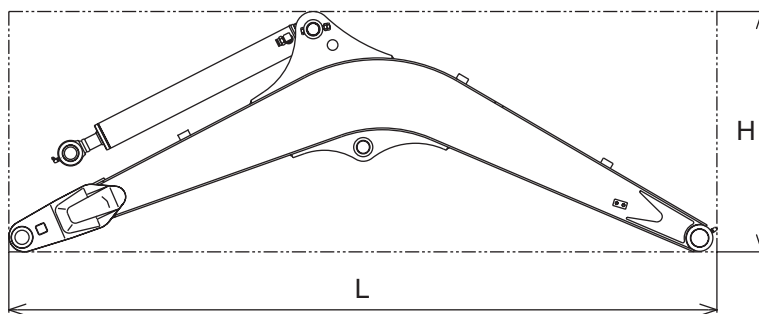

2) ARM & BUCKET (Japanese standard bucket)


Model	SK50SR-5
L × H × W mm (ft•in)	2,770 × 510 × 650 (9'1.1") (20.1") (25.6")
Weight kg (lb)	295 (650)

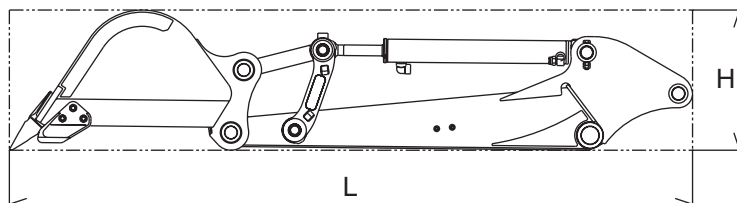

2. SPECIFICATIONS


3) ARM

Model	SK50SR-5
L × H × W mm (ft•in)	2,010 × 420 × 250 (6'7.1") (16.5") (9.84")
Weight kg (lb)	180 (397)

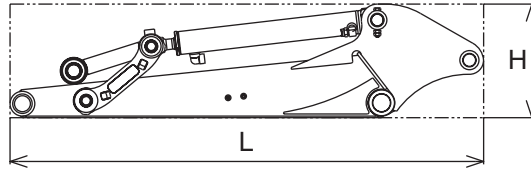


4) BUCKET (Japanese standard bucket)

Model	SK50SR-5
Heaped capacity m ³ (cu•yd)	0.16 (0.21)
L × H × W mm (in)	780 × 690 × 650 (30.7") (27.2") (25.6")
Weight kg (lb)	112 (247)


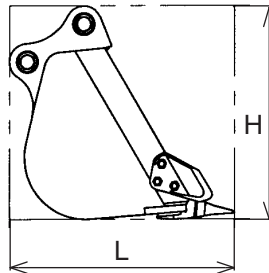


5) DOZER w/o cylinder weight


Model	SK50SR-5
L × H × W mm (in)	1,190 × 320 × 1,960 (3'11") (12.6") (6'5.2")
Weight kg (lb)	175 (386)

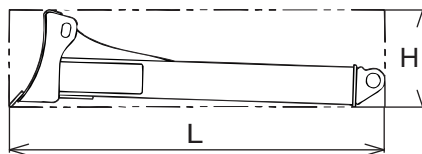

2.6 TYPE OF CRAWLER SHOES

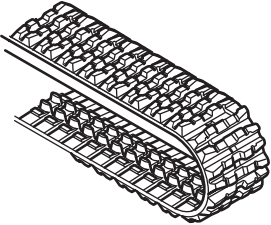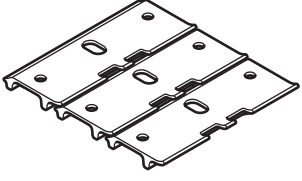Type	Model	Shoe width mm (in)	Total Crawler width mm (ft•in)	Number of Link	Ground pressure kPa (psi)	
					CANOPY	CAB
Rubber shoe 	SK50SR-5	400 (15.7")	1,970 (6'5")	72	26 (3.77)	27 (3.92)
Iron shoe (option) 	SK50SR-5	400 (15.7")	1,970 (6'5")	38	26 (3.77)	27 (3.92)

2.7 TYPE OF BUCKET

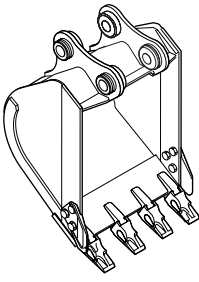Type	Model	Heaped capacity m ³ (cu.yd)	Outer width mm (in)		Number of tooth	Weight kg (lb)	Remarks
			with side cutter	without side cutter			
Back hoe bucket 	SK50SR-5	0.16 (0.21)	650 (25.3")	600 (23.6")	4	112 (247)	Standard size

Note : this table shows Japanese standard bucket.

2. SPECIFICATIONS

2.8 ENGINE SPECIFICATIONS

2.8.1 SPECIFICATIONS


Model	SK50SR-5		
Engine Model (YANMAR)	4TNV88-BXYB (EDM-4TNV88)		
Type	Vertical, 4-cycle water-cooled diesel engine		
No. of cylinders - Bore × Stroke	4 - 88 mm (3.46 in) × 90 mm (3.54 in)		
Total displacement	2.189 liter (134 cu•in)		
Compression ratio	19.1		
Rated output	29.3 kW (40 PS) at 2400 rpm		
Maximum torque	131 ~ 147.1 N•m (97 ~ 109lbf•ft) at 1440 rpm		
Low idling	1175±25 rpm		
High idling	2600±25 rpm		
Fuel consumption rate	Less than 242 g / kWh (178 g / PS•h)		
Allowable tilting angles	Continuous ; 30° for all direction		
Rotating direction	Counterclockwise as seen from flywheel side		
Firing order	1-3-4-2-1		
Fuel injection timing (b.T.D.C.)	15.5±1°		
Fuel injection pressure	19.6 ⁺¹ ₀ MPa (2840 ⁺¹⁴⁵ ₀ psi)		
Valve action		Open	Close
	Intake valve	b.T.D.C. 15±5°	a.B.D.C. 45±5°
	Exhaust valve	b.T.D.C. 56±5°	a.B.D.C. 18±5°
Valve clearance	Intake valve	0.2 mm (0.008 in) in cold condition	
	Exhaust valve	0.2 mm (0.008 in) in cold condition	
Thermostat action	Start 71 ± 1.5°C (160 ± 3°F) / Full open 85°C (185°F)		
Compression pressure	3.4 ± 0.1 MPa (500 ± 14 psi) at 250 rpm		
Lubrication oil pressure	0.44 MPa (64 psi) at 2300 rpm		
Dimensions L × W × H	659 × 523 × 617 mm (26.0 × 20.6 × 24.3 in)		
Dry weight	170 kg (375 lb)		
Governor	Mechanical centrifugal governor (All speed type)		
Fuel filtration	cartridge type paper filter		
Lubrication system	Forced lubrication with trochoid pump		
Cooling system	Liquid cooling / Radiator		
Starter capacity	12 V × 2.3kW		
Generator capacity	12 V × 55 A		
Starting aid	Glow plug		
Cooling water capacity : Max / Engine	6.0 / 2.7 liter (1.59 / 0.71 gal)		
Engine oil volume : Max / Effective	7.4 / 4.0 liter (1.96 / 1.06 gal)		

2.8.2 ENGINE PERFORMANCE CURVE

SK50SR-5

Model : 4TNV88-BXYB

Rated Output : 29.3 kW / 2400 min⁻¹ (40 PS / 2,400 rpm)

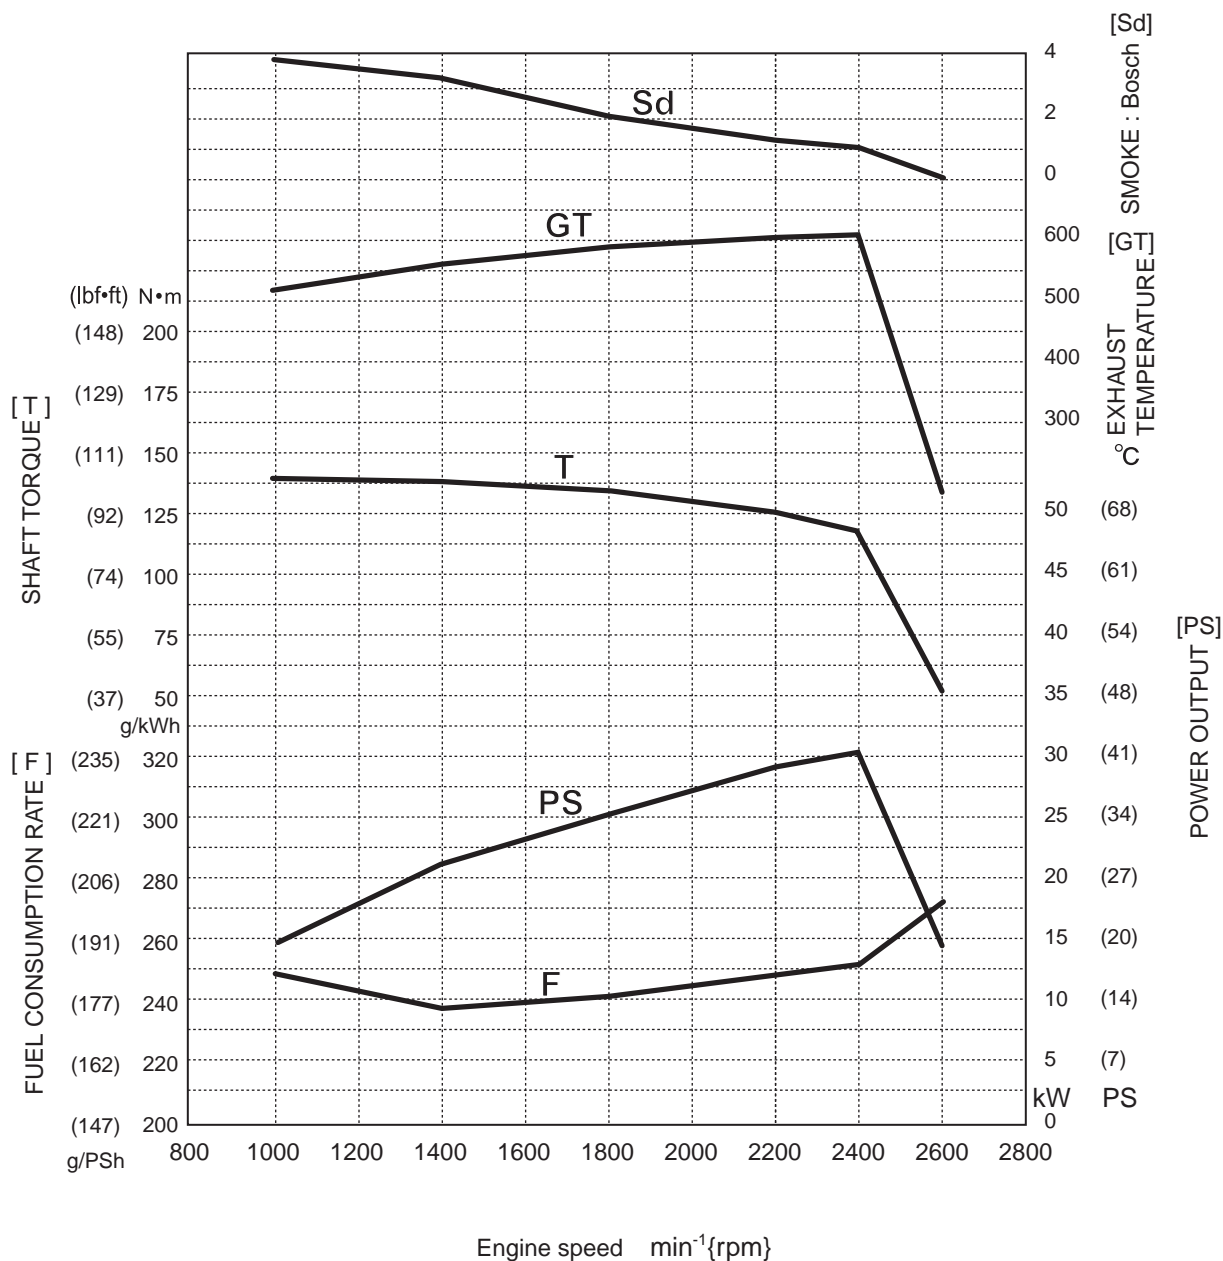

$$\begin{aligned}
 \text{Fuel consumption volume} &= \frac{F}{\rho \times 1000} \times P \times \alpha \\
 &= \frac{242}{0.835 \times 1000} \times 30.4 \times \alpha \\
 &= 8.81 \alpha
 \end{aligned}$$

F : Fuel consumption rate (g / kWh)
 P : Shaft output (kW)
 ρ : Specific gravity
 α : Standard load factor (0.60 ~ 0.70)
 Fuel consumption in normal operation ;
 5.29 ~ 6.17 L / h (load factor : (0.60 ~ 0.70))

[MEMO]

3. ATTACHMENT DIMENSIONS

TABLE OF CONTENTS

3.1	BOOM	3-3
3.1.1	BOOM DIMENSIONAL DRAWINGS	3-3
3.1.2	BOOM MAINTENANCE STANDARDS	3-4
3.2	ARM	3-8
3.2.1	ARM DIMENSIONAL DRAWINGS	3-8
3.2.2	ARM MAINTENANCE STANDARDS	3-10
3.3	BUCKET	3-14
3.3.1	BUCKET DIMENSIONAL DRAWINGS.....	3-14
3.3.2	DETAIL DIMENSIONAL DRAWINGS OF LUG SECTION	3-15
3.3.3	DETAIL DIMENSIONAL DRAWINGS OF BOSS SECTION.....	3-15
3.4	DOZER	3-17
3.4.1	DOZER DIMENSIONAL DRAWINGS.....	3-17
3.4.2	DOZER MAINTENANCE STANDARDS.....	3-18
3.5	SWING.....	3-20
3.5.1	SWING BRACKET DIMENSIONAL DRAWINGS	3-20
3.5.2	SWING PORTION MAINTENANCE STANDARDS.....	3-21

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com