


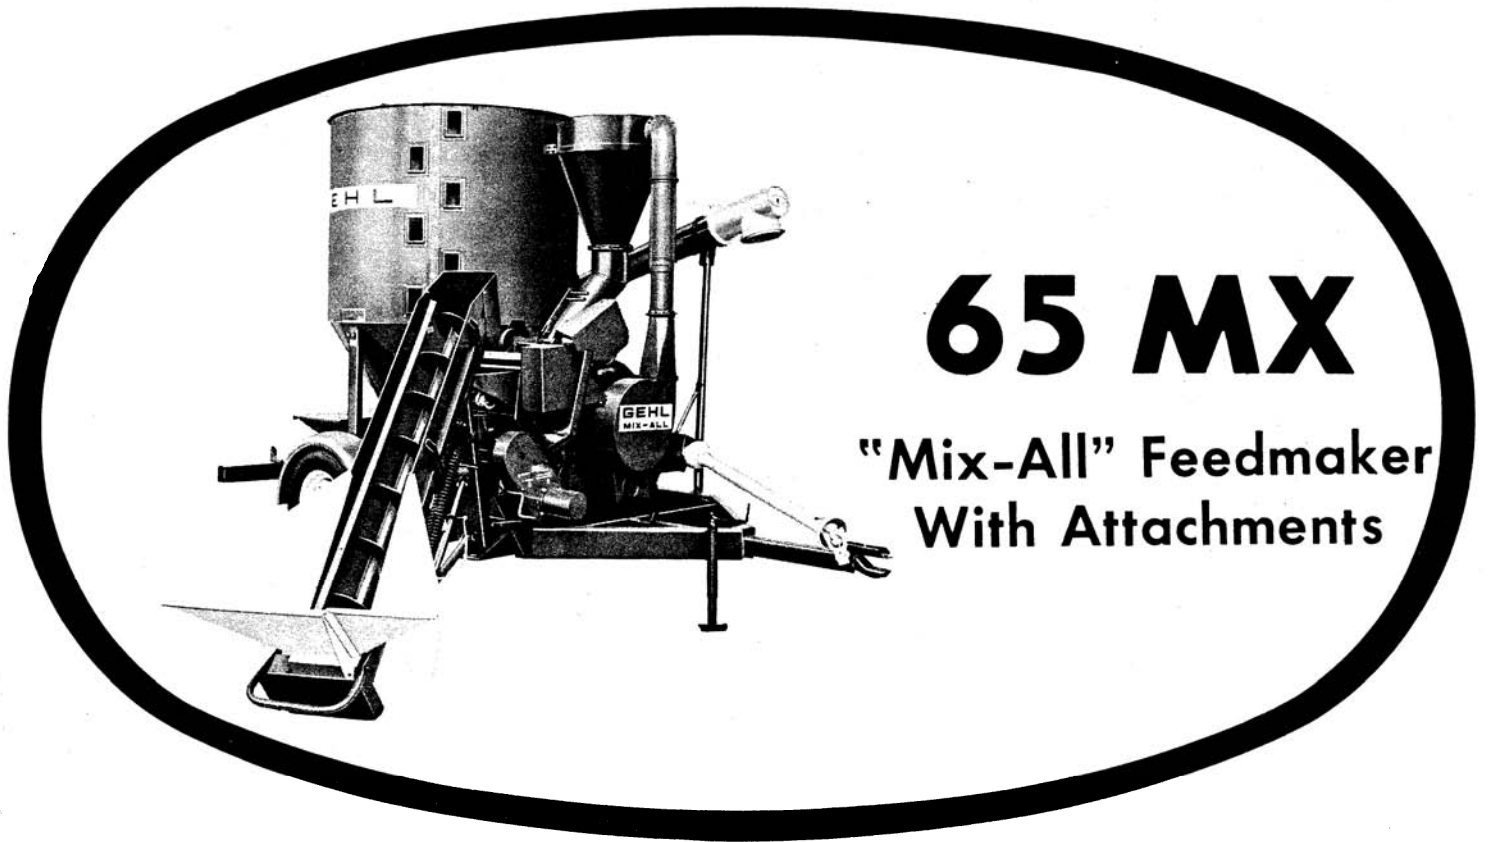

service parts manual

Form #903517



GEHL COMPANY

WEST BEND, WISCONSIN 53095 U.S.A.



NUMBER 120
DATE Nov. 14, 1969
MACHINE 65MX
MANUAL NO. 2132G

service parts bulletin

SUBJECT: "Write-In" corrections for 65MX Service Parts Manual

REVISION	PAGE	REF. NO.	PART NO.	PART NAME	NO. REQ.
Change	14	18		(Next to reference number 15) <u>To Read 12</u>	
Change	26	42		042259 To Read <u>044259</u>	
Change	28	5		9H186 To Read <u>9H186A</u>	

Mr. Dealer:

Give complete information when ordering service parts. Always give complete part number and also complete part description. The model number and serial number should always be given. Numbers for the Mixer are stamped on a plate located where the Drawbar Hitch joins the Frame. Hammer Mill numbers are located on the Rear Frame Sheet. Crusher numbers are located on the Roller Cover. Swinging Auger Feeder numbers are located on the right side of the Pivot Frame and Traveling Feeder numbers are located on the left Hopper side.

"Right" and "Left" are determined when standing at the front (Drawbar end) of the Mixer. The Mill Feeder is on the Left side and the Mixer Unloading Conveyor on the Right side.

Note: You will find common hardware such as nuts, bolts, etc. listed but not illustrated in parts lists in this manual. Hardware listed with the particular parts is for mounting purposes and is not included when the part is ordered for replacement.

Gehl Company reserves the right to make changes or improvements in the design or construction of any part without incurring the obligation to install such changes on any unit previously delivered.

TABLE OF CONTENTS

Introduction 3
Frame 4-5
Tank and Hopper 6-8
Transmission 9-10
Mixer Drive 11-12
Unloading Conveyor 13
Conveyor Drive 14-16
Mill Drive (Used after Serial #82828) 17-18
Mill Drive (Used before Serial #82829) 19
Mill Frame 20-21
Mill Conveyor and Blower 22-23
Mill Cylinder 24
Feeder Drive 25-27
Feeder Trough (Used after Serial #15000) 28-29
Feeder Trough (Used before Serial #15001) 30-31
Crusher 32-33
Fiberglass Tank 34-35
Support and Drive 36-37
Discharge Pipe 38
Molasses Pump 39
#200 DFA Traveling Feeder 40-42
#200 DF Traveling Feeder 43
Hopper 44
Mixer Direct Drive 45
Roller Mill Mounting (600) 46
Roller Mill Mounting (F20S6) 47
Universal Drives 48-50
Accessories 51
Numerical Index 52-56



SAFETY FIRST
KEEP ALL SHIELDS IN PLACE.
STOP MACHINE TO ADJUST AND OIL.
WHEN MECHANISM BECOMES CLOGGED, DIS-ENGAGE POWER BEFORE CLEANING.
KEEP HANDS, FEET AND CLOTHING AWAY FROM POWER-DRIVEN PARTS.
KEEP OFF IMPLEMENT UNLESS SEAT OR PLATFORM IS PROVIDED.
KEEP OTHERS OFF.

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com