Service Manual



JCB 8250 Fastrac

Section 1 - General Information

Section 2 - Care and Safety

Section 3 - Maintenance

Section A - Optional Equipment

Section B - Body and Framework

Section C - Electrics

Section D - Controls

Section E - Hydraulics

Section F - Transmission

Section G - Brakes

Section H - Steering

Section S - Suspension

Section T - Engine



Publication No. **9803/8040-6**



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

World Class Customer Support

Section 1



General Information

Section 1 - General Information

Section 2 - Care and Safety

Section 3 - Maintenance

Section A - Optional Equipment

Section B - Body and Framework

Section C - Electrics

Section D - Controls

Section E - Hydraulics

Section F - Transmission

Section G - Brakes

Section H - Steering

Section S - Suspension

Section T - Engine



Publication No. **9803/8040-2**



World Class Customer Support

Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.





Section 1 - General Information

| Contents | Page No. |
|--|----------|
| Identifying the Machine | |
| Serial Numbers | 1 - 1 |
| Serial Number Plate | 1 - 1 |
| Standard Torque Settings | |
| Zinc Plated Fasteners and Dacromet Fasteners | 1 - 3 |
| Introduction | |
| Zinc Plated Fasteners (golden finish) | 1 - 4 |
| Dacromet Fasteners (mottled silver finish) | 1 - 5 |
| Hydraulic Connections | 1 - 6 |
| 'O' Ring Face Seal System | |
| 'Torque Stop' Hose System | |
| Service Consumables | |
| Sealing and Retaining Compounds | 1 - 10 |

1-i 1-i



Section 1 - General Information

Contents Page No.

1-ii 1-ii



Serial Numbers

Identifying the Machine

Serial Numbers

Serial Number Plate

Each machine has a serial number plate located at **X**. The 17 digit Vehicle Identification Number (VIN), and the serial numbers of the engine and transmission are stamped on the plate.


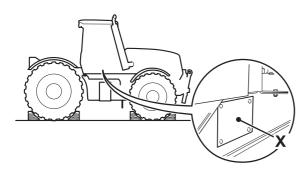


Fig 1.

Typical Vehicle Identification No. (VIN)

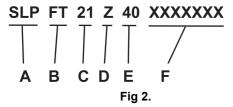

- A Manufacturing code
- B Machine range

FT = Fastrac

- C Engine type
- D Transmission type (gearbox & axle combination)
- E Vehicle max. speed

40 = 40 kph

50 = 50 kph


65 = 65 kph

F Serial number

Unit Identification

The serial number of each major unit is also stamped on the unit itself as shown below. If a major unit is replaced by a new one, the serial number on the plate will be wrong. Either stamp the new number of the unit on the identification plate, or simply stamp out the old number. This will prevent the wrong unit number being quoted when replacement parts are ordered.

| Engine | M |
|------------|---|
| Gearbox | N |
| Front axle | Р |
| Rear axle | R |

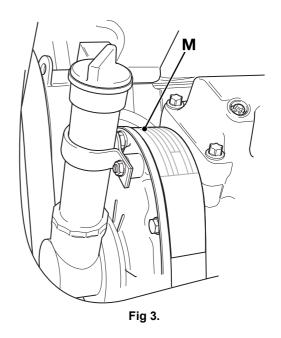



Serial Numbers



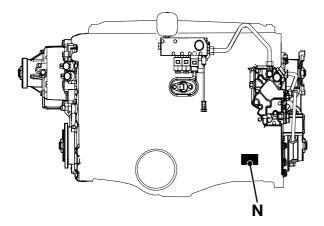


Fig 4.

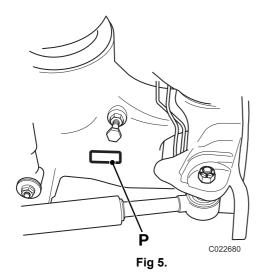

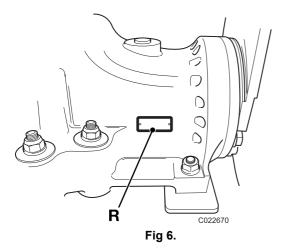

Please Click Here To Download The Complete Manual Download Other Manuals If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com